K KASONIC AF57

K KASONIC AF57 Rechargeable LED Flashlight with Zoom, 3 Modes User Manual

Model: AF57

Introduction

Thank you for choosing the K KASONIC AF57 Rechargeable LED Flashlight. This manual provides essential information for the safe and efficient use of your flashlight. Please read it thoroughly before operation and retain it for future reference.

Safety Information

- Do not look directly into the LED light beam to avoid eye injury.
- Keep out of reach of children.
- Do not disassemble the flashlight; this may void the warranty and cause damage.
- Use only the provided or a certified Type-C cable for charging.
- Avoid exposing the flashlight to extreme temperatures or direct sunlight for prolonged periods.
- Although IPX4 water-resistant, do not submerge the flashlight in water.

Package Contents

- 1 x K KASONIC AF57 Rechargeable LED Flashlight
- 1 x USB Charging Cable

Product Overview

The K KASONIC AF57 is a versatile and durable rechargeable LED flashlight designed for various outdoor and emergency situations. It features a powerful 10W LED, three lighting modes, telescopic zoom, and an integrated power bank function.



Image: Overview of the K KASONIC AF57 flashlight highlighting its rechargeable battery, 3 light modes, Type-C charging, telescopic zoom, and IPX4 waterproof rating.

Setup

Battery Installation / Activation

Your K KASONIC AF57 flashlight comes with a pre-installed rechargeable battery. Before first use, you may need to remove an insulating tab to activate the battery. Follow these steps:

1. Unscrew the bottom cover of the flashlight by turning it counter-clockwise.
2. Remove the insulating tab from the battery compartment.
3. Ensure the positive (+) terminal of the battery faces inward and the negative (-) terminal faces outward.
4. Screw the bottom cover back on clockwise until secure.

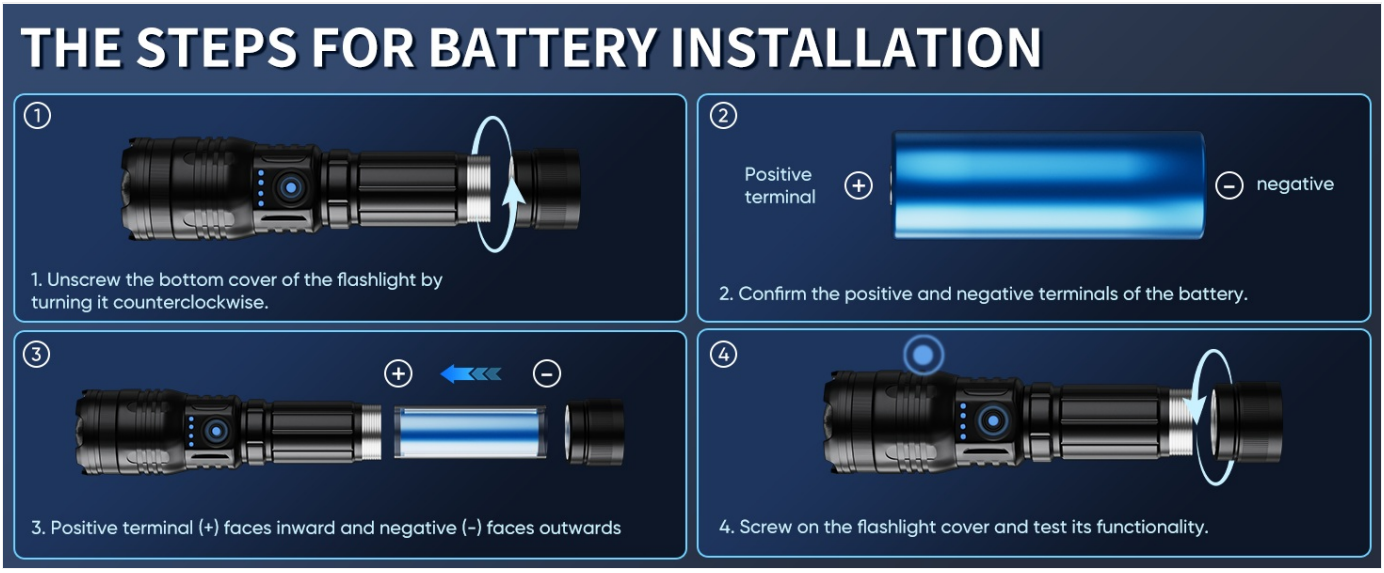


Image: Step-by-step guide for battery installation, showing how to unscrew the tail cap, remove the insulating tab, correctly orient the battery, and re-screw the cap.

Initial Charging

For optimal performance, fully charge the flashlight before its first use. Refer to the "Charging" section for detailed instructions.

Operating Instructions

Power On/Off

Press the power button located on the body of the flashlight to turn it on or off.

Switching Lighting Modes

With the flashlight on, press the power button repeatedly to cycle through the three available lighting modes:

- **High:** Maximum brightness for powerful illumination.
- **Low:** Reduced brightness for extended battery life or close-range tasks.
- **Strobe:** Flashing light for signaling or disorienting.

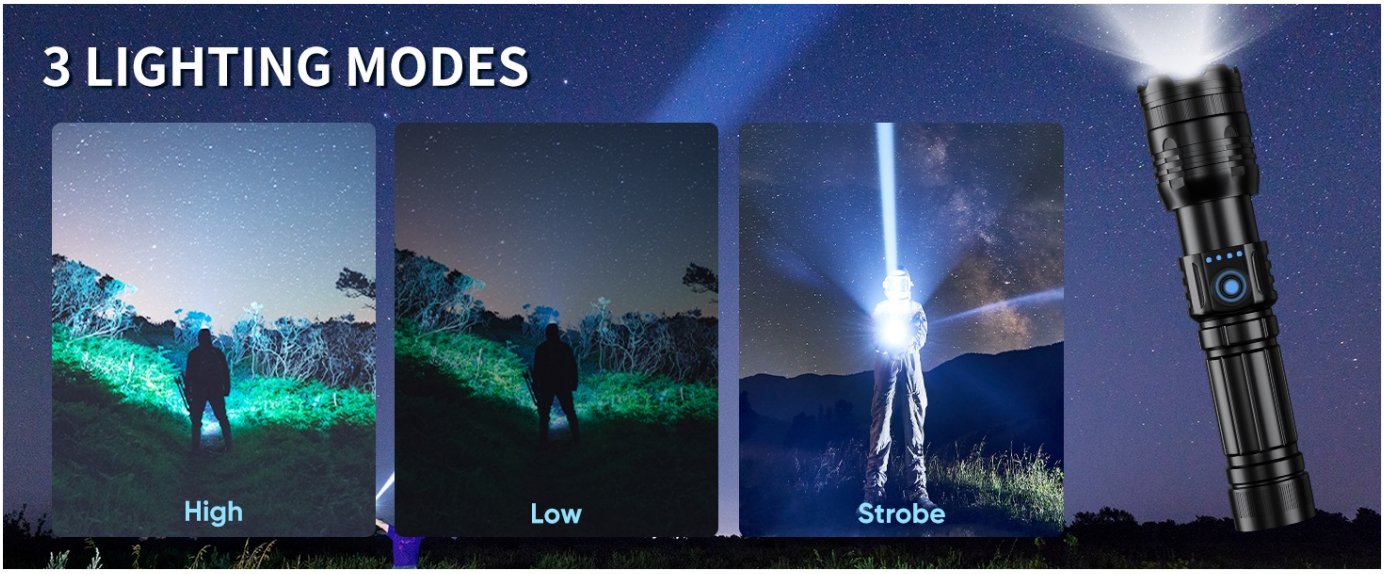


Image: Visual representation of the three lighting modes: High, Low, and Strobe, demonstrating their different light outputs.

Telescopic Zoom Function

Adjust the beam focus by extending or retracting the head of the flashlight. This allows you to switch between a wide floodlight for broad area illumination and a focused spotlight for long-distance viewing.

- **Zoom In (Floodlight):** Pull the head back for a wider beam.
- **Zoom Out (Spotlight):** Push the head forward for a concentrated beam.



Image: Illustration of the telescopic zoom feature, showing the flashlight adjusting between a wide floodlight and a narrow spotlight beam.

Power Bank Function

The flashlight can also function as a power bank to charge other USB-powered devices in emergencies. Connect your device to the flashlight's USB output port using an appropriate cable.

Charging

The K KASONIC AF57 flashlight is equipped with a Type-C charging port for convenient and fast recharging.

1. Locate the Type-C charging port on the flashlight.
2. Connect the provided USB charging cable to the flashlight's Type-C port.
3. Connect the other end of the USB cable to a compatible USB power source (e.g., wall adapter, computer USB port, power bank).
4. The battery level indicator lights will show the charging progress.
5. A full charge typically takes 6-7 hours.

Battery Level Indicator

The flashlight features indicator lights to display the current battery charge level:

- One light: 0-25% charge
- Two lights: 25-50% charge
- Three lights: 50-75% charge
- Four lights: 75-100% charge



Image: The flashlight connected via Type-C for charging, demonstrating its power bank capability and showing the battery level indicators.

Maintenance

- **Cleaning:** Wipe the flashlight with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the flashlight in a cool, dry place away from direct sunlight when not in use for extended periods. Charge the battery every 3-6 months to maintain its lifespan.
- **Water Resistance:** The flashlight is IPX4 water-resistant, meaning it is protected against splashing water from any direction. Do not immerse it in water. Ensure the charging port cover is securely closed to maintain water resistance.



Image: Demonstrates the flashlight's IPX4 water resistance against splashes and its solid, durable construction. Also shows the emergency hammer feature.

Troubleshooting

Problem	Possible Cause	Solution
Flashlight does not turn on.	Battery is depleted. Insulating tab not removed. Battery incorrectly inserted.	Charge the flashlight. Remove the insulating tab (refer to Setup). Ensure battery polarity is correct.
Light is dim or flickers.	Low battery charge. Loose connections.	Recharge the flashlight. Ensure the tail cap is securely tightened.
Flashlight does not charge.	Charging cable faulty. Power source faulty. Charging port obstructed.	Try a different USB Type-C cable. Try a different USB power source. Check the charging port for debris.
Power bank function not working.	Flashlight battery too low. Device cable faulty.	Ensure flashlight has sufficient charge. Try a different charging cable for your device.

Specifications

Model	AF57 (MT-AF57)
Brand	K KASONIC
Light Source Type	LED (10W)
Max Light Output	1000 Lumens
Beam Range	Up to 70 meters
Lighting Modes	High, Low, Strobe (3 modes)
Power Source	Rechargeable (Type-C)
Battery Type	Lithium-ion

Charging Time	Approx. 6-7 hours
Runtime	Up to 10 hours (on low mode)
Material	Aluminum
Water Resistance	IPX4 (Water-resistant)
Special Features	Telescopic Zoom, Integrated USB Power Bank, Emergency Glass Breaker
Color	Black

Warranty and Support

This K KASONIC product comes with a**Limited Warranty**. Please retain your proof of purchase for warranty claims.
Spare parts availability in the EU is guaranteed for**2 years** from the date of purchase.
For support or warranty inquiries, please contact your retailer or the K KASONIC customer service through the platform where you purchased the product.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question