Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

XINFUTE QT1E

XINFUTE QT1E Replacement Remote Control User Manual

For Soniq TV Models: QT155, QT166, QT138, E55V13A, E55V14B, E24Z15B, E23Z13A-AU, E23Z15A-AU, E24Z15B-AU, E32V15B-AU, E32V15D-AU, E32V16B-AU, E32V17A-AU, E32V17B-AU, E32W13A-AU, E32W13B-AU, E32W13D-AU, E40V14A-AU, E40V14B-AU, E40V16A-AU, E40W13A-AU, E40W13C-AU, E42V14A-AU, E43V15B-AU, E43V15C-AU

1. Setup

1.1 Battery Installation

The XINFUTE QT1E remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

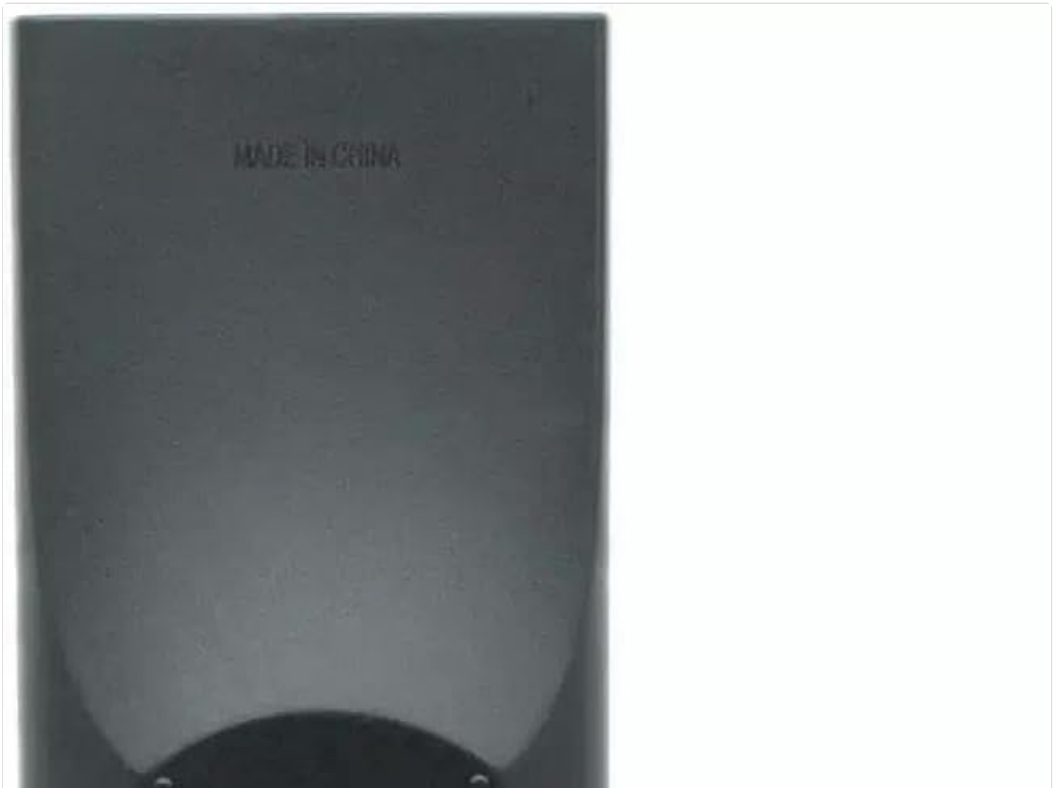




Image: Rear view of the XINFUTE QT1E remote control with the battery cover removed, illustrating the correct placement for two AAA batteries.

After installing the batteries, the remote control is ready for use with compatible Soniq TV models. No additional programming is typically required for this replacement remote.

2. Operating Instructions

This section describes the functions of the buttons on your XINFUTE QT1E replacement remote control. Refer to the image below for button layout.



Image: Front view of the XINFUTE QT1E remote control, displaying the full array of buttons and their respective labels.

POWER (Red Button): Turns the TV on or off.

MUTE (Green Button): Mutes or unmutes the TV audio.

P.MODE: Cycles through picture modes (e.g., Standard, Dynamic, Movie).

S.MODE: Cycles through sound modes (e.g., Standard, Music, Movie).

SUBTITLE: Activates or deactivates subtitles.

I-II/AUDIO: Selects audio language or stereo/mono modes.

INFO: Displays current channel information or program details.

Number Pad (0-9): Directly selects channels or enters numerical values.

SLEEP: Sets a timer for the TV to automatically turn off.

HOME: Accesses the TV's main menu or smart features.

ASPECT: Changes the screen aspect ratio (e.g., 16:9, 4:3).

MENU: Opens the TV's main settings menu.

SOURCE: Selects input sources (e.g., HDMI 1, AV, USB).

Navigation Buttons (Up, Down, Left, Right): Navigates through menus and options.

OK (Center Button): Confirms selections in menus.

EXIT: Exits the current menu or function.

EPG: Opens the Electronic Program Guide.

VOL +/-: Increases or decreases the volume level.

CH +/-: Changes the channel up or down.

SETUP: Accesses specific setup options.

REC: Initiates recording (if supported by TV and connected device).

TSR: Time Shift Recording function.

TEXT: Activates or deactivates Teletext.

TITLE/PBC: Accesses title menu or Playback Control.

PVR.L: PVR List access.

CANCEL: Cancels current action.

REVEAL: Reveals hidden teletext information.

HOLD: Holds teletext page.

INDEX: Accesses teletext index.

TXT.SIZE: Changes teletext display size.

Media Control Buttons (Play, Pause, Stop, Fast Forward, Rewind, Next, Previous): Controls playback of media content.

Colored Buttons (Red, Green, Yellow, Blue): Functions vary depending on the TV menu or application.

3. Maintenance

3.1 Cleaning the Remote Control

To ensure optimal performance and longevity of your remote control, follow these cleaning guidelines:

- Always remove batteries before cleaning.
- Use a soft, dry cloth to wipe the surface of the remote control.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, abrasive cleaners, or solvents, as these can damage the remote's finish or internal components.
- Ensure the remote is completely dry before reinserting batteries.

3.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Refer to Section 1.1 for battery installation instructions. Always replace both batteries at the same time with new AAA batteries of the same type.

3.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

4. Troubleshooting

If you encounter issues with your XINFUTE QT1E remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
  - Check if the batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new AAA batteries.
  - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
  - Point the remote directly at the TV's sensor.
- **Specific Buttons Not Working:**
  - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be interfering with button presses.
  - Test other buttons to determine if the issue is isolated to a few buttons or the entire remote.
- **Short Operating Range:**
  - Replace batteries with fresh ones.
  - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the TV's IR sensor.

If these steps do not resolve the issue, please refer to the Warranty and Support section for further assistance.

5. Specifications

- **Model:** QT1E
- **Brand:** XINFUTE
- **Compatible Devices:** Soniq Televisions (various models)
- **Power Source:** 2 x AAA Batteries (not included)
- **Dimensions:** 6 x 3 x 1 inches (approximately)
- **Item Weight:** 2.82 ounces (without batteries)
- **Material:** ABS Material
- **Special Feature:** Ergonomic design

6. Warranty and Support

6.1 Warranty Information

This XINFUTE remote control comes with a one-year warranty from the date of purchase. This warranty covers manufacturing defects under normal use.

6.2 Customer Support

If you have any questions, require assistance, or are not satisfied with your purchase, please contact the seller within 24 hours of receipt. All products are inspected before shipment to ensure quality.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F1926JR1

More documents and user manuals: **https://manuals.plus/**