Dyson V15

Dyson V15 Detect Absolute Gold Cordless Stick Vacuum User Manual

Model: V15

Introduction

The Dyson V15 Detect Absolute Gold is a powerful and intelligent cordless stick vacuum engineered for comprehensive whole-home deep cleaning. It features advanced technology to reveal invisible dust and optimize cleaning performance across various floor types. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your Dyson V15 Detect Absolute.



Figure 1: Dyson V15 Detect Absolute Gold in operation, highlighting the illumination feature.

Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. Read all instructions before using this appliance.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only Dyson recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bin and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

Components

Your Dyson V15 Detect Absolute comes with several key components and accessories designed for versatile cleaning.

- **Main Body:** Contains the motor, dust bin, and battery.
- **Wand:** The long extension tube connecting the main body to the cleaner head.
- **Fluffy Optic Cleaner Head:** Designed for hard floors, featuring a green LED light to reveal hidden dust.
- **Digital Motorbar Cleaner Head:** Suitable for all floor types, with de-tangling technology for hair and pet fur.
- **Docking Station:** For convenient storage and charging.
- **Charger:** Power adapter for charging the battery.
- **Built-in Dusting and Crevice Tool:** Stored inside the wand for quick access to tight spaces.
- **Low Reach Adaptor:** Allows for easy cleaning under furniture.
- **Stubborn Dirt Brush:** For tackling ground-in dirt.
- **Mini Motorized Tool:** Ideal for mattresses, upholstery, and pet hair.
- **Mini Soft Dusting Brush:** For delicate surfaces.
- **Mattress Tool:** Specifically designed for cleaning mattresses.
- **Wand Clip:** To attach additional tools to the wand.



Figure 2: The two primary cleaner heads included with your Dyson V15 Detect Absolute.

Setup

Assembly

1. Unpack all components from the box.
2. Attach the wand to the main body by aligning the connectors and pushing until it clicks into place.
3. Select your desired cleaner head (Fluffy Optic or Digital Motorbar) and attach it to the end of the wand, ensuring it clicks securely.
4. For handheld use, detach the wand and attach a tool directly to the main body.

Charging the Battery

Your Dyson V15 Detect Absolute comes partially charged. A full charge is recommended before first use.

- Connect the charger to the docking station or directly to the charging port on the main body.
- Plug the charger into a wall outlet.
- The LCD screen will display charging status. A full charge takes approximately 4.5 hours.
- For optimal battery life, always fully charge the vacuum after each use.

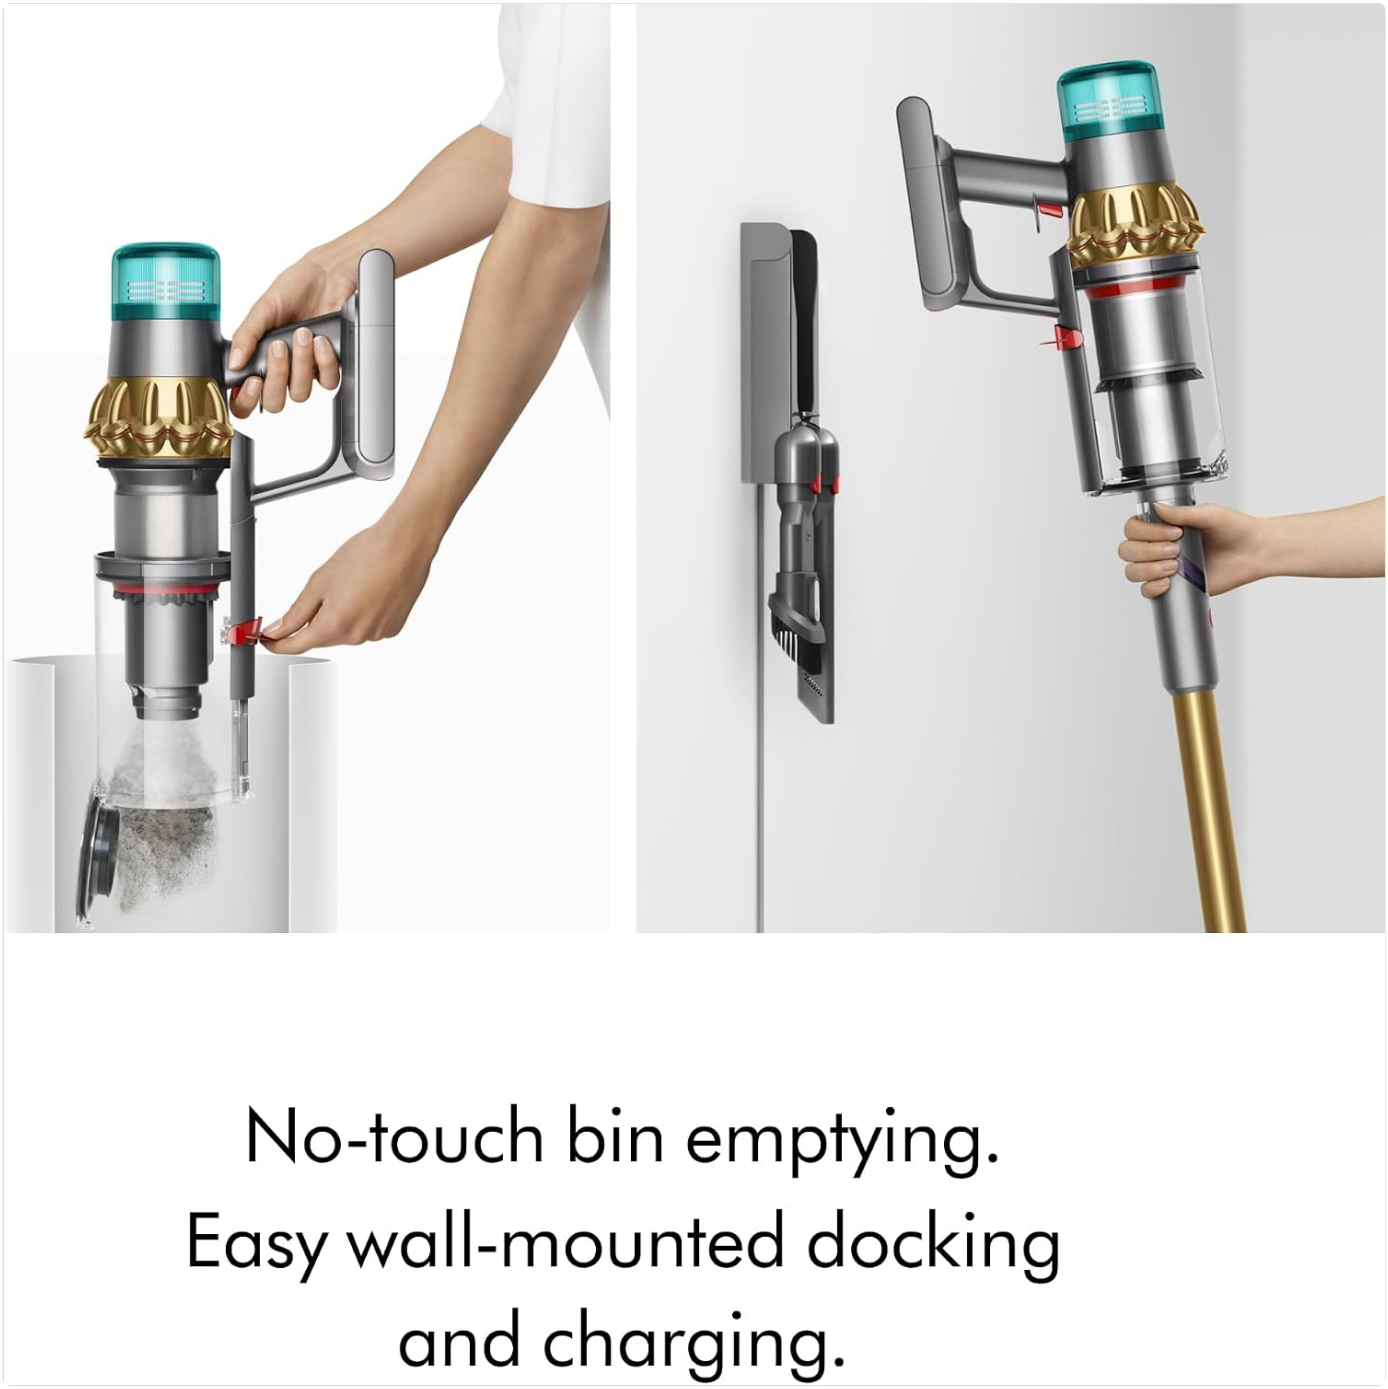


Figure 3: The vacuum's no-touch bin emptying mechanism and wall-mounted docking station for charging and storage.

Operating Instructions

Powering On and Off

To start cleaning, press and hold the power trigger. Release the trigger to turn off the vacuum. The power trigger design helps maximize energy efficiency by only using power when needed.

Understanding the LCD Screen

The integrated LCD screen provides real-time information about your cleaning session.

- **Particle Count:** A piezo sensor intelligently optimizes power and run time based on the debris picked up, reporting it all on the LCD screen. This allows you to see the size and quantity of particles being removed.
- **Run Time:** Displays the remaining battery life to the second.
- **Power Mode:** Indicates the current cleaning mode (Eco, Auto, Boost).
- **Maintenance Alerts:** Notifies you when the filter needs cleaning or if there's a blockage.



Figure 4: The LCD screen provides detailed cleaning data and battery status.

Selecting Power Modes

Press the mode selection button on the top of the main body to cycle through the power modes:

- **Eco Mode:** Provides the longest run time for lighter cleaning tasks.
- **Auto Mode:** Intelligently adapts suction power based on debris detected and floor type, balancing power and run time.
- **Boost Mode:** Delivers maximum suction for intensive spot cleaning or heavily soiled areas.

Using Cleaner Heads

The Dyson V15 Detect Absolute includes two specialized cleaner heads:

- **Fluffy Optic Cleaner Head:** Ideal for hard floors (wood, tile, laminate). The integrated green laser illuminates microscopic dust particles, making them visible for thorough cleaning.



Figure 5: The Fluffy Optic cleaner head revealing invisible dust on hard floors.

- **Digital Motorbar Cleaner Head:** Designed for deep cleaning carpets and hard floors. Its de-tangling technology automatically clears long hair and pet fur from the brush bar as you clean, preventing wraps.



Figure 6: The Digital Motorbar cleaner head effectively cleaning various floor types.

Maintenance

Emptying the Dust Bin

Empty the dust bin as soon as debris reaches the MAX mark. For hygienic emptying, hold the vacuum over a trash can and push the red lever to release the bin contents. The no-touch bin emptying system ensures minimal contact with dust.

Washing the Filter

The filter should be washed at least once a month, or more frequently if used heavily. Refer to the LCD screen for filter maintenance alerts.

1. Twist the filter counter-clockwise from the top of the main body to remove it.
2. Wash the filter under cold running water until the water runs clear.
3. Squeeze and twist the filter to remove excess water.
4. Leave the filter to dry completely for at least 24 hours in a warm, dry place. Do not dry in a tumble dryer, microwave, or near a naked flame.
5. Once completely dry, reassemble the filter onto the main body.

Clearing Blockages

If the vacuum loses suction, check for blockages in the cleaner head, wand, and main body inlet. Turn off the vacuum and disconnect it from the charger before inspecting for blockages.

- Remove the cleaner head and wand to check for obstructions.
- Inspect the air inlet to the dust bin.
- Clear any blockages carefully.

Troubleshooting

Problem	Possible Cause	Solution
Vacuum not turning on.	Battery is not charged.	Charge the battery fully.
Loss of suction.	Dust bin is full; Filter is dirty; Blockage in the cleaner head, wand, or inlet.	Empty the dust bin; Wash and dry the filter; Clear any blockages.
Cleaner head not spinning.	Blockage in the brush bar; Cleaner head not properly attached.	Remove any hair or debris from the brush bar; Ensure cleaner head is securely clicked into place.
Short run time.	Using Boost mode excessively; Battery not fully charged; Battery degradation.	Use Auto or Eco mode for longer run time; Ensure full charge; Contact support if battery life significantly decreases.

Specifications

Brand: Dyson

Model Name: V15 Detect Absolute

Model Number: V15

Color: Gold

Form Factor: Stick

Is Cordless?: Yes

Runtime: Up to 60 minutes (varies by mode and usage)

Capacity: 0.2 Gallons

Filter Type: Pre/Post Motor (Washable)

Product Dimensions: 10.4"L x 9.84"W x 49.6"H

Item Weight: 6.8 pounds

Wattage: 91 Watt-hours

Special Features: Illumination technology, Bagless, Washable Filter, Power trigger, Intelligent power optimization.

Warranty and Support

This Dyson V15 Detect Absolute Gold (Renewed Premium) product is backed by a warranty provided by the seller. For specific warranty details, including duration and coverage, please refer to your purchase documentation or contact the seller directly.

For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact Dyson Customer Service or the authorized reseller from whom you purchased the product. Keep your proof of purchase for warranty claims.

© 2024 Dyson. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question