Lasnyfei LK007

Lasnyfei Digital Camera LK007 User Manual

Model: LK007

1. Introduction

Thank you for purchasing the Lasnyfei Digital Camera LK007. This manual provides detailed instructions for the proper use, setup, and maintenance of your camera. Please read this manual thoroughly before using the camera to ensure optimal performance and longevity of the device. This camera features 4K 48MP HD 1080P video recording, 8X digital zoom, anti-shake functionality, and a 2.4-inch rotating screen.

2. Product Overview

The Lasnyfei Digital Camera LK007 is designed for capturing high-quality photos and videos with ease. Its compact design and user-friendly features make it suitable for various photography needs.

2.1 Package Contents

- Lasnyfei Digital Camera LK007
- 32GB SD Card
- Card Reader
- USB Cable
- Rechargeable Battery (pre-installed or included)

2.2 Camera Features

- **4K 48MP HD 1080P Resolution:** Capture clear photos and videos.
- **8X Digital Zoom:** Magnify distant subjects.
- **Electronic Anti-Shake:** Reduces blur from camera movement.
- **2.4-inch Rotating Screen:** Offers flexible viewing angles for various shooting scenarios.
- **Built-in LED Fill Light:** Provides additional illumination in low-light conditions.
- **Autofocus:** Automatically adjusts lens for sharp images.
- **Time-lapse Function:** Capture sequences over time.

2.3 Camera Components

Familiarize yourself with the camera's physical components:



Image: The Lasnyfei Digital Camera LK007 in pink, featuring its flip-up screen, alongside an included 32GB Micro SD card and a USB card reader.



Image: A yellow Lasnyfei Digital Camera LK007 demonstrating its 2.4-inch rotating screen, shown flipped up and angled for user viewing.



Image: A light blue Lasnyfei Digital Camera LK007 illustrating the effect of its built-in LED fill light, showing a comparison of a scene with and without flash.

3. Setup

3.1 Charging the Battery

1. Locate the USB port on the camera.
2. Connect the camera to a power source (e.g., computer USB port, USB wall adapter) using the provided USB cable.
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off.

3.2 Inserting the SD Card

1. Ensure the camera is powered off.
2. Open the SD card slot cover, usually located on the side or bottom of the camera.
3. Insert the 32GB SD card with the metal contacts facing the correct direction (refer to the diagram near the slot if available) until it clicks into place.

4. Close the SD card slot cover securely.

4. Operating Instructions

4.1 Powering On/Off

- To power on: Press and hold the Power button until the screen illuminates.
- To power off: Press and hold the Power button until the screen turns off.

4.2 Taking Photos

1. Power on the camera.
2. Frame your shot using the 2.4-inch rotating screen. Adjust the screen angle as needed.
3. Press the Shutter button halfway down to activate autofocus. The focus indicator will confirm when the subject is in focus.
4. Press the Shutter button fully down to capture the photo.

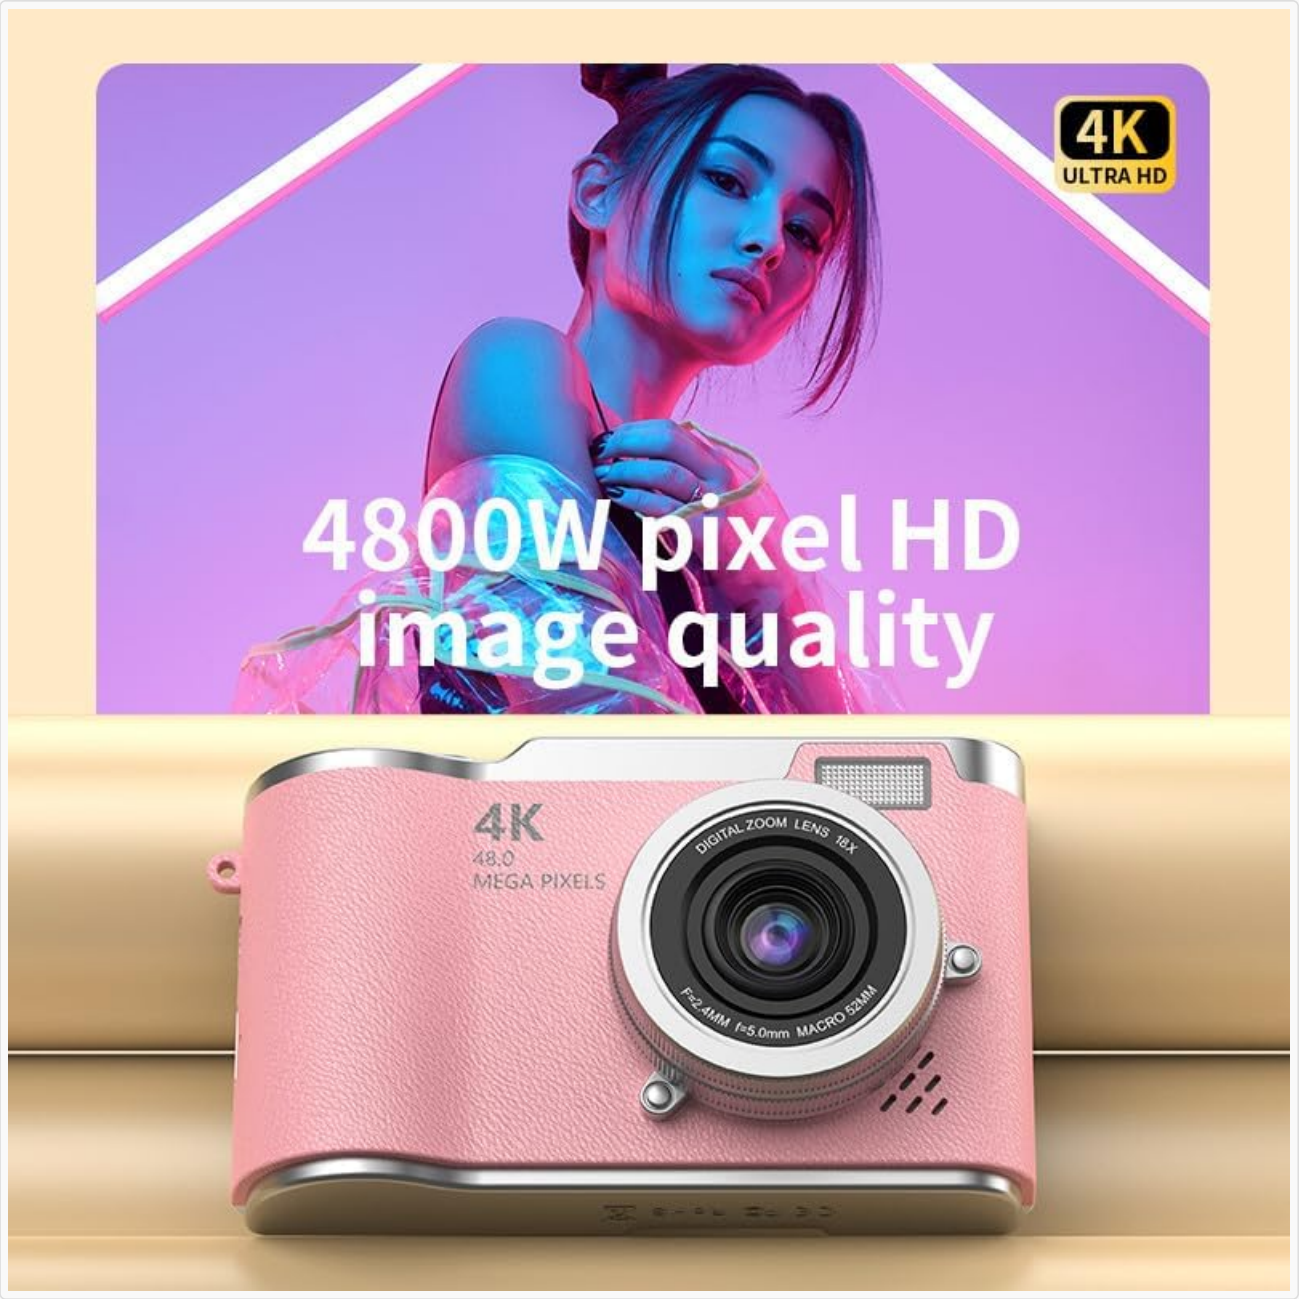


Image: A pink Lasnyfei Digital Camera LK007 with a graphic indicating its 4800W pixel HD image quality, showcasing a high-resolution photo on its screen.

4.3 Recording Videos

1. Switch the camera to video recording mode (if applicable, refer to camera buttons/menu).
2. Press the Record button to start recording.
3. Press the Record button again to stop recording.



Image: A pink Lasnyfei Digital Camera LK007 displaying a scene on its screen, accompanied by a '4K Ultra HD' logo, indicating its video recording capability.

4.4 Using Zoom

The camera features 8X digital zoom. Use the zoom controls (often marked 'W' for Wide and 'T' for Telephoto) to adjust the magnification.



Image: A white Lasnyfei Digital Camera LK007 illustrating its 8x electronic zoom feature, showing a distant subject and a zoomed-in view of the same subject.

4.5 Electronic Anti-Shake

The electronic anti-shake feature helps stabilize images and videos, reducing blur caused by camera movement. This feature is typically active by default or can be enabled in the camera settings menu.



Image: A black Lasnyfei Digital Camera LK007 with a dynamic image of a person jumping, highlighting the electronic anti-shake feature for stable captures.

4.6 Using the Built-in LED Fill Light

To activate the built-in LED fill light, navigate to the flash settings in the camera menu or press the dedicated flash button (if available). Select the fill light option for additional illumination.

4.7 Autofocus

The camera's autofocus system automatically adjusts the lens to bring your subject into sharp focus. This typically occurs when the shutter button is pressed halfway.



Image: Two Lasnyfei Digital Cameras LK007 (blue and yellow) viewed from above, emphasizing their autofocus capability.

4.8 Super Wide Angle Lens

The camera is equipped with a wide-angle lens, suitable for capturing broader scenes such as landscapes or group photos.



Image: A purple Lasnyfei Digital Camera LK007 showcasing its super wide-angle lens, capturing a broad scene with two individuals.

5. Maintenance

5.1 Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth and solution. Avoid touching the lens directly with your fingers.
- Do not use harsh chemicals or abrasive cleaners.

5.2 Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, remove the battery to prevent leakage.

6. Troubleshooting

6.1 Camera Does Not Power On

- Ensure the battery is fully charged.
- Check that the battery is correctly inserted.
- Try connecting the camera to a power source via USB to see if it powers on.

6.2 Cannot Take Photos/Record Videos

- Verify that an SD card is inserted and has sufficient free space.
- Check if the SD card is locked (physical switch on the card).
- Ensure the camera is in the correct mode (photo or video).

6.3 Blurry Images

- Ensure the lens is clean.
- Allow the camera to autofocus before fully pressing the shutter button.
- Check if the electronic anti-shake feature is enabled.

6.4 SD Card Error

- Reinsert the SD card.
- Try formatting the SD card (this will erase all data, back up first).
- Test with a different compatible SD card.

7. Specifications

Feature	Detail
Brand	Lasnyfei
Model Name	CCD LK007
Model Number	LK007
Effective Still Resolution	48 MP
Video Resolution	1080p (4K indicated in product title/description)
Optical Zoom	8 x (Digital Zoom)
Photo Sensor Technology	CCD
Screen Size	2.4 Inches
Display Type	LED
Special Feature	Time-lapse, Anti-Shake
Connectivity Technology	USB
Battery Type	Lithium Ion (Rechargeable)
Supported File Format	JPEG

8. Warranty and Support

8.1 Warranty Information

The Lasnyfei Digital Camera LK007 comes with a**1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

8.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your Lasnyfei Digital Camera LK007, please contact Lasnyfei customer support. Refer to the contact information provided with your product packaging or visit the official Lasnyfei website for support details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question