Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Lifemate HD-P16-3

Lifemate Lifetag Tracker for Android (Model HD-P16-3) - Instruction Manual

Brand: Lifemate

Product Overview

The Lifemate Lifetag Tracker is a Bluetooth tracking tag designed to help you locate your important items using the Google Find My Device (Find Hub) app on your Android smartphone or tablet. It offers a seamless tracking experience without the need for additional apps or subscription fees.

- **Anti-Lost Tracker for Google Find My Device (Find Hub) App:**Compatible with all Android phones (Android 9.0 or later). Simple and fast to set up.
- **Easy Item Tracking:** Keep track of and find your items on Google Maps via the Google Find My Device (Find Hub) App. No subscription fee and no need to download other unknown apps.
- **Audible Alerts:** The Lifemate Bluetooth Tracker can play a sound as loud as 120dB to help find your belongings when you're within the Bluetooth range (150 m/500ft).
- **Global Positioning Coverage:** With the help of hundreds of millions of Android Devices in the Google Find My (Find Hub) Network, you will receive non-stop location updates as long as the tracking tag is surrounded by Android devices.
- **Durable Design:** Lifemate smart tracking tag is dust-resistant and waterproof (IP65 rated). No fear of splashes or rainy days for daily use. It can survive for up to 30 minutes underwater at 3ft depth.



Image: Lifetag Tracker attached to a set of keys, demonstrating its compact size and portability.

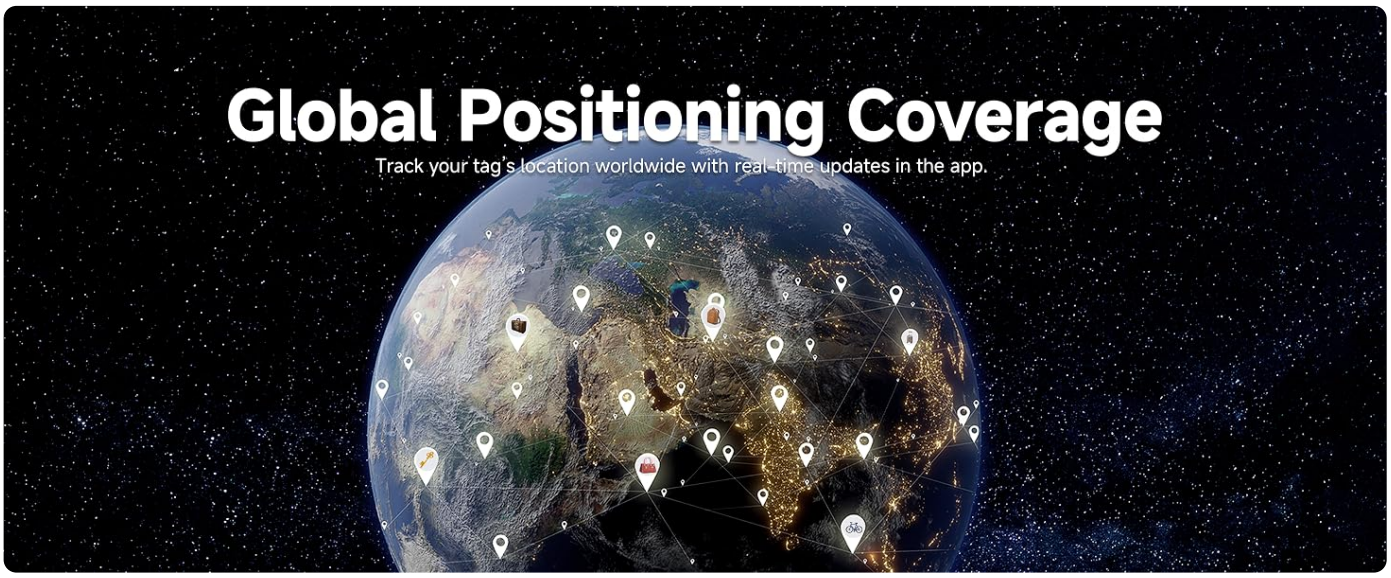


Image: A visual representation highlighting the Lifetag Tracker's compatibility with a wide range of Android phones.

Setup Guide

Initial Setup

1. **Download the Google Find My Device App:** Ensure you have the official "Google Find My Device" (also known as "Find Hub") app installed on your Android smartphone or tablet. This app is available on the Google Play Store.
2. **Activate the Lifetag Tracker:** The Lifetag Tracker comes with a pre-installed CR2032 battery. To activate it, pull out the plastic tab if present, or press the button on the tracker to turn it on. It should emit a beeping sound.
3. **Enable Bluetooth and Location:** On your Android device, ensure Bluetooth is enabled and location services are turned on.
4. **Pair the Tracker:** Open the Google Find My Device app. The app should automatically detect the nearby Lifetag Tracker. Follow the on-screen prompts to pair the device. You may need to press the button on the tracker again during the pairing process.
5. **Rename Your Tracker (Optional):** Once paired, you can rename your Lifetag Tracker within the app (e.g., "Keys," "Backpack," "Luggage," "Pet Collar") for easier identification.

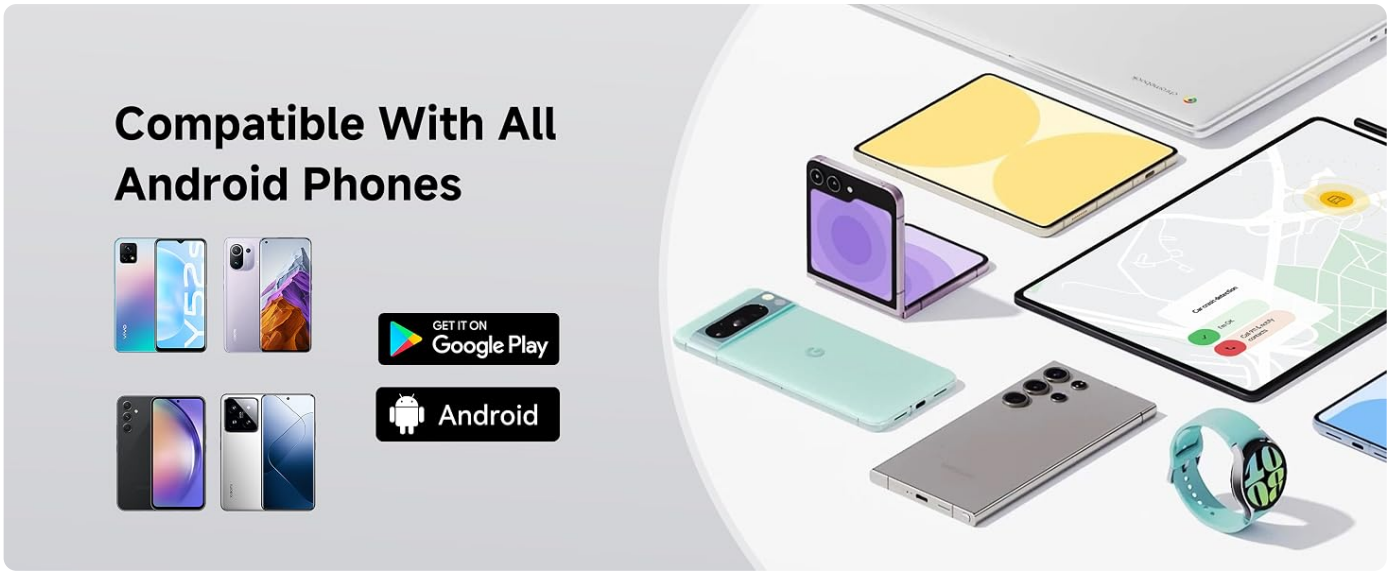


Image: The Google Find My Device app interface, confirming the Lifetag Tracker as a Google Certified Product for reliable tracking.

Operating Instructions

Locating Items

To find a misplaced item, open the Google Find My Device app on your Android smartphone or tablet. Select the corresponding Lifetag Tracker from your device list.

Play Sound

Tap the "Play Sound" option in the app. The Lifetag Tracker will emit a loud sound (up to 120dB) to help you locate it when it's within Bluetooth range (up to 150 meters/500 feet).



Image: A Lifetag Tracker emitting sound, indicating its location near a couch, as activated via the app.



Image: An illustration demonstrating how the Lifetag Tracker's sound feature helps locate various items within a home environment.

Find Nearby

If you are close to the item but cannot see it, use the "Find Nearby" feature. The app will provide visual cues indicating your proximity to the tracker, helping you pinpoint its exact location.

Location Tracking (Out of Range)

If your item is outside of Bluetooth range, the Google Find My Device network will provide its last known location on a map. This network leverages hundreds of millions of Android devices to anonymously update the tracker's location, offering global positioning coverage.

Image: A smartphone screen displaying Google Maps with the shared location of a Lifetag Tracker, illustrating the location sharing feature.

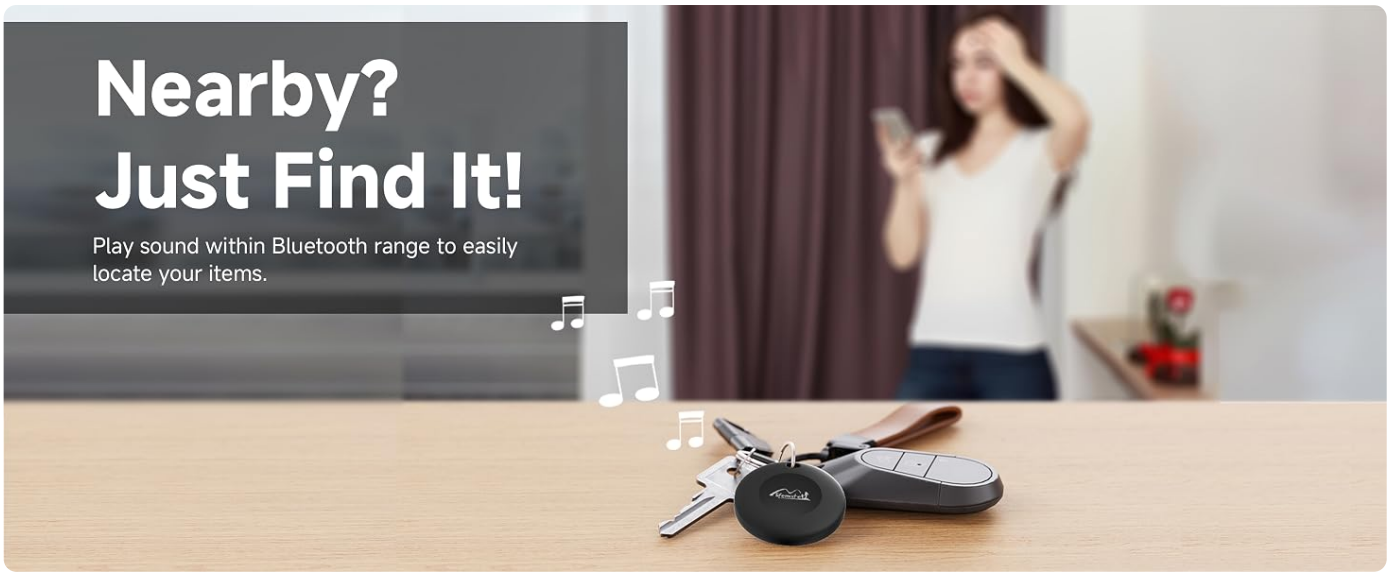


Image: A global map with numerous tracking points, symbolizing the extensive reach of the Google Find My Device network for location tracking.

Sharing Your Tracker

The Google Find My Device app allows you to share access to your Lifetag Tracker's location with trusted individuals. This is useful for family members or friends who may also need to locate shared items.

Mark as Lost

In case your item is lost, you can mark the Lifetag Tracker as lost in the app. This can trigger notifications or actions to help recover your item.

Maintenance

Battery Replacement

The Lifetag Tracker uses a replaceable CR2032 coin cell battery, which typically lasts 6-8 months.

1. Locate the small groove or opening on the side of the tracker.
2. Carefully use a small tool (like a coin or a guitar pick, if provided) to pry open the tracker casing.
3. Remove the old CR2032 battery.
4. Insert a new CR2032 battery with the positive (+) side facing up.
5. Align the two halves of the tracker and press firmly until it clicks securely into place.



Image: An exploded view of the Lifetag Tracker, illustrating the easily replaceable CR2032 battery for extended use.

Water and Dust Resistance

The Lifetag smart tracking tag is dust-resistant and waterproof (IP65 rated). It can withstand splashes and rain and can survive for up to 30 minutes underwater at 3ft depth. This makes it suitable for daily use without fear of water damage.

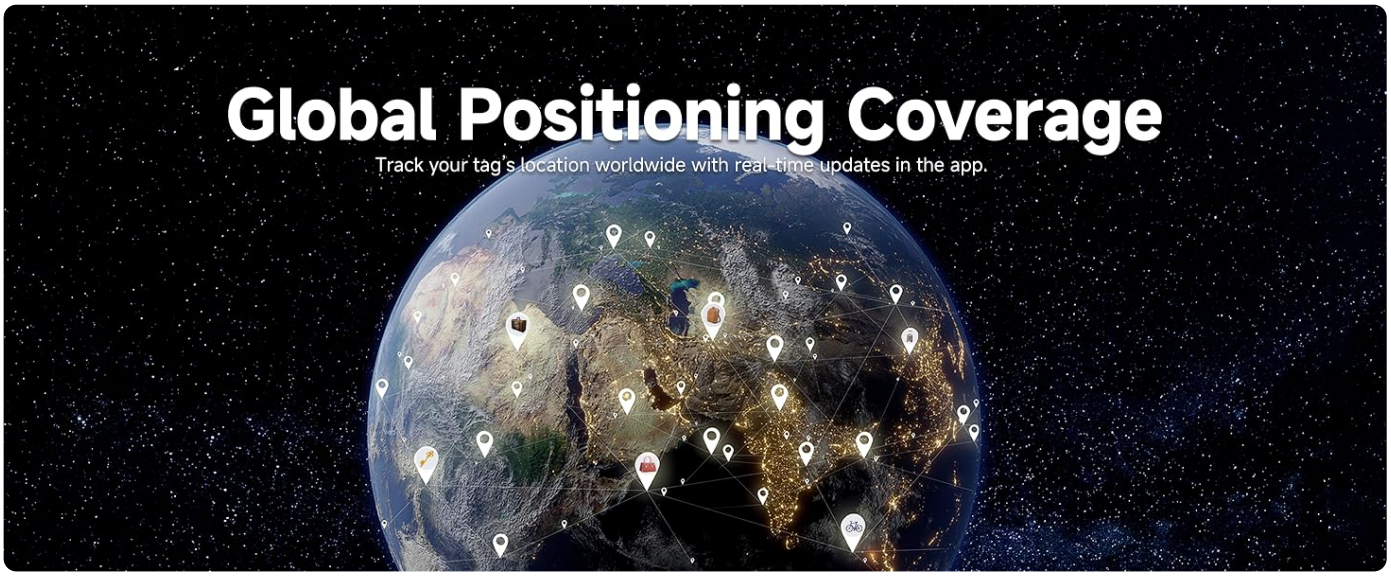


Image: A Lifetag Tracker partially submerged in water with splashes, demonstrating its IP65 waterproof rating.

Troubleshooting

Common Issues

- **Tracker not pairing:** Ensure Bluetooth is enabled on your Android device and the tracker's battery is active. Try restarting the Google Find My Device app or your phone.
- **Low sound volume:** The tracker is designed to emit a sound up to 120dB. If the sound is too low, ensure there are no obstructions covering the speaker.
- **Inaccurate location:** Location accuracy relies on the Google Find My Device network. In areas with fewer Android devices, location updates might be delayed or less precise. Ensure location services are enabled on your phone.
- **Battery life concerns:** The CR2032 battery is expected to last 6-8 months. If battery drains quickly, ensure the tracker is not constantly playing sound or actively being searched for, as this can consume more power.

Specifications

Product Dimensions	1.46 x 1.46 x 0.35 inches
Item Weight	0.882 ounces (25 Grams)
Item Model Number	HD-P16-3
Batteries	1 CR2032 battery required (included)
Connectivity Technologies	Bluetooth
Color	BLK
Manufacturer	SHENZHEN HALI-POWER INDUSTRIAL CO., LTD
Date First Available	April 10, 2025
Compatible Devices	Android Smartphone, Android Tablet

Warranty and Support

For warranty claims or technical support, please refer to the contact information provided by Lifemate at the time of purchase or visit the official Lifemate website.

The manufacturer, SHENZHEN HALI-POWER INDUSTRIAL CO., LTD, stands behind the quality of this product.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F1F5HJD4

More documents and user manuals: **https://manuals.plus/**