HOTO Wand Cordless Spin Scrubber

HOTO Wand Cordless Spin Scrubber Instruction Manual

Model: Wand Cordless Spin Scrubber

1. Product Overview

The HOTO Wand Cordless Spin Scrubber is an electric, rechargeable cleaning tool designed for efficient and thorough cleaning of various surfaces. It features high-torque rotary power, a waterproof design, and interchangeable brush heads to tackle different cleaning tasks.

Included Components:

- 1 x HOTO Wand Electric Grout Brush
- 1 x Brush-L (Large Brush Head)
- 1 x Brush-M (Medium Brush Head)
- 1 x Brush-S (Small Brush Head)
- 1 x Pointed Brush
- 4 x Scouring Pads
- 4 x Cloth Pads
- 1 x Brush Head Bag
- 1 x Type-C Charging Cable



Image: The HOTO Wand Cordless Spin Scrubber shown with its array of interchangeable brush heads, including large, medium, small, pointed brushes, scouring pads, and cloth pads.

2. Safety Information

- Read all instructions before using the appliance.
- Keep the device away from children.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Use only the provided Type-C charging cable.
- Ensure the charging port is dry before connecting the charging cable.
- The device is IPX7 waterproof, meaning it can be submerged in water up to 3 feet (1 meter) deep for up to 30 minutes. Avoid prolonged submersion beyond these limits.

- Do not use the scrubber on delicate surfaces without first testing on an inconspicuous area to prevent damage.

3. Getting Started (Setup)

3.1 Charging the Device

1. Before first use, fully charge the scrubber.
2. Connect the Type-C charging cable to the charging port on the device and to a suitable USB power adapter (not included).
3. A red light indicates a low battery. The light will change to indicate a full charge (refer to product indicator lights for specific behavior).
4. A full charge provides approximately 210 minutes of runtime on low speed and 180 minutes on high speed.

Image: The HOTO Wand Scrubber connected to a USB-C charging cable, illustrating the charging process.

3.2 Attaching Brush Heads

1. Select the appropriate brush head for your cleaning task.
2. Align the chosen brush head with the magnetic docking slot on the scrubber.
3. Gently push the brush head until you hear a "click," indicating a secure magnetic connection.
4. To remove, simply pull the brush head away from the magnetic slot.

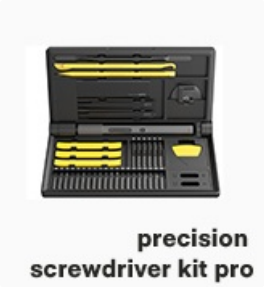


Image: A hand demonstrating how to attach a brush head to the HOTO Wand Scrubber using its magnetic docking system.

4. Operation

4.1 Powering On/Off and Speed Control

1. To power on the device, long-press the power button located on the handle.
2. The scrubber features dual-speed control:
    - **Low Speed (170 RPM):** Suitable for delicate surfaces or lighter cleaning tasks.
    - **High Speed (250 RPM):** Ideal for intensive cleaning and stubborn stains.
3. Press the Standby & Gear Button (usually the same as the power button or an adjacent button) to switch between low and high speeds.
4. To power off, long-press the power button again.



Image: A finger pressing the power button on the HOTO Wand Scrubber to activate or adjust settings.



Image: The HOTO Wand Scrubber in use, with visual indicators for its low speed (170 RPM) for delicate surfaces and high speed (250 RPM) for intensive cleaning.

4.2 Using Different Brush Heads

The HOTO Wand comes with a variety of brush heads designed for specific cleaning tasks:

- **Brush-L (Large):** Ideal for larger flat surfaces like tiles, shower walls, and bathtubs.
- **Brush-M (Medium):** Suitable for areas requiring moderate coverage, such as sinks, countertops, and car wheel hubs.
- **Brush-S (Small):** Perfect for smaller areas, faucet corners, and tight crevices.
- **Pointed Brush:** Specifically designed for tile grout, toilet crevices, shower nozzles, and other narrow corners.
- **Scouring Pads:** For tough stains on durable surfaces like pots and pans (test on an inconspicuous area first).
- **Cloth Pads:** For polishing and gentle cleaning of glass and smooth surfaces.

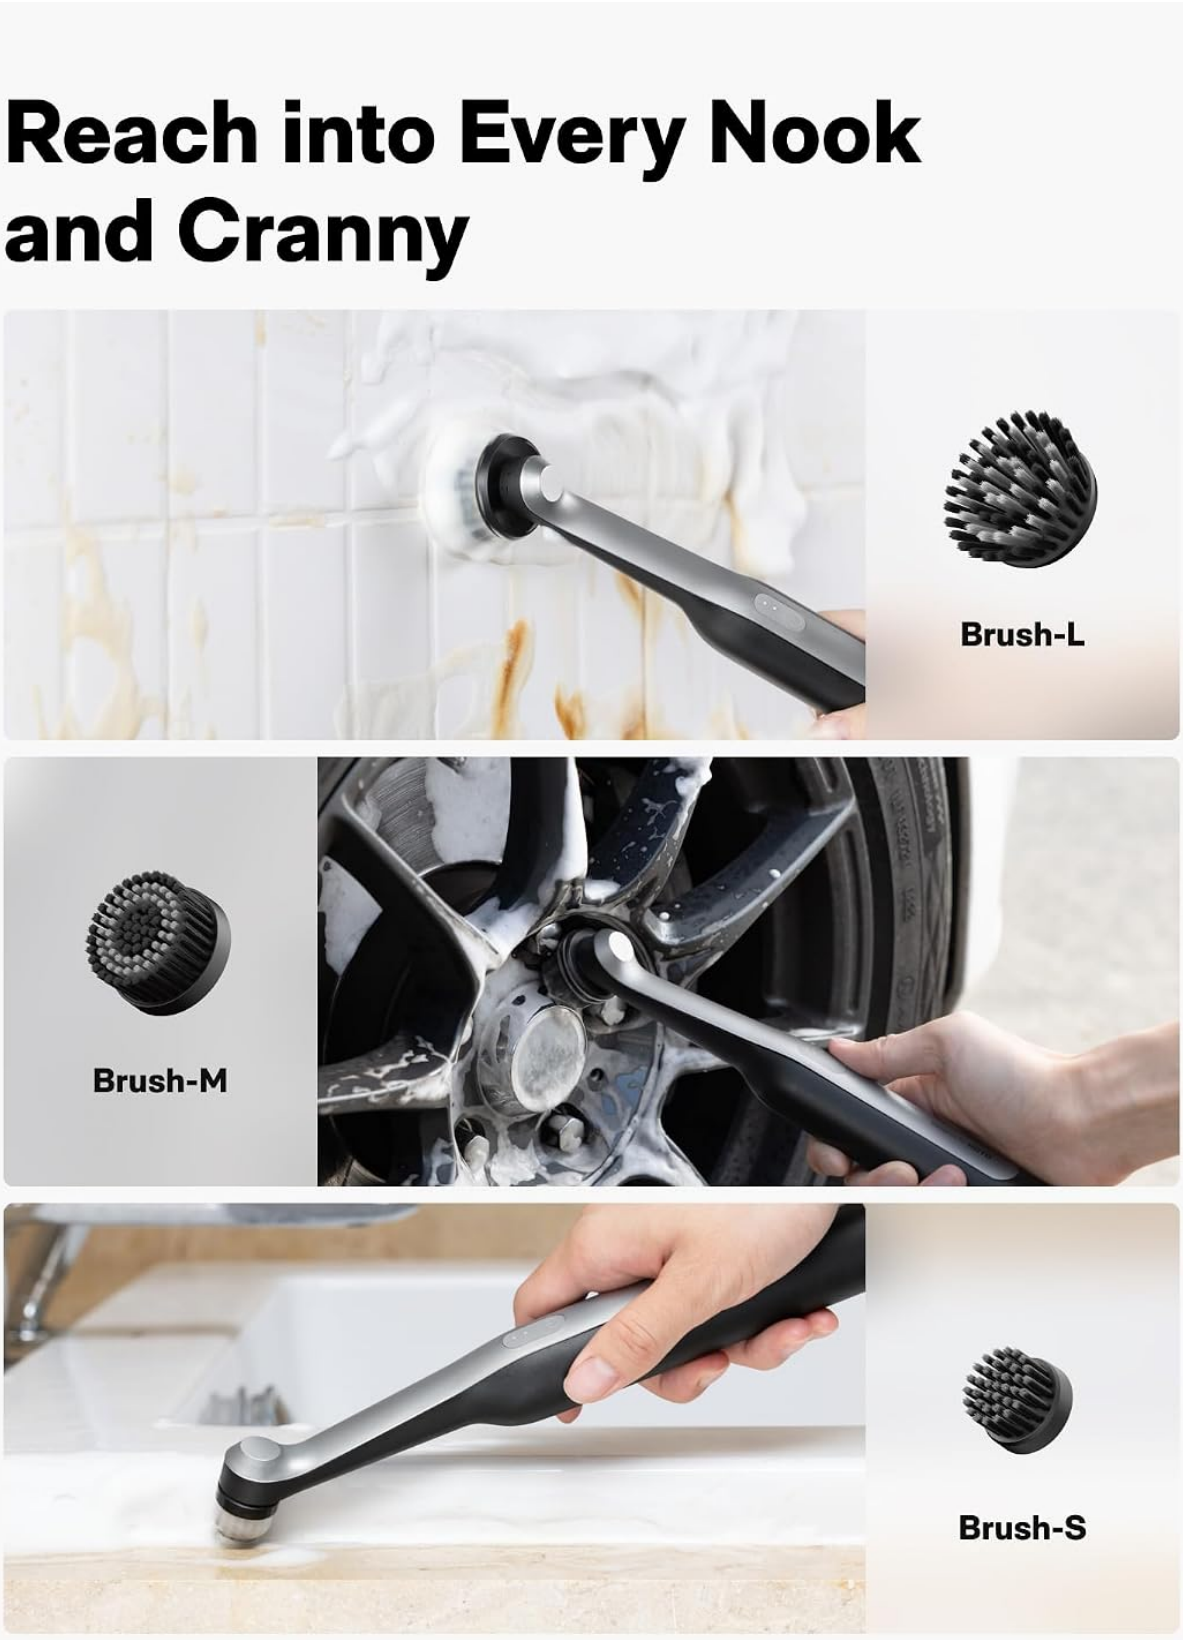



Image: The HOTO Wand Scrubber effectively cleaning tile grout with its large brush head.



Image: The HOTO Wand Scrubber cleaning a car wheel hub, demonstrating the use of a medium brush head for automotive cleaning.

Rechargeable
Relentless Power

USB-C® Cable

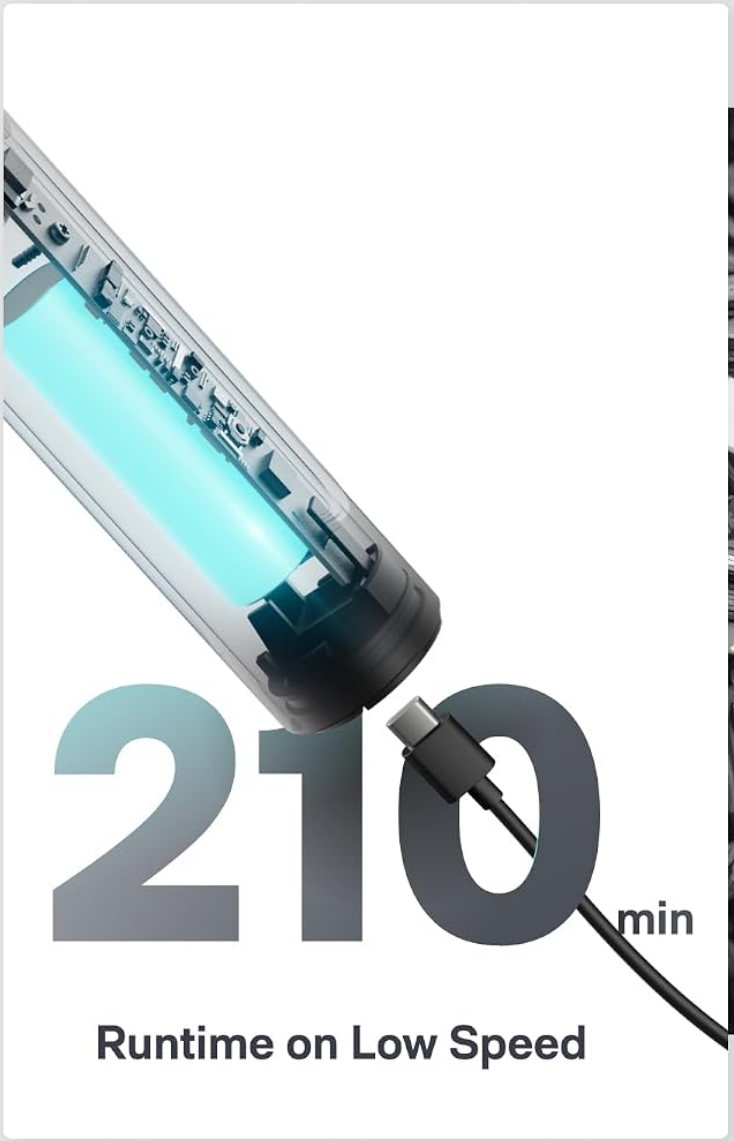

AA Batteries



*USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum

Image: The HOTO Wand Scrubber cleaning the rim of a sink, showcasing the precision of a small brush head.



Image: The HOTO Wand Scrubber cleaning a sink drain with a pointed brush, highlighting its versatility with scour pads and cloth pads for various cleaning needs.

5. Maintenance and Storage

5.1 Cleaning the Device

The HOTO Wand Cordless Spin Scrubber is IPX7 full-body waterproof. After use, you can rinse the entire device under

running water. It is safe for scrubbing away dirt in water up to 3 feet deep for 30 minutes.

reddot winner 2025





Image: The HOTO Wand Scrubber partially submerged in water, demonstrating its IPX7 waterproof capability for cleaning in wet environments.

5.2 Brush Head Care

Rinse brush heads thoroughly after each use to remove any cleaning agents or debris. Allow them to air dry completely before storing. Replace brush heads when bristles show signs of wear or damage to maintain optimal cleaning performance.

5.3 Storage

The scrubber features an integrated hook for convenient hanging storage. Ensure the device is clean and dry before storing it in a cool, dry place away from direct sunlight.



Image: The HOTO Wand Scrubber hanging from a hook, illustrating its convenient storage design.

6. Troubleshooting

- **Device not turning on:** Ensure the device is fully charged. If the battery is low, connect it to the charger.
- **Reduced scrubbing power:** Check if the brush head is securely attached. Ensure the battery is sufficiently charged.
- **Brush head not spinning:** Verify the brush head is correctly aligned and clicked into place. If the issue persists, try a different brush head.
- **Unusual noise or vibration:** Discontinue use immediately and check for any obstructions or damage to the brush head or device.

If you encounter any issues not covered here, please refer to the Warranty and Support section for further assistance.

7. Specifications

Feature	Detail
Brand	HOTO

Model	Wand Cordless Spin Scrubber
Color	Gray Black
Handle Material	Acrylonitrile Butadiene Styrene (ABS)
Product Dimensions	10.2"L x 1.46"W x 1.46"H
Item Weight	13.1 ounces
Battery	2000 mAh Lithium Ion (rechargeable)
Runtime (Low Speed)	Up to 210 minutes
Runtime (High Speed)	Up to 180 minutes
Rotation Speed (Low)	170 RPM
Rotation Speed (High)	250 RPM
Waterproof Rating	IPX7 (submersible up to 3 feet for 30 minutes)
Charging Port	Type-C
Special Features	12 Replaceable Heads, Magnetic Docking, Ergonomic Angle, Integrated Hook

8. Warranty and Support

HOTO products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official HOTO website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact HOTO customer service through the retailer where the product was purchased or via the contact information provided on the official HOTO website.

Online Resources:

- HOTO Official Website: Visit the HOTO Store on Amazon

© 2025 HOTO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question