Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

topzee TMF-350-SIL

Electric Milk Frother and Steamer User Manual

Model: TMF-350-SIL

Brand: topzee



Image: TOPZEE Electric Milk Frother and Steamer, Silver color.

Introduction

Thank you for choosing the TOPZEE Electric Milk Frother and Steamer. This versatile 4-in-1 appliance is designed to bring cafe-quality beverages to your home, effortlessly crafting hot foam, cold foam, warm milk, and hot chocolate. Please read this manual carefully before use to ensure safe and optimal operation.

What's in the Box

Upon opening your TOPZEE Milk Frother package, you should find the following components:

- Electric Milk Frother Base Unit
- Stainless Steel Milk Jug (16.9oz/500ml capacity)
- Frothing Whisk
- Power Cable
- User Manual (this document)



Image: The TOPZEE Milk Frother showing its main components and various modes.

Product Overview & Key Features

The TOPZEE Electric Milk Frother is designed for convenience and performance, offering multiple functions to enhance your coffee and beverage experience.

- **4-in-1 Versatility:** Easily prepare Hot Foam, Cold Foam, Warm Milk, and Hot Chocolate with a single touch.
- **Large Capacity:** Heats up to 16.9oz (500ml) of milk and froths up to 8.5oz (250ml) of milk, suitable for multiple servings. Minimum frothing capacity is 2.7oz (80ml).
- **Quick Heating:** Achieves optimal temperature (165-185°F) in approximately 3 minutes.
- **Milk Compatibility:** Works effectively with whole, skim, oat, almond, and soy milks.
- **Premium Design:** Crafted from durable 304 stainless steel with a non-coated interior for easy cleaning and longevity. Features an anti-scald extended handle and a precise drip-tip design for latte art.
- **Quiet Operation:** Operates at an ultra-quiet 45dB, ensuring a peaceful morning routine.
- **Circulation Heating:** Prevents milk scorching by ensuring even heat distribution.
- **Safety Features:** Equipped with an auto shut-off function to prevent dry burning.
- **360° Rotating Base:** Allows for convenient placement and handling.



Image: Diagram showing maximum heating (500ml) and frothing (250ml) capacities.



Image: Comparison of foam quality, highlighting ultra-fine dense microfoam.



Image: Internal view illustrating circulation heating, auto shut-off, and low noise features.

Setup

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Clean Before First Use:** Wash the stainless steel milk jug and frothing whisk with warm soapy water, then rinse thoroughly and dry. The milk jug is dishwasher safe. Wipe the frother base with a damp cloth. *Do not immerse the base unit in water.*
3. **Assemble:** Place the frothing whisk securely onto the spindle inside the milk jug. Ensure it clicks into place.
4. **Position:** Place the milk jug onto the frother base. The 360° rotating design allows it to be placed in any direction.
5. **Connect Power:** Plug the power cable into a standard 120V AC, 60Hz power outlet.



Image: The frother on a counter, demonstrating its compact size and 360-degree rotating base.

Operating Instructions

The TOPZEE Milk Frother features simple one-touch operation for all its functions. Ensure the frothing whisk is correctly installed for frothing functions.



Image: Close-up of the control panel with icons for different functions.

Function Selection:

The control panel has a power button and three function buttons. Press the power button to turn on the unit. Then, select your desired function:

Hot Dense Foam:
Press the **Hot Foam** button (coffee cup with steam). Ideal for lattes and cappuccinos. Max fill: 8.5oz (250ml).

Cold Milk Foam:
Press the **Cold Foam** button (snowflake icon). Perfect for iced coffees and cold beverages. Max fill: 8.5oz (250ml).

Warm Milk (Foam-Free):
Press the **Warm Milk** button (milk carton icon). For heating milk without frothing. Max fill: 16.9oz (500ml).

Hot Chocolate:
Press the **Hot Chocolate** button (chocolate bar icon). For rich, warm hot chocolate. Max fill: 16.9oz (500ml).

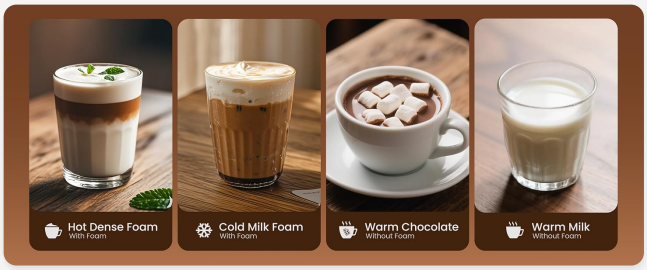


Image: Visual representation of the four distinct beverage modes.

General Operation Steps:

1. Pour milk into the stainless steel jug, ensuring it is between the MIN and MAX fill lines for your chosen function.
2. Place the lid securely on the jug.
3. Place the jug onto the frother base.
4. Press the power button, then select your desired function. The indicator light will illuminate.
5. The frother will automatically stop when the process is complete.
6. Carefully remove the jug using the anti-scald handle and pour your frothed milk or heated beverage.

Note: For best frothing results, use cold milk directly from the refrigerator.

Maintenance & Cleaning

Regular cleaning ensures the longevity and optimal performance of your TOPZEE Milk Frother.

- **Always unplug the frother from the power outlet before cleaning.**
- **Milk Jug:** The stainless steel milk jug is detachable and**dishwasher safe** for effortless cleaning. For hand washing, rinse immediately after use with warm water and a mild detergent. Use a soft sponge or cloth to clean the interior.
- **Frothing Whisk:** Remove the whisk from the jug and rinse it under running water. Ensure no milk residue remains.
- **Base Unit:** Wipe the exterior of the base unit with a soft, damp cloth*Never immerse the base unit in water or any other liquid.*
- **Drying:** Ensure all parts are completely dry before reassembling or storing the frother.



Image: Demonstrates the detachable milk jug being washed in a sink and placed in a dishwasher.

Troubleshooting

If you encounter any issues with your TOPZEE Milk Frother, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Frother does not turn on.	Not plugged in; power outlet issue; unit malfunction.	Ensure power cable is securely plugged into a working outlet. Try a different outlet. If problem persists, contact customer support.
Milk is not frothing or foam is insufficient.	Incorrect milk type/temperature; whisk not properly installed; too much/too little milk.	Use cold milk (dairy or plant-based). Ensure whisk is securely attached. Do not exceed MAX frothing line (250ml) or go below MIN line (80ml). Note that some plant-based milks (e.g., certain soy or almond brands) may not froth as well as dairy milk due to protein content.
Milk is not heating.	Incorrect function selected; unit malfunction.	Ensure you have selected a heating function (Hot Foam, Warm Milk, Hot Chocolate). If the unit is running but not heating, contact customer support.
Unpleasant smell from the unit.	New unit smell; residue buildup; plastic parts issue.	A slight smell may occur during first few uses, which is normal. Ensure thorough cleaning after each use to prevent milk residue buildup. If a strong or persistent plastic smell occurs, especially after cleaning, discontinue use and contact customer support.

Specifications

Brand	topzee
Model Name	TMF-350-SIL
Color	Silver
Material	Stainless Steel
Special Feature	Detachable Base, Quiet Function
Max Heating Capacity	16.9oz (500ml)
Max Frothing Capacity	8.5oz (250ml)
Min Frothing Capacity	2.7oz (80ml)
Heating Temperature Range	165-185°F
Heating Time	Approx. 3 minutes
Noise Level	45dB (Ultra-quiet)
Product Care Instructions	Dishwasher Safe (Milk Jug)
Item Weight	3.14 pounds
Package Dimensions	9.57 x 6.93 x 6.61 inches

Warranty & Support

TOPZEE stands behind the quality of its products. For any warranty claims, technical assistance, or general inquiries, please contact our customer support team.
Customer Support Email: Support@topzee.com
Please have your model number (TMF-350-SIL) and purchase date ready when contacting support for faster service.



Image: Customer support icon with email address.

© 2025 topzee. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F1FDQPW6

More documents and user manuals: **https://manuals.plus/**