JAPOUCA K71

JAPOUCA K71 Portable Karaoke Machine User Manual

Model: K71 | Brand: JAPOUCA

1. Introduction

Thank you for choosing the JAPOUCA K71 Portable Karaoke Machine. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.


Select songs
Movie
Intoration
More
Record
Mobile
Search
ELLIE GOULDING
HEARTS WITHOUT CHAINS
Name of song
Categories
Top list
New
Stars
Select
Score
Aura
Volume
Phantom
Original
Pause
Repeat
Next
List
15:20
TONE
ECHO
MIC
BASS
TREBLE

Figure 1.1: JAPOUCA K71 Portable Karaoke Machine with included accessories.

2. Safety Information

- Do not expose the device to rain or moisture.
- Do not disassemble the unit. Refer all servicing to qualified personnel.
- Keep the device away from heat sources and direct sunlight.
- Ensure proper ventilation to prevent overheating.
- Use only the specified charging cables and power adapters.
- Keep out of reach of children.

3. Package Contents

Verify that all items are present in the package:

- JAPOUCA K71 Karaoke Machine (1 unit)
- Wireless Microphones (2 units)
- USB Charging Cable (1 unit)
- AUX Cable (1 unit)
- User Manual (1 unit)

4. Product Overview

4.1 Main Unit and Microphones

The K71 features a portable design with dual speakers and integrated disco lights. Two wireless microphones are included for vocal performance.



Figure 4.1: K71 dimensions (8.3" H x 16.9" W x 7.5" D) and wireless microphone range (82ft).



Figure 4.2: Internal view highlighting the dual 4.0-inch speakers.

4.2 Control Panel and Interfaces

The top panel of the K71 unit houses all control buttons, knobs, and input/output ports.



Figure 4.3: K71 Control Panel Layout.



Figure 4.4: Detailed view of interfaces, buttons, and LED display.

Key Controls:

- **Power Button:** Turns the unit on/off.
- **Volume Knob:** Adjusts the main speaker volume.
- **Echo Knob:** Adjusts microphone echo effect.
- **EQ Button:** Toggles between Indoor (balanced sound) and Outdoor (bass-boosted) modes.
- **Light Button:** Controls the disco lights.
- **REC Button:** Initiates recording (requires USB/TF storage).
- **M/TWS Button:** Mode selection and True Wireless Stereo pairing.
- **Playback Controls:** Play/Pause, Previous Track, Next Track.

Interfaces:

- **MIC Input:** For wired microphone connection (if applicable).
- **Type-C Port:** For charging the unit.
- **AUX Input:** For connecting external audio devices via AUX cable.
- **TF Card Slot:** For playing music from a TF card.
- **USB Port:** For playing music from a USB drive or recording.

5. Setup

5.1 Charging the Karaoke Machine

1. Connect the provided USB charging cable to the Type-C port on the K71 unit.
2. Connect the other end of the USB cable to a compatible USB power adapter (not included) or a computer USB port.
3. The LED display will indicate charging status. A full charge provides approximately 10 hours of playback.

5.2 Installing Microphone Batteries

Each wireless microphone requires 3 AAA batteries (included). Open the battery compartment at the bottom of the microphone and insert the batteries, observing polarity.



Figure 5.1: Wireless Microphone Controls.

6. Operating Instructions

6.1 Power On/Off

Press and hold the Power button on the control panel to turn the unit on or off.

6.2 Bluetooth Connection

1. Turn on the K71 unit. It will automatically enter Bluetooth pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "JAPOUCA K71" from the list to connect. A confirmation sound will indicate successful pairing.



Figure 6.1: Bluetooth 5.3 Connectivity.

6.3 Microphone Usage

1. Turn on the wireless microphones. They will automatically connect to the K71 unit.
2. Adjust microphone volume, bass, treble, and echo effects using the dedicated controls on the microphone or the

main unit.

6.4 Audio Input Modes (USB/TF/AUX)

Insert a USB drive into the USB port or a TF card into the TF card slot. The unit will automatically switch to the corresponding mode and begin playback. For AUX input, connect an external audio device using the provided AUX cable.

6.5 Disco Lights

Press the Light button on the control panel to cycle through different light modes or turn the lights off.



Figure 6.2: Dynamic Colorful Atmosphere Lights.

6.6 EQ Modes

Press the EQ button to switch between "Indoor" mode for balanced sound and "Outdoor" mode for enhanced bass, suitable for open environments.

6.7 True Wireless Stereo (TWS) Function

To connect two K71 units for a stereo sound experience:

1. Ensure both K71 units are powered on and not connected to any Bluetooth device.
2. On one unit, press and hold the**M/TWS** button until you hear a pairing tone.
3. The two units will automatically connect to each other.
4. Once connected, pair your device via Bluetooth to the primary K71 unit. Audio will play through both units in stereo.

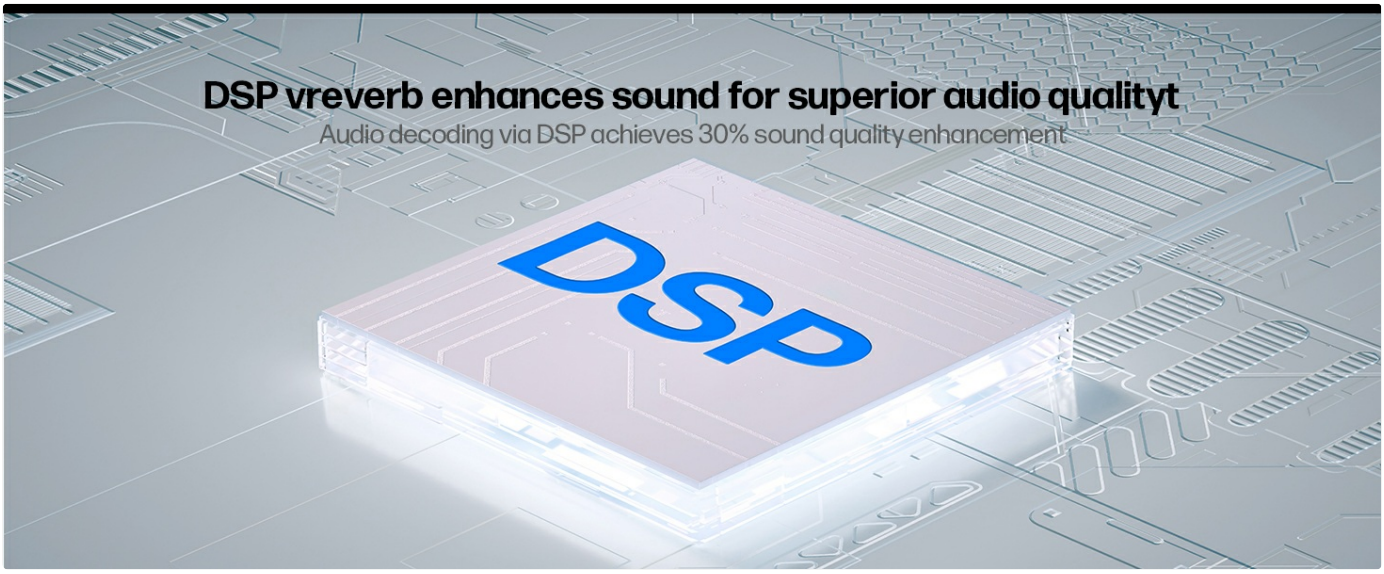


Figure 6.3: TWS Connection for Stereo Sound.

6.8 Recording Function

To record your performance:

1. Insert a USB drive or TF card into the respective slot.
2. Press the **REC** button to start recording.
3. Press the **REC** button again to stop recording. The recording will be saved to the inserted storage device.

7. Maintenance

- Clean the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the device in a cool, dry place when not in use.
- If the unit will not be used for an extended period, charge it periodically to maintain battery health.

8. Troubleshooting

Problem	Possible Cause	Solution
No power	Battery is depleted.	Charge the unit using the provided USB cable.
No sound from speaker	Volume is too low or muted. Incorrect input mode.	Increase volume. Ensure correct input mode (Bluetooth, USB, TF, AUX) is selected.
Microphone not working	Microphone batteries are low or incorrectly inserted. Microphone is not paired.	Replace microphone batteries. Ensure microphones are powered on and within range.
Bluetooth connection unstable	Device is too far from the K71. Interference.	Move the device closer to the K71. Avoid obstacles or other wireless devices.

9. Specifications

Feature	Detail
Model Number	K71
Brand	JAPOUCA
Output Wattage	60 Watts (Peak Power 120W)
Product Dimensions	8.3 x 7.6 x 16.7 inches
Item Weight	8.93 pounds
Connectivity	Bluetooth 5.0, AUX, USB, TF Card
Battery Type	Lithium Ion (4500mAh)
Battery Life	Approximately 10 hours
Microphone Batteries	3 AAA batteries (included)
Special Features	Built-In Microphone, Portable, Rechargeable, Disco Lights, EQ Modes, TWS Function
Compatible Devices	Laptop, Smartphone, Tablet, Television



Figure 9.1: K71 Product Specifications Overview.



Figure 9.2: K71 Battery Life for Outdoor Use.

10. Warranty and Support

The JAPOUCA K71 Portable Karaoke Machine comes with a standard manufacturer's warranty. For detailed warranty

information, product support, or service inquiries, please refer to the contact information provided on the product packaging or the official JAPOUCA website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

My JAPOUCA K71 Karaoke Machine is not charging and is flashing red and green; what should I do?

If your JAPOUCA K71 is not charging and displays a flashing red and green light, it typically indicates a charging error, a faulty power source, or a battery protection state. While the manual does...

Read full answer

How can I determine or change the playing sequence of songs on a USB device when using the JAPOUCA K71 Portable Karaoke Machine?

The JAPOUCA K71 manual does not specify a built-in function to change the playback order (such as shuffle or alphabetical sorting) directly from the control panel. Typically, devices of this type play files in...

Read full answer

The digital display light on the front of my JAPOUCA K71 Karaoke Machine is not turning on. What could be wrong, as it was working fine before?

If the digital LED display on the front of your JAPOUCA K71 is not lighting up, please try the following troubleshooting steps:Check the Power Status: The most common cause for a dark display is...

Read full answer

Why does the JAPOUCA K71 disconnect Bluetooth or AUX audio from my laptop when I insert a USB drive to record my singing?

The behavior you are experiencing with the JAPOUCA K71 is due to the device's internal priority system and how its recording function is designed. Here is a breakdown of why this is happening and...

Read full answer

Why does my JAPOUCA K71 disconnect from my laptop's Bluetooth when I plug in a cable, and why am I unable to record my voice and background music to a USB drive?

Based on the JAPOUCA K71 manual and the behavior you described, here are the solutions to your recording and connectivity issues:Bluetooth Disconnection: The K71 is designed to prioritize physical connections. When you plug an...

Read full answer