Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

HOMCOM 700-176V80BN

HOMCOM 700-176V80BN Recliner Chair User Manual

Model: 700-176V80BN

Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your HOMCOM 700-176V80BN Recliner Chair. Please read this manual thoroughly before assembly and use to ensure proper function and safety. Keep this manual for future reference.



Image: The HOMCOM 700-176V80BN Recliner Chair in brown, featuring a plush velvet-feel fabric and a sturdy base.

Important Safety Information

- **Weight Limit:** Do not exceed the maximum weight capacity of **298 lbs (135 kg)**. Exceeding this limit may cause damage to the chair and potential injury.
- **Assembly:** Ensure all components are correctly assembled and tightened before use. Improper assembly can lead to instability and injury.
- **Children and Pets:** Keep children and pets away from the chair's moving parts during operation to prevent injury.
- **Electrical Components:** Do not attempt to repair or modify the electrical components (massage and heat). Contact qualified service personnel if issues arise.
- **Placement:** Place the chair on a level surface. Ensure adequate space around the chair for reclining and swiveling.
- **Cleaning:** Refer to the maintenance section for proper cleaning instructions. Avoid using harsh chemicals that may damage the fabric or components.

Package Contents

Before beginning assembly, verify that all parts are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

- Recliner Chair Base
- Backrest
- Armrests (Left and Right)
- Power Adapter for Massage/Heat
- Remote Control
- Assembly Hardware (Bolts, Allen Wrench)



Image: A brown cardboard box with the HOMCOM logo, indicating the product comes in one package.

Assembly Instructions

Please follow these steps carefully. It is recommended to have two people for assembly to ensure stability and proper alignment of parts. Refer to the assembly video for visual guidance.

Your browser does not support the video tag.

Video: Official HOMCOM assembly guide for the 700-176V80BN Recliner Chair. This video demonstrates the step-by-step process of attaching the backrest and armrests to the chair base.

1. **Prepare the Base:**

   Unpack all components and lay them out on a clean, soft surface to prevent scratches. Identify the main chair base.

2. **Attach Armrests:**

   Locate the zippers on the side of the chair base and on the armrests. Unzip them to reveal the metal brackets. Carefully align the metal brackets on the armrests with the corresponding brackets on the chair base. Ensure the 'L' (Left) and 'R' (Right) labels match the correct sides of the chair when facing it from the front.



Image: A detailed view of the chair's side, illustrating where the armrests connect to the main body.

3. **Secure Armrests with Bolts:**

   Using the provided Allen wrench and bolts, secure the armrest brackets to the chair base. Insert the bolts through the pre-drilled holes and tighten them firmly. **Important:** Do not overtighten. Ensure all bolts are securely fastened to prevent wobbling. If holes do not align easily, gently adjust the armrest position until alignment is achieved. Do not force the bolts.



Image: A hand using an Allen wrench to tighten a bolt on the metal bracket connecting the armrest to the chair base.

4. **Attach the Backrest:**

   Slide the backrest onto the metal posts extending from the chair base. Ensure both sides of the backrest slide down completely and lock into place. You may need to apply gentle downward pressure. Listen for a click to confirm it is secured.

5. **Connect Electrical Components:**

Locate the electrical cables for the massage and heat functions. Connect them according to the color-coded or labeled connectors. Plug the power adapter into the chair's power input and then into a standard wall outlet.

6. **Final Checks:**

   Once assembled, gently test the chair's stability, reclining mechanism, and swivel function before full use. Ensure all zippers are closed and fabric covers are neatly secured.

Operating Instructions

Reclining Function

To recline the chair, locate the side tab on the right-hand side (when seated). Pull the tab to release the footrest. Lean back gently to recline the backrest to your desired position (up to 150°). To return to the upright position, push down on the footrest with your legs and lean forward. The chair will lock back into place.



Image: Illustrations of the recliner chair in various positions, including 150° for sleeping, 120° for watching TV, and 105° for reading, demonstrating the manual reclining feature.

Vibration Massage and Heat Functions

The chair features eight vibrating points and lumbar heating, controlled by the included remote. Ensure the chair is plugged into a power outlet.

- **Power On/Off:** Press the power button on the remote to activate or deactivate the massage and heat functions.
- **Massage Modes:** Select from five customizable massage modes (M1-M5) using the remote.
- **Intensity:** Adjust the massage intensity (High, Medium, Low) using the remote.
- **Target Areas:** Select specific massage areas (Thigh, Lumbar, Back) as desired.
- **Heat Function:** Activate the lumbar heating function using the dedicated heat button on the remote.
- **Timer:** Set the massage duration using the timer function (e.g., 15, 30, 60 minutes).



Image: A visual representation of the eight vibration massage points and the lumbar heating area on the chair, alongside the remote control with buttons for power, modes, intensity, target areas, and timer.

Swivel and Rocking Functions

The chair is designed with a 360° swivel base and a gentle rocking motion for added comfort. These functions operate freely without specific controls.

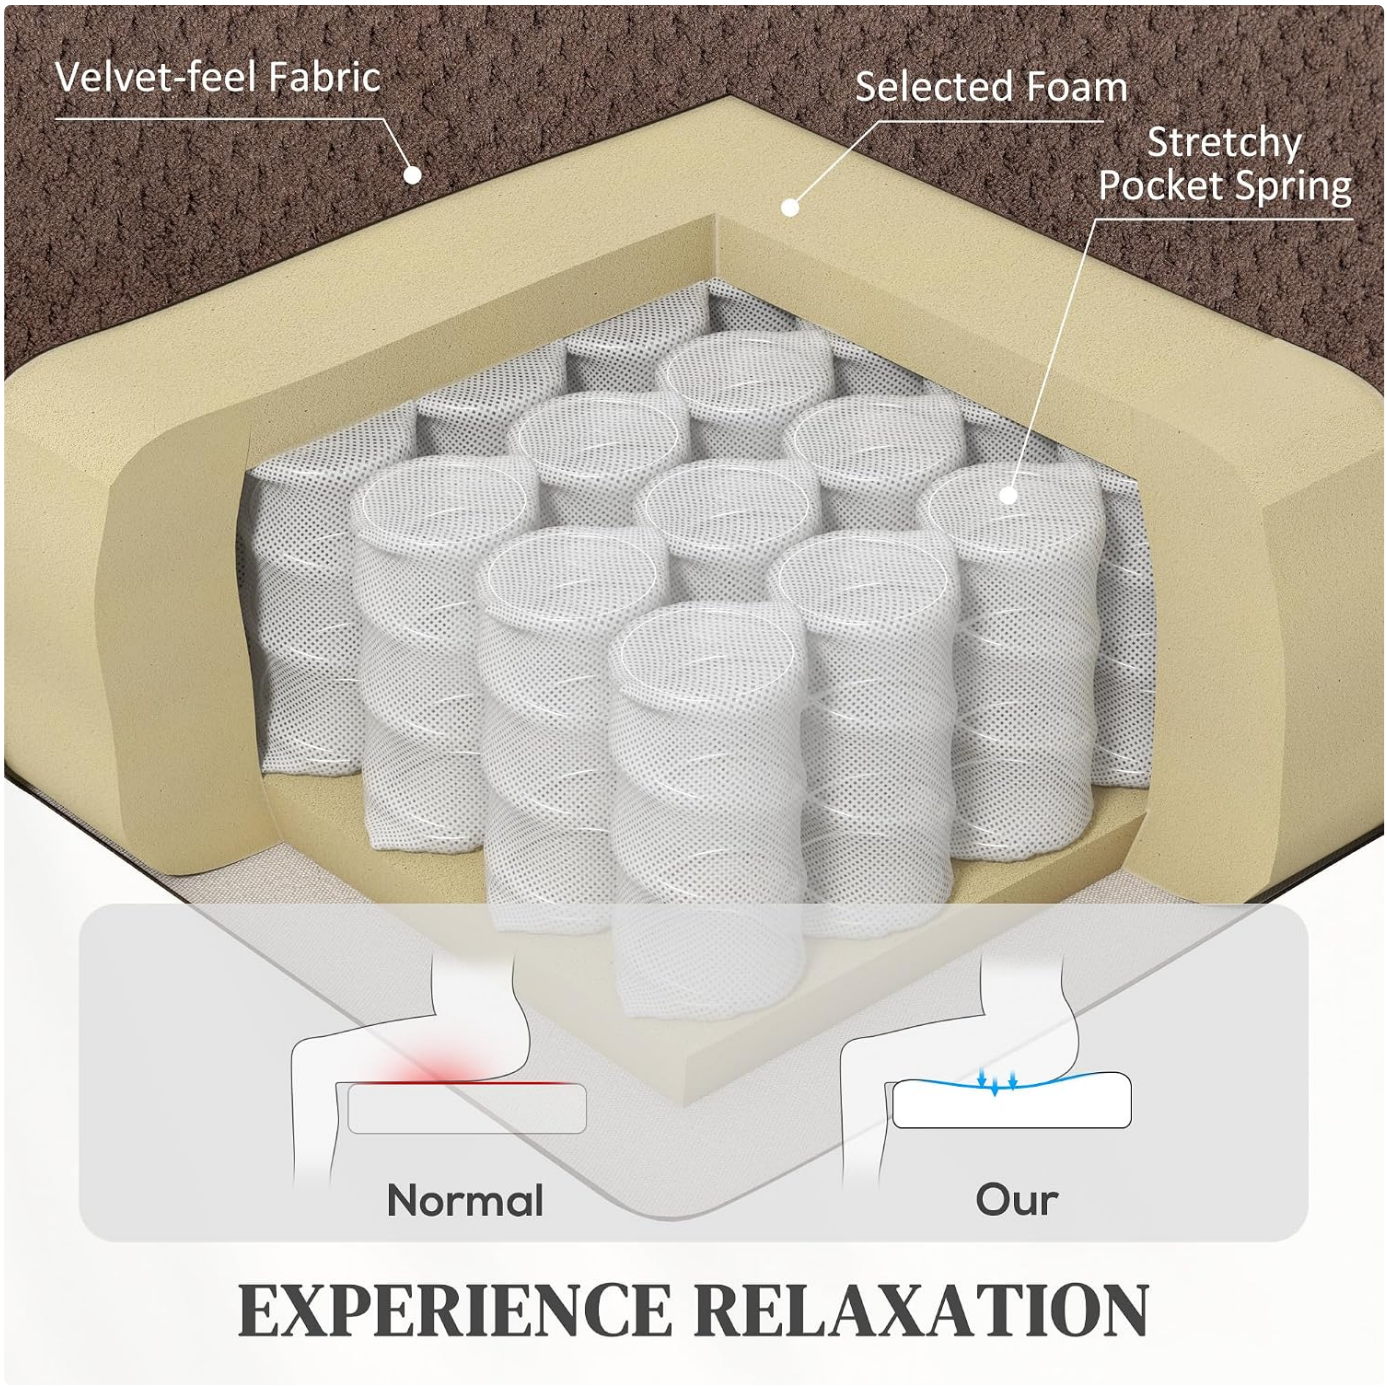


Image: A woman comfortably seated in the recliner, with arrows indicating the 360° swivel base and rocking function.

Side Pockets

Two convenient side pockets are integrated into the armrests, providing storage for the remote control, magazines, or other small items.

Maintenance

- **Cleaning:** Wipe clean with a damp cloth. For spills, blot immediately with a clean, dry cloth. Avoid abrasive cleaners or harsh chemicals.
- **Fabric Care:** The chair features a soft velvet-feel fabric. Regular light vacuuming can help maintain its appearance.
- **Inspection:** Periodically check all bolts and connections to ensure they remain tight. Retighten if necessary.
- **Electrical Care:** Keep electrical cords away from heat sources and sharp objects. Unplug the chair when not in use for extended periods.



Image: A hand touching the soft, textured velvet-feel fabric of the recliner chair, highlighting its material quality.

Troubleshooting

Problem	Possible Cause	Solution
Difficulty reclining or staying reclined.	Mechanism not fully engaged; obstruction; worn parts.	Ensure the side tab is fully pulled. Check for any obstructions under the footrest or behind the backrest. Verify all assembly bolts are tight. If the issue persists, contact customer support.
Massage/Heat functions not working.	Power not connected; remote battery low; loose connection.	Check if the power adapter is securely plugged into both the chair and the wall outlet. Ensure all internal electrical connections are firm. Replace remote batteries if applicable.
Chair feels unstable or wobbly.	Loose assembly bolts; uneven floor.	Recheck and tighten all assembly bolts, especially those connecting the armrests and backrest. Ensure the chair is placed on a flat, level surface.

Specifications

Brand	HOMCOM
Model Name	Massage Recliner Chair
Item Model Number	700-176V80BN
Color	Brown
Material	Velvet (100% Polyester), Foam Fill
Upright Dimensions (W x D x H)	36.2" x 36.2" x 40.2"
Reclined Dimensions (W x D x H)	37.8" x 63" x 31.5"
Seat Height	19.7"
Seat Depth	21.3"
Maximum Weight Recommendation	298 lbs (135 kg)
Item Weight	95 lbs (43 kg)
Special Features	Vibration Massage (8 points, 5 modes), Lumbar Heating, Manual Reclining (up to 150°), 360° Swivel, Rocking Function, Side Pockets
UPC	196393031643



Image: A technical drawing showing the key dimensions of the recliner chair in both upright and reclined positions, including height, width, depth, seat height, and footrest extension.

Warranty and Customer Support

For warranty information, replacement parts, or technical assistance, please contact HOMCOM customer support. Refer to your purchase documentation or the HOMCOM official website for contact details.

- **Online Support:** Visit the official HOMCOM website.
- **Phone Support:** Check your product packaging or HOMCOM website for contact numbers.
- **Email Support:** Refer to the HOMCOM website for email contact.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F1T6NM6S

More documents and user manuals: **https://manuals.plus/**