Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Uetmulik CTR R2T 01 MW

Uetmulik Power Recliner Lift Chair 4-Button Touch Sensor Switch User Manual

Model: CTR R2T 01 MW

1. Introduction

This manual provides instructions for the installation, operation, and maintenance of the Uetmulik Power Recliner Lift Chair 4-Button Touch Sensor Switch, Model CTR R2T 01 MW. This replacement switch is designed for power recliners, specifically compatible with Raffel Systems and ManWah models, controlling both the power headrest and power backrest functions.

2. Important Safety Information

- Always unplug the recliner from the power outlet before performing any installation, cleaning, or maintenance.
- Keep the switch and all electrical components dry. Avoid exposure to liquids.
- Do not attempt to modify or repair the switch yourself. Contact qualified personnel for service.
- Ensure all connections are secure before operating the recliner.
- Keep children and pets away from moving parts of the recliner during operation.

3. Package Contents

Verify that all items are present in the package:

- 4-Button Touch Sensor Switch (Model CTR R2T 01 MW)
- Touch Sensor Base Plate
- Mounting Screws



Image 1: Overview of the Uetmulik 4-Button Touch Sensor Switch, including the main control unit, touch sensors, and connecting cables.

4. Installation Instructions

Follow these steps to install the replacement touch sensor switch:

1. **Disconnect Power:** Ensure your recliner is unplugged from the wall outlet before beginning installation.
2. **Remove Old Switch:** Carefully remove the existing touch sensor switch from your recliner. Note how it was connected.
3. **Identify Connectors:** The new switch has two main connectors:
    - A standard **5-pin connector** for the recliner's main motor.
    - A **2-pin power cable** for the chair's headrest motor.
4. **Connect to Motor:** Plug the 5-pin connector from the new switch into the corresponding port on your recliner's motor. Ensure it clicks securely into place.
5. **Connect to Headrest:** Plug the 2-pin power cable into the headrest motor connection.

6. **Mount the Switch:** Position the new touch sensor base plate in the desired location on your recliner. Use the provided screws to secure it.
7. **Route Cables:** Carefully route all cables to prevent pinching or damage when the recliner operates.
8. **Restore Power:** Once all connections are secure and the switch is mounted, plug your recliner back into the power outlet.



Image 2: Detailed view of the 5-pin connector for the main motor and the 2-pin connector for the headrest motor, essential for proper installation.

5. Operating Your Recliner Switch

The 4-button touch sensor switch allows independent control of your recliner's headrest and backrest functions. The buttons are typically labeled as follows:

- **'M OPEN' / 'M CLOSE':** These buttons control the main backrest movement (recline/return to upright).
- **'S OPEN' / 'S CLOSE':** These buttons control the headrest movement (open/close or adjust angle).

To operate, gently touch the desired button. The recliner will respond to the input. Release the button when the desired position is reached.

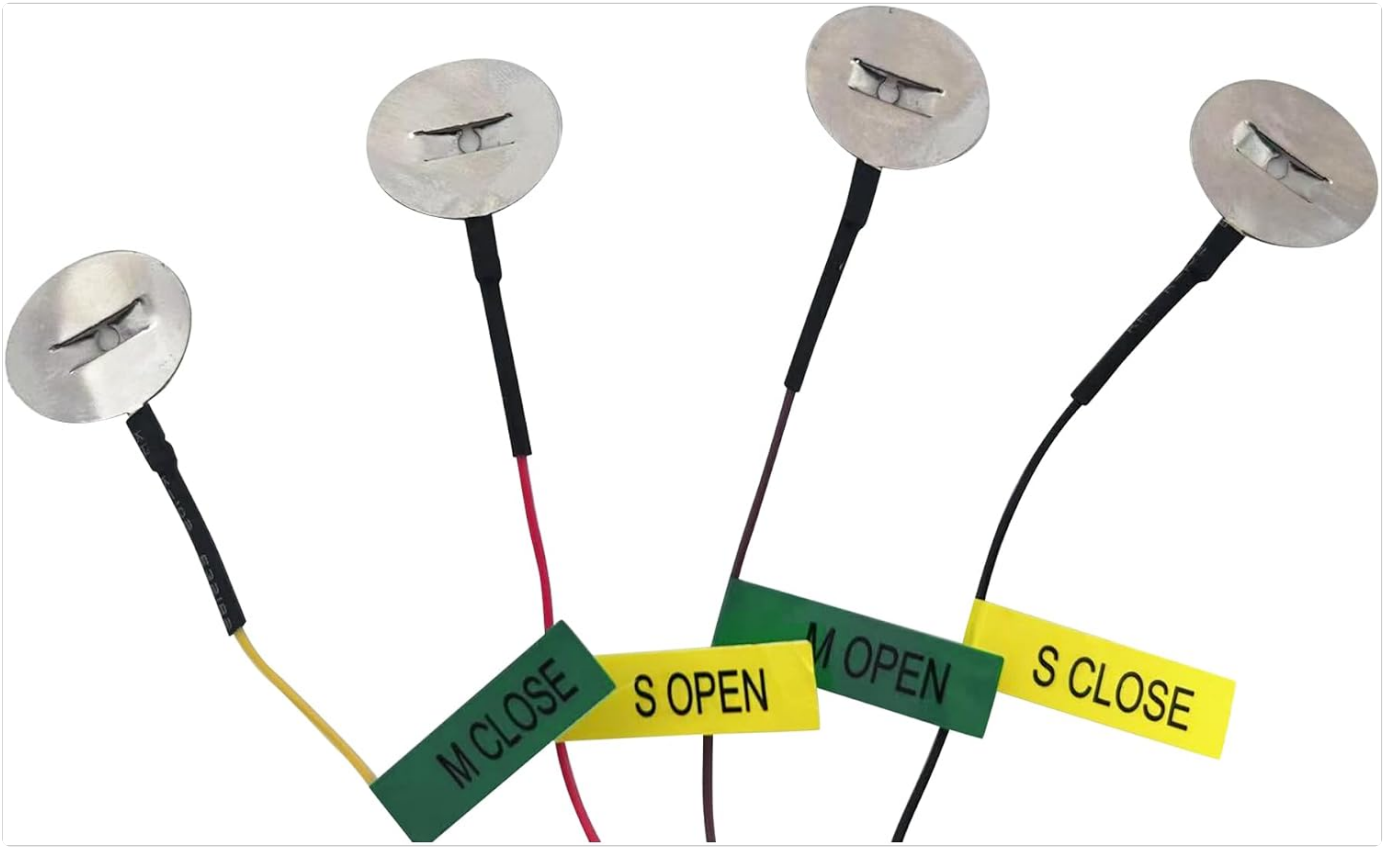


Image 3: Close-up of the four touch sensors, clearly showing the 'M CLOSE', 'S OPEN', 'M OPEN', and 'S CLOSE' labels for controlling the recliner's functions.

6. Care and Maintenance

- **Cleaning:** Wipe the surface of the touch sensor switch with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Inspection:** Periodically check the cables for any signs of wear, fraying, or damage. Ensure all connections remain secure.
- **Avoid Liquids:** Prevent liquids from spilling onto the switch or its connections.

7. Troubleshooting

- **Switch Not Responding:**
  - Ensure the recliner is properly plugged into a working power outlet.
  - Check all cable connections (5-pin motor, 2-pin headrest) to ensure they are securely seated.

- Verify that the power supply to the recliner is active.

- **Partial Functionality (e.g., only headrest works):**
  - Inspect the specific connector for the non-working function (e.g., 5-pin for backrest, 2-pin for headrest) for proper connection.
  - Ensure no cables are pinched or damaged.

- If issues persist after troubleshooting, contact customer support.

8. Product Specifications

Item Weight	8 ounces
Package Dimensions	9 x 7 x 2 inches
Item Model Number	CTR R2T 01 MW
ASIN	B0F1T8X5HM

9. Warranty and Customer Support

For warranty information or technical assistance, please refer to the product packaging or contact Uetmulik customer support directly. Keep your purchase receipt for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F1T8X5HM

More documents and user manuals: **https://manuals.plus/**