**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



## VECELO KHD-AO-SJZS01-BLK

# VECELO Electric Standing Desk User Manual

Brand: VECELO | Model: KHD-AO-SJZS01-BLK

## 1. Introduction

Thank you for purchasing the VECELO Electric Standing Desk. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new desk. Please read this manual thoroughly before use and retain it for future reference.



*Image 1.1: The VECELO Electric Standing Desk, showcasing its spacious black tabletop and sturdy frame, equipped with multiple devices.*

## 2. Product Specifications

The VECELO Electric Standing Desk is designed to provide a versatile and ergonomic workspace. Below are the key specifications:

- **Main Unit Size:** Width 120 cm × Depth 60 cm × Height 70.5-113 cm
- **Lifting Range:** 70.5 cm to 113 cm
- **Product Weight:** 19 kg
- **Load Capacity:** 60 kg

- **Top Plate Material:** Synthetic Resin Decorative Particle Board (Melamine Resin)
- **Leg Material:** Steel
- **Package Size:** 129.5 cm × 38.5 cm × 11.3 cm
- **Color:** Black




*Image 2.1: Detailed product specifications including dimensions, weight, and materials.*

## 3. Safety Information

To ensure safe operation and prevent damage, please adhere to the following safety guidelines:

- Always read the entire instruction manual before assembly and first use.
- Ensure all components are securely fastened before placing items on the desk.
- Do not exceed the maximum load capacity of 60 kg.
- Keep hands and objects clear of the moving parts during height adjustment to prevent pinching or damage.
- The desk is equipped with a lock function to prevent accidental operation, especially by children. Utilize this feature when the desk is not in active use.

- Avoid placing liquids directly on the desk surface without proper coasters or protection, although the surface is designed to be water-resistant.
- Do not attempt to modify or disassemble the motor or control unit. Contact customer support for any issues.




*Image 3.1: The desk's design emphasizes stability and safety, including a child lock feature.*

## 4. Package Contents

Verify that all components are present and undamaged upon opening the package. The package should contain:

- Electric Standing Desk Frame and Top Plate × 1 set
- Headphone Hook × 1
- Back Adhesive Cable Holder × 2
- Cable Box × 1
- Assembly Hardware (screws, tools, etc.)
- Instruction Manual × 1

## 5. Assembly Instructions

The VECELO Electric Standing Desk requires customer assembly. Please follow these general steps. Refer to the detailed assembly diagram and instructions included in your package for specific guidance.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Legs:** Attach the desk legs to the crossbar and motor assembly according to the provided diagrams. Ensure all screws are tightened securely.
3. **Attach Top Plate:** Carefully place the desk top plate onto the assembled frame. Align the pre-drilled holes and secure the top plate with the provided screws.
4. **Install Accessories:** Attach the headphone hook, cable holders, and cable box to the designated locations on the desk frame or underside of the tabletop.
5. **Connect Power:** Plug the power cable into the control box and then into a suitable power outlet.
6. **Initial Setup:** Perform the initial calibration as described in the specific manual (usually involves lowering the desk to its lowest point and holding the down button for a few seconds).

***Note:*** *It is recommended to have two people for assembly to ensure stability and prevent damage.*

## 6. Operating Instructions

Your VECELO Electric Standing Desk features intuitive controls for height adjustment and memory functions.




*Image 6.1: The multi-function touch control panel for desk operation.*

## 6.1. Height Adjustment

- **Raise Desk:** Press and hold the ▲ button to raise the desk to your desired height.
- **Lower Desk:** Press and hold the ▼ button to lower the desk to your desired height.

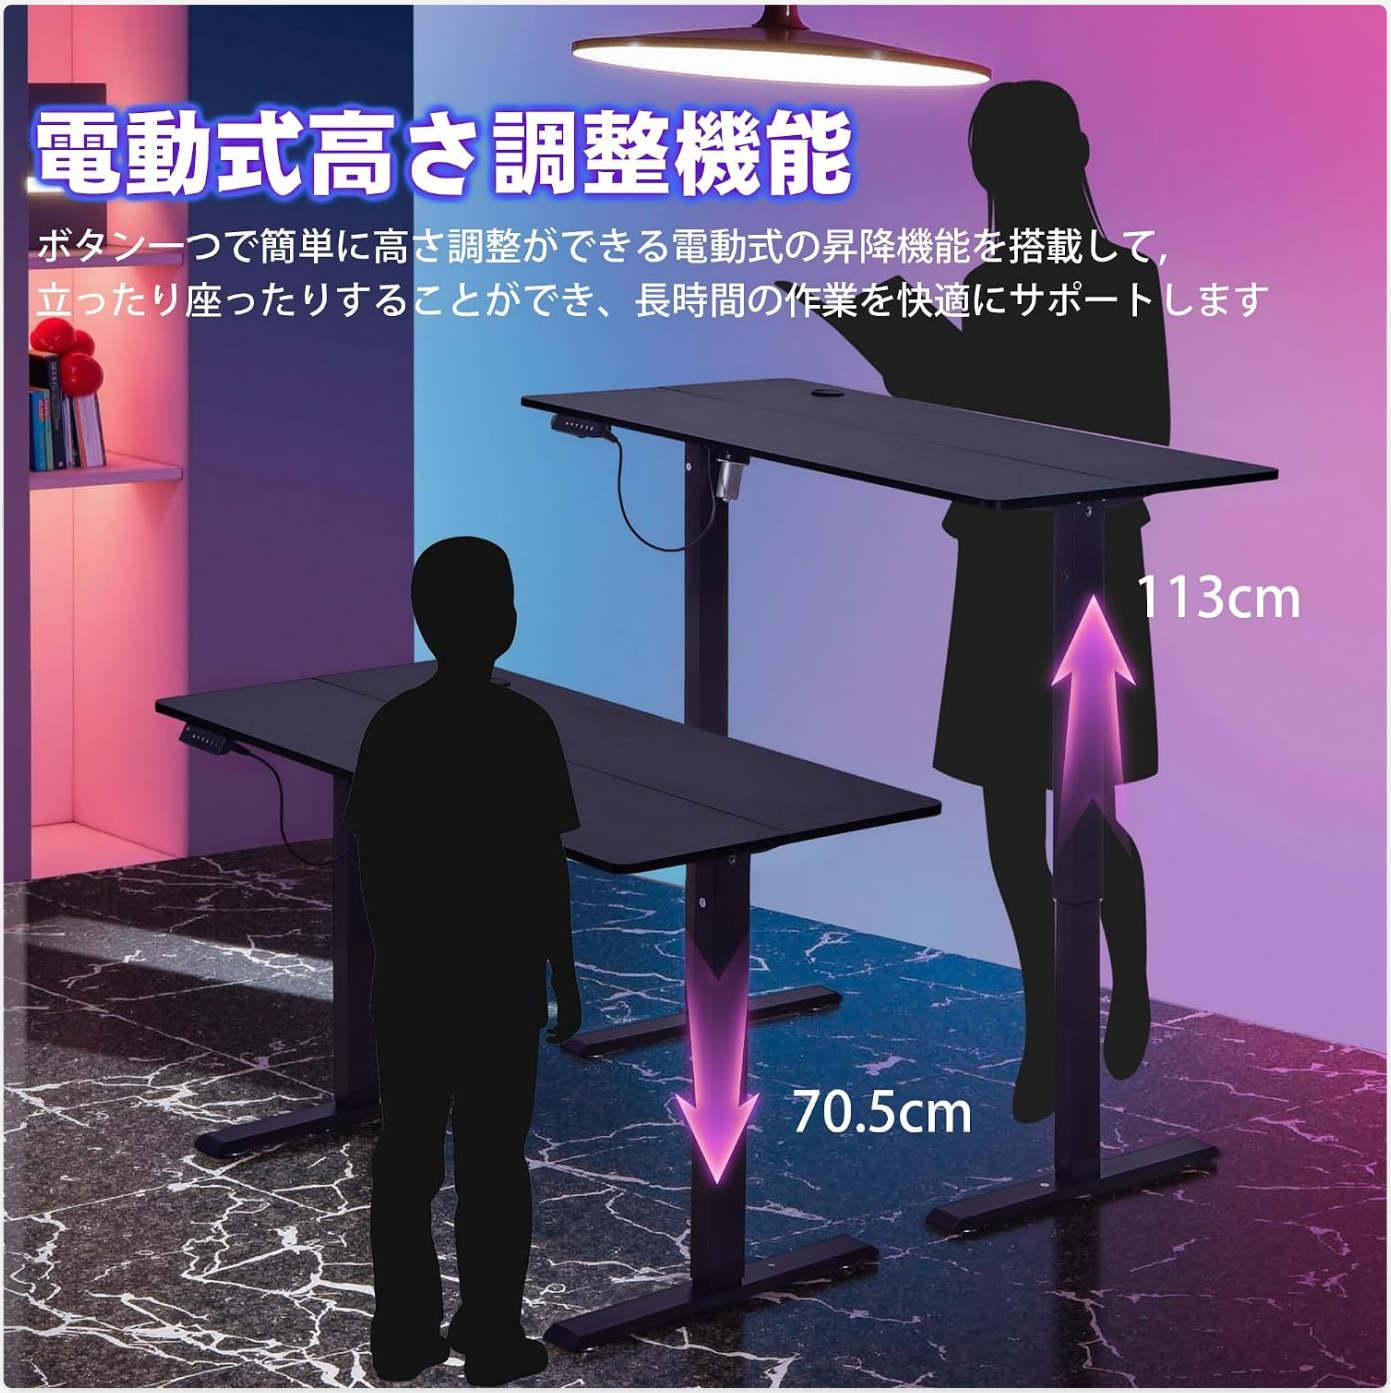



*Image 6.2: Visual representation of the desk's electric height adjustment capability.*

## 6.2. Memory Function (3 Presets)

The desk allows you to save up to three preferred height settings for quick adjustments.

1. **Set a Memory Position:**
    - Adjust the desk to your desired height using the UP/DOWN buttons.
    - Press the **SET (S)** button once.
    - Within 3 seconds, press one of the memory buttons (**1**, **2**, or **3**) to save the current height to that preset.
2. **Recall a Memory Position:**
    - Simply press the desired memory button (**1**, **2**, or **3**). The desk will automatically move to the saved height.

## 6.3. Lock Function

To prevent accidental height adjustments, especially by children, the control panel can be locked.

- **Activate Lock:** Press and hold the **SET (S)** button for approximately 5 seconds until "LOC" or a lock icon appears on the display (if available) or the buttons become unresponsive.
- **Deactivate Lock:** Press and hold the **SET (S)** button again for approximately 5 seconds until "LOC" disappears or the buttons become responsive.

## 7. Maintenance

Regular maintenance will help prolong the life of your VECELO Electric Standing Desk.

- **Cleaning:** Wipe the desk surface and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish. The melamine resin top is designed to be resistant to scratches, stains, water, and heat, making cleaning easy.
- **Check Connections:** Periodically check all screws and connections to ensure they remain tight.
- **Cable Management:** Utilize the provided cable holders and cable box to keep wires tidy and prevent them from interfering with the desk's movement.
- **Adjustable Feet:** The desk is equipped with adjustable feet. If the desk wobbles, gently adjust the feet at the bottom of the legs to ensure stability on uneven floors.




*Image 7.1: The desk surface is durable and easy to clean, and features adjustable feet for stability.*

## 8. Troubleshooting

If you encounter any issues with your VECELO Electric Standing Desk, please refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|---|---|---|
| Desk does not move. | • Power cable disconnected.<br>• Control panel locked.<br>• Overload protection activated. | • Check if the power cable is securely plugged into the desk and the wall outlet.<br>• Deactivate the lock function by holding the SET (S) button for 5 seconds.<br>• Remove some weight from the desk. |

| Problem | Possible Cause | Solution |
|---|---|---|
| Desk moves unevenly or makes unusual noise. | • Loose connections or screws.<br>• Obstruction in the lifting mechanism. | • Check and tighten all assembly screws.<br>• Inspect the lifting columns for any obstructions and remove them. |
| Memory function not working. | • Incorrect saving procedure. | • Ensure you press SET (S) then the memory button (1, 2, or 3) within 3 seconds. |

If the problem persists after attempting these solutions, please contact VECELO customer support for further assistance.

## 9. Warranty and Support

VECELO is committed to providing high-quality products and customer satisfaction.

- **Warranty:** Specific warranty details are typically included with your product packaging or can be found on the official VECELO website. Please retain your proof of purchase for warranty claims.
- **Customer Support:** For any questions, technical assistance, or warranty inquiries, please contact VECELO customer support. You can often find contact information on the product packaging, the VECELO brand store on Amazon, or their official website.



*Image 9.1: VECELO offers dedicated customer support for product assistance.*

© 2025 VECELO. All rights reserved.

For more information, visit the VECELO Brand Store.

### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B0F1Y49FF4**

More documents and user manuals: **https://manuals.plus/**