Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

MCHOSE MC-G7

MCHOSE G7 Lightweight Ergonomic Wireless Mouse User Manual

Model: MC-G7

1. Introduction

Thank you for choosing the MCHOSE G7 Lightweight Ergonomic Wireless Mouse. This manual provides essential information for setting up, operating, and maintaining your mouse to ensure optimal performance and longevity. The G7 mouse is designed for precision and comfort, featuring tri-mode connectivity, a high-performance PAW3311 sensor, and an ultra-lightweight design.

2. Package Contents

Please check the package for the following items:

- MCHOSE G7 Wireless Gaming Mouse (White)
- USB Receiver (2.4GHz)
- USB-C Charging Cable
- User Manual (this document)



Image: The MCHOSE G7 white wireless mouse shown alongside its USB receiver.

3. Product Overview

Familiarize yourself with the key components of your MCHOSE G7 mouse:

- **Left/Right Click Buttons:** Standard mouse buttons.

- **Scroll Wheel:** For vertical scrolling and middle-click functionality.
- **DPI Button:** Cycles through DPI settings.
- **Side Buttons (Forward/Backward):** Programmable buttons, typically for navigation.
- **USB-C Port:** For charging and wired connection.
- **Tri-Mode Switch (Bottom):** Toggles between 2.4GHz wireless, Bluetooth, and Off modes.
- **Optical Sensor (Bottom):** PAW3311 sensor for tracking movement.



Image: The underside of the MCHOSE G7 mouse, highlighting the 2.4G/OFF/B (Bluetooth) switch and the optical sensor.

4. Setup

4.1 Charging the Mouse

Before first use, it is recommended to fully charge the mouse. Connect the supplied USB-C charging cable to the mouse's USB-C port and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The LED indicator will show charging status and turn off when fully charged. The 800mAh battery provides extended usage time.



Image: An internal view of the MCHOSE G7 mouse, illustrating the placement of the 800mAh rechargeable battery.

4.2 Connecting the Mouse

The MCHOSE G7 offers three connection modes: 2.4GHz Wireless, Bluetooth, and Wired.

2.4GHz Wireless Connection:

1. Locate the USB receiver, usually stored in a compartment on the underside of the mouse.
2. Plug the USB receiver into an available USB port on your computer.
3. Set the tri-mode switch on the bottom of the mouse to the '2.4G' position.
4. The mouse should automatically connect to your computer.

Bluetooth Connection:

1. Set the tri-mode switch on the bottom of the mouse to the 'B' (Bluetooth) position.
2. On your computer, open Bluetooth settings and search for new devices.
3. Select 'MCHOSE G7' from the list of available devices to pair.

Wired Connection:

1. Connect the USB-C charging cable to the mouse's USB-C port.
2. Connect the other end of the cable to a USB port on your computer.
3. The mouse will function as a wired mouse and charge simultaneously.



Image: The MCHOSE G7 mouse, emphasizing its low-latency wireless performance.

5. Operating the Mouse

5.1 DPI Adjustment

The MCHOSE G7 mouse features a PAW3311 sensor with adjustable DPI up to 12,000. Press the DPI button (located behind the scroll wheel) to cycle through different DPI settings. Each press will change the sensitivity, allowing you to find the optimal speed for your tasks or gaming.



Image: An illustration of the PAW3311 sensor chip, highlighting its role in precise cursor control.

5.2 Custom Software

For advanced customization, including remapping buttons, adjusting polling rates, and fine-tuning DPI steps, download the MCHOSE custom software from the official MCHOSE website. This software allows you to personalize the mouse settings to match your specific gaming and productivity needs.

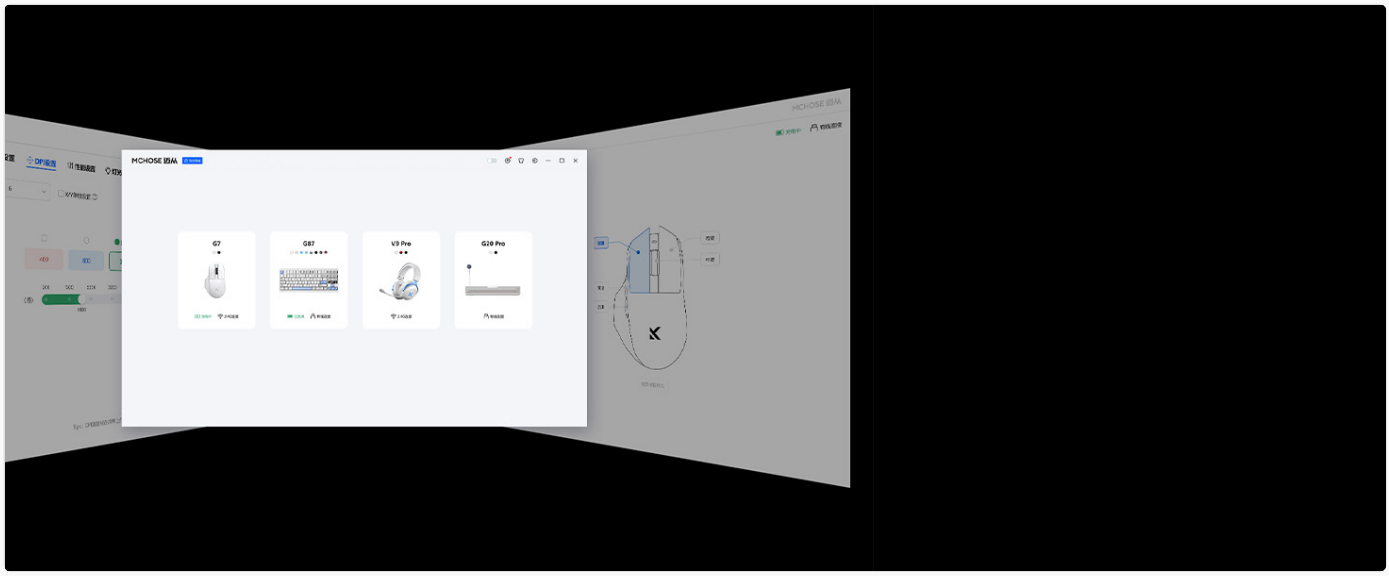


Image: A visual representation of the MCHOSE custom software interface, showing options for device selection and customization.

6. Maintenance

To ensure the longevity and optimal performance of your MCHOSE G7 mouse, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the mouse. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials.
- **Sensor Care:** Keep the optical sensor on the bottom of the mouse clean and free from dust or debris. Use a cotton swab or compressed air if necessary.
- **Storage:** When not in use for extended periods, store the mouse in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** Avoid fully discharging the battery frequently. Charge the mouse when the battery indicator is low.



Image: An internal view of the MCHOSE G7 mouse, illustrating the durable switches designed for a 60-million click lifespan.

7. Troubleshooting

If you encounter issues with your MCHOSE G7 mouse, refer to the following common problems and solutions:

Problem	Possible Solution
Mouse not responding	Ensure the mouse is charged. Check the tri-mode switch on the bottom of the mouse is in the correct position (2.4G, B, or Wired). For 2.4GHz, ensure the USB receiver is securely plugged in. Try a different USB port. For Bluetooth, ensure Bluetooth is enabled on your computer and the mouse is paired. Try connecting via wired mode to confirm basic functionality.

Problem	Possible Solution
Cursor movement is erratic or jumpy	Clean the optical sensor on the bottom of the mouse. Ensure you are using the mouse on a suitable surface (non-reflective, uniform color). Reduce wireless interference by moving the receiver closer to the mouse or away from other wireless devices.
DPI adjustment not working	Ensure the mouse is powered on and connected. If using custom software, check if the DPI button has been remapped.
Battery drains quickly	Ensure the mouse is fully charged before use. Turn off the mouse using the switch on the bottom when not in use.

If the problem persists, please contact MCHOSE customer support.

8. Specifications

Feature	Detail
Model Number	MC-G7
Connectivity Technology	Bluetooth, USB (Wired), 2.4GHz RF
Movement Detection Technology	Optical (PAW3311 Sensor)
Max DPI	12,000 DPI
Polling Rate	Up to 1000Hz
Weight	55 grams (approx. 2.12 ounces)
Battery Capacity	800mAh
Switch Lifespan	60 million clicks
Product Dimensions	5 x 2.94 x 0.1 inches
Color	White
Manufacturer	Mchose
Country of Origin	China

9. Warranty and Support

MCHOSE products come with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official MCHOSE website. If you require technical support, troubleshooting assistance, or have questions about your MCHOSE G7 mouse, please contact MCHOSE customer service through their official channels.
For the latest drivers and software, please visit theMCHOSE Store on Amazon or the official MCHOSE website.

© 2025 MCHOSE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F1YFD3GK

More documents and user manuals: **https://manuals.plus/**