hykolity TF3807TR-L

hykolity TF3807TR-L 38-inch Oscillating Tower Fan User Manual

Model: TF3807TR-L

1. Introduction

Thank you for choosing the hykolity TF3807TR-L 38-inch Oscillating Tower Fan. This manual provides essential information for the safe and efficient operation of your new fan. Please read it thoroughly before use and retain it for future reference.

2. Safety Instructions

- Always unplug the fan before cleaning, servicing, or moving it.
- Do not insert fingers or foreign objects into any openings of the fan.
- Ensure the fan is placed on a stable, level surface to prevent tipping.
- Do not operate the fan with a damaged cord or plug. Contact customer service for repairs.
- Keep the fan away from water and moisture. Do not use it in bathrooms or wet environments.
- This fan is designed for indoor use only.
- Supervise children when the fan is in operation.

3. Package Contents

- hykolity TF3807TR-L Tower Fan Unit
- Base Plate (2 halves)
- Remote Control
- User Manual

4. Product Overview

Fan Components



Figure 1: hykolity TF3807TR-L Tower Fan

Control Panel



Figure 2: Top-mounted touch control panel with digital display.

- **MODE:** Cycles through Normal, Natural, Sleep, and Child modes.
- **TIMER:** Sets the auto-off timer (1-12 hours).
- **POWER:** Turns the fan On/Off.
- **OSC (Oscillation):** Activates/deactivates 90° oscillation.
- **SPEED:** Adjusts fan speed (3 levels).

Remote Control

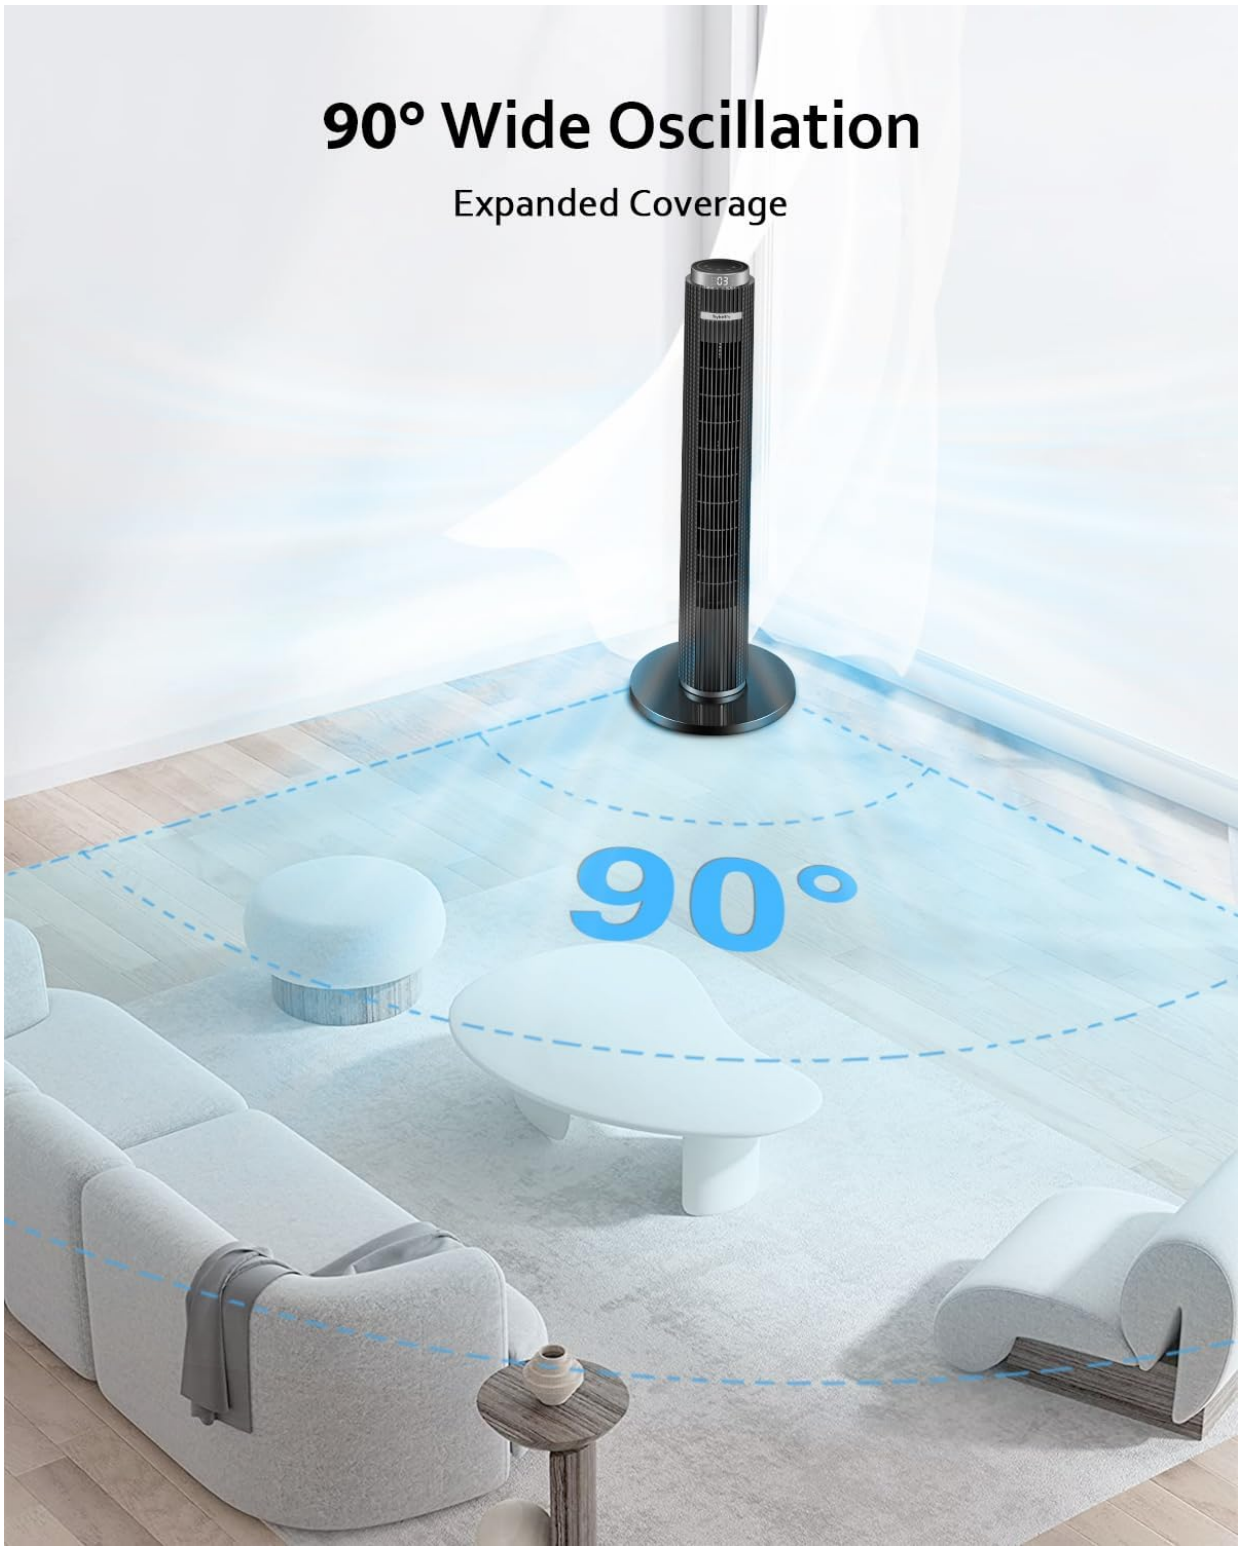


Figure 3: Remote control for convenient operation.

The remote control provides full functionality of the fan from a distance. It includes buttons for Power, Mode, Speed, Timer, Oscillation, Mute, and LED display control. The fan features a dedicated storage slot for the remote on its backside.

5. Setup

The hykolity TF3807TR-L Tower Fan features a tool-free setup process.

1. Carefully remove all components from the packaging.
2. Assemble the two halves of the base plate.
3. Align the assembled base plate with the bottom of the fan unit and secure it by twisting or using the provided fasteners (if any, typically integrated for tool-free design).

4. Place the fan on a firm, level surface.
5. Plug the power cord into a standard 110V AC electrical outlet.



Figure 4: Tool-free base assembly and fan dimensions.

6. Operation

Operate your hykolity tower fan using either the top control panel or the remote control.

Power On/Off

- Press the **POWER** button once to turn the fan on.
- Press the **POWER** button again to turn the fan off.

Adjusting Fan Speed

- Press the **SPEED** button repeatedly to cycle through 3 fan speed settings (Low, Medium, High).

Operating Modes

The fan offers 4 distinct operating modes:



Figure 5: Fan operating modes.

- **Normal Mode:** Provides a constant airflow at the selected speed.
- **Natural Mode:** Simulates natural breezes by varying fan speed.
- **Sleep Mode:** Operates at a lower, quieter speed with a dimmable LED display for undisturbed rest.
- **Child Mode:** Designed for gentle, consistent airflow suitable for children's rooms.

Press the **MODE** button repeatedly to cycle through these modes.

Oscillation Function

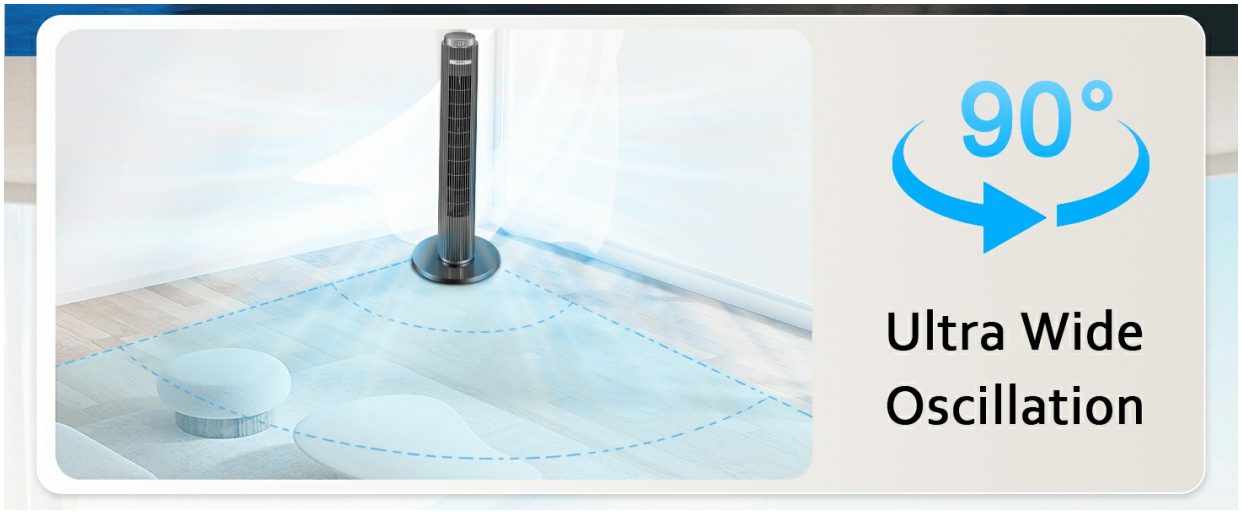


Figure 6: 90° Wide Oscillation.

- Press the **OSC** button once to activate the 90° wide-angle oscillation.
- Press the **OSC** button again to stop oscillation.

Timer Function



Figure 7: 1-12 Hours Timer.

- Press the **TIMER** button repeatedly to set the desired auto-off time in 1-hour increments, up to 12 hours.
- The display will show the remaining time.
- To cancel the timer, cycle through the settings until '00' is displayed or turn the fan off.

LED Display Control (Remote Only)

- Use the dedicated LED button on the remote control to turn the digital display on or off, useful for nighttime use.

7. Maintenance

Regular cleaning helps maintain the fan's performance and extends its lifespan.

- **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Air Inlet/Outlet:** Use a vacuum cleaner with a brush attachment to gently remove dust from the air inlet and outlet grilles.
- **Storage:** When not in use, store the fan in a cool, dry place. Use the integrated cable hook on the back to neatly store the power cord.
- Do not immerse the fan in water or any other liquid.

8. Troubleshooting

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; Power outlet not working; Power button not pressed.	Ensure the fan is securely plugged into a working outlet. Press the Power button.
Weak airflow.	Fan speed is too low; Air inlets/outlets are blocked.	Increase fan speed. Clean any dust or obstructions from the grilles.
Fan is noisy.	Fan is not on a level surface; Obstruction in the fan.	Place the fan on a stable, level surface. Check for and remove any foreign objects.
Remote control not working.	Batteries are dead or incorrectly inserted; Obstruction between remote and fan.	Replace batteries. Ensure clear line of sight to the fan's receiver.

9. Specifications

Feature	Specification
Model Number	TF3807TR-L
Brand	hykolity
Dimensions (D x W x H)	12.4"D x 12.39"W x 38"H
Item Weight	7.48 Pounds
Power Source	AC
Voltage	110 Volts
Wattage	45 watts
Number of Speeds	3
Operating Modes	Normal, Natural, Sleep, Child (4 modes)
Oscillation	90° Wide-Angle
Timer	1-12 Hours
Noise Level	28 Decibels

Feature	Specification
Control Method	Remote, Touch Panel
Material	Plastic
Indoor/Outdoor Use	Indoor Only

10. Warranty and Support

For warranty information and customer support, please refer to the documentation included with your product or visit the official hykolity website. You may also contact the seller directly for assistance.