Mova X4 Pro

Mova X4 Pro Wet Dry Vacuum Cleaner User Manual

Model: X4 Pro

Introduction

Thank you for choosing the Mova X4 Pro Wet Dry Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.



Figure 1: Mova X4 Pro Wet Dry Vacuum Cleaner and included accessories.

Included Components

The Mova X4 Pro package includes the following items:

- Main Body (1)
- Handle (1)
- Spare Roller Brush (1)
- Charging Base (1)
- Replacement Filter (1)
- Cleaning Brush (1)

- Cleaning Solution (1)

Setup Guide

1. **Assembly:** Insert the handle into the main body until it clicks securely into place.
2. **Charging Base Placement:** Place the charging base on a flat, stable surface near a power outlet. Ensure there is enough space around the base for easy docking.
3. **Initial Charge:** Connect the power adapter to the charging base and plug it into a wall outlet. Push the vacuum cleaner directly into the station for seamless docking and charging. The LED display will indicate charging status. A full charge takes approximately 45 minutes.
4. **Fill Clean Water Tank:** Remove the clean water tank, fill it with tap water (and cleaning solution if desired, following solution instructions), and reattach it securely.



Figure 2: Seamless push-in docking for charging and self-cleaning. No lifting or flipping is required.

Operating Instructions

Power On/Off

Press the power button on the handle to turn the unit on or off. The LED display will activate upon power-on.

Cleaning Modes

- **Smart Mode:** The vacuum automatically adjusts suction power based on detected dirt levels (light, medium, heavy dirt) for optimized cleaning and energy usage. This mode provides approximately 45 minutes of runtime.
- **Hot-Water Mode:** For stubborn messes, activate the hot water mopping function. The X4 Pro rapidly heats water to 176°F (80°C) and delivers a continuous flow for effective cleaning. A powerful 20,000Pa SpotHeat spray can be activated for concentrated stain removal. This mode provides approximately 25 minutes of runtime.

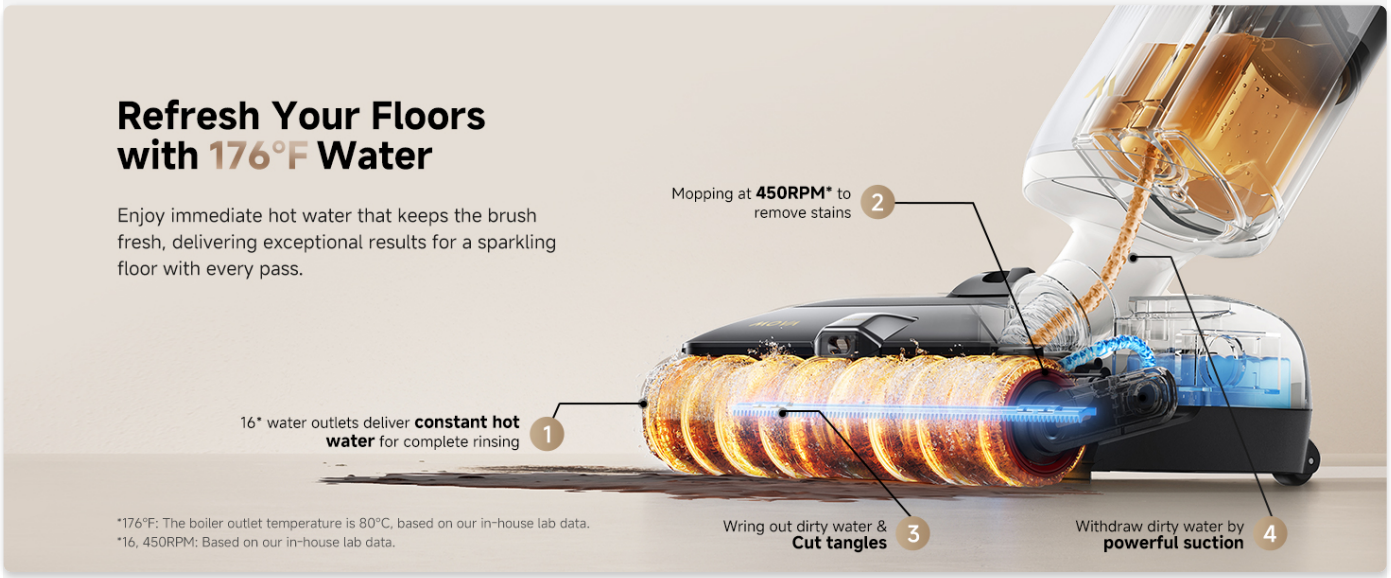


Figure 3: The Mova X4 Pro utilizes 176°F hot water and a 450 RPM brush to effectively remove stains.

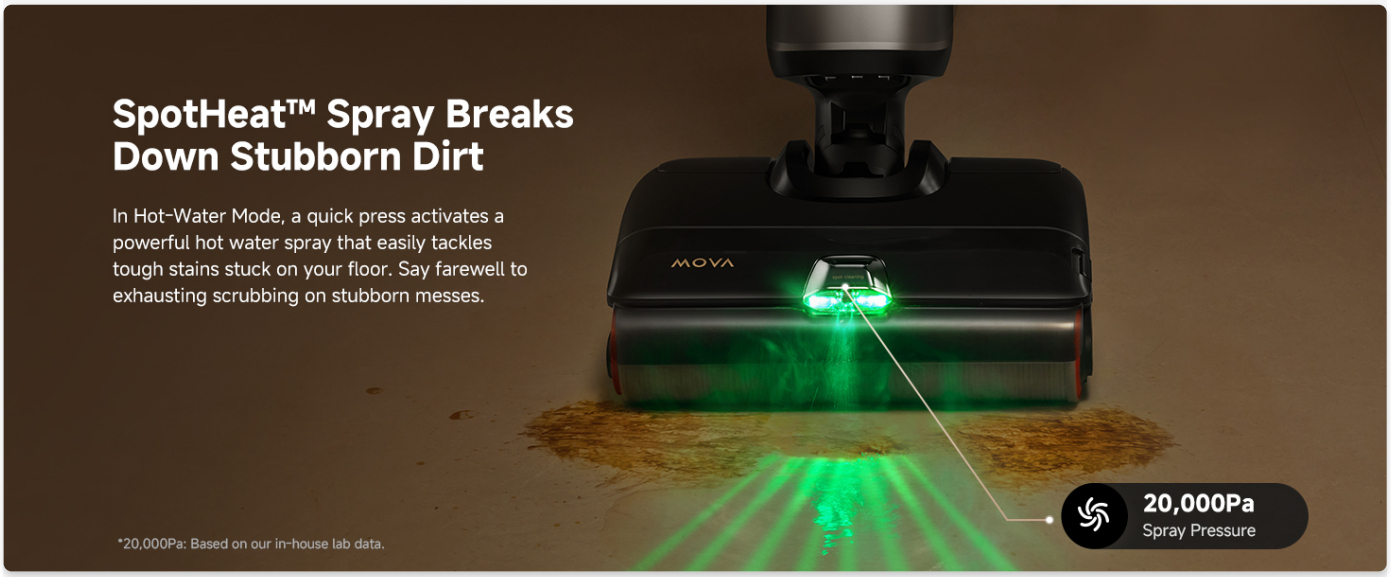


Figure 4: The SpotHeat™ Spray delivers 20,000Pa spray pressure to break down stubborn dirt.

Advanced Features

- **180° Lie-Flat Design:** The X4 Pro can lay completely flat, allowing you to effortlessly clean under furniture and in hard-to-reach areas. The brush head is as low as 3.5 inches, and the main body is 5.1 inches, ensuring thorough cleaning in tight spaces.

- **60° Swivel Capability:** Navigate around obstacles and furniture legs with ease thanks to the flexible 60° swivel head.
- **Zero Tangle Technology:** The powerful 20,000Pa suction combined with a toothed scraper comb prevents hair from tangling around the roller brush, ensuring consistent performance.
- **LED-Lit Brush Head:** The integrated LED lights on the brush head illuminate dark areas, making hidden dirt and debris visible for a more thorough clean.



Figure 5: The 180° lie-flat reach and 60° swivel allow access to tight spaces and corners.



Figure 6: Advanced Tangle-Free™ Solution with serrated brush scraper to prevent hair tangles.

Official Product Video

Your browser does not support the video tag.

Video 1: Official Mova X4 Pro Wet Dry Vacuum Cleaner demonstration, showcasing its features and cleaning capabilities.

Maintenance

Self-Cleaning and Drying

After each use, place the Mova X4 Pro on its charging base to initiate the self-cleaning cycle. The roller brush undergoes a 212°F hot water rinse to dissolve residue, followed by 194°F sealed hot air drying. This process ensures the brush remains fluffy, odor-free, and sanitized. You can choose between two drying modes: fast (5 minutes) or quiet (15-30 minutes).



Figure 7: The self-cleaning cycle uses 212°F hot water for brush washing and 194°F hot air for drying.

Regular Cleaning

- **Empty Dirty Water Tank:** After each use, empty the dirty water tank and rinse it thoroughly with clean water.
- **Clean Filter:** The replacement filter should be rinsed regularly and allowed to air dry completely before reinserting. Replace the filter periodically as needed.
- **Wipe Down Unit:** Use a damp cloth to wipe down the exterior of the vacuum cleaner. Do not submerge the main unit in water.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is low or depleted	Place the vacuum on the charging base and allow it to charge fully.
Poor suction	Dirty water tank is full, clean water tank is empty, or filter is clogged.	Empty dirty water tank, refill clean water tank, clean or replace filter.
Roller brush not spinning	Obstruction in brush head or brush is tangled.	Remove any obstructions. Run self-cleaning cycle to detangle brush.
Water leakage	Tanks not properly installed or seals are damaged.	Ensure both clean and dirty water tanks are securely latched. Check seals for damage.

Specifications

Brand: Mova

Model Name: X4 Pro

Item Weight: 11.7 Pounds (5.3 kg)

Product Dimensions: 13"D x 17"W x 45"H (33cm D x 43cm W x 114cm H)

Clean Water Tank Volume: 760 Milliliters

Power Source: Battery Powered (1 x 12V battery included)

Voltage: 120 Volts

Maximum Temperature (Hot Water): 176°F (80°C)

Maximum Temperature (Brush Washing): 212°F (100°C)

Maximum Temperature (Hot Air Drying): 194°F (90°C)

Suction Power: 20,000Pa

Runtime (Smart Mode): Up to 45 minutes

Runtime (Hot-Water Mode): Up to 25 minutes

Surface Recommendation: Hard Floor, Hardwoods, Bare Floor, Tile, Sealed Wood, Vinyl, Laminate

Warranty and Support

For warranty information, technical support, or to purchase replacement parts, please refer to the contact information provided on the Mova official website or your purchase documentation. Keep your proof of purchase for warranty claims.

© 2025 Mova. All rights reserved.