ChooChoo ET2410-BK

ChooChoo Wedge End Table ET2410-BK Instruction Manual

Model: ET2410-BK

Introduction

Thank you for purchasing the ChooChoo Wedge End Table. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.

Important Safety Information

For your safety and to prevent damage to the product, please observe the following:

- Always follow the assembly instructions carefully.
- Ensure the table is assembled correctly and securely to prevent tipping or collapse.
- Do not exceed the weight limit of the table.
- Keep small parts away from children during assembly.
- Place the table on a flat, stable surface.

Package Contents

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Tabletop (1)
- Bottom Shelf (1)
- Legs (4)
- Assembly Hardware (Screws, dowels, etc.)
- Assembly Tool (Small screwdriver)

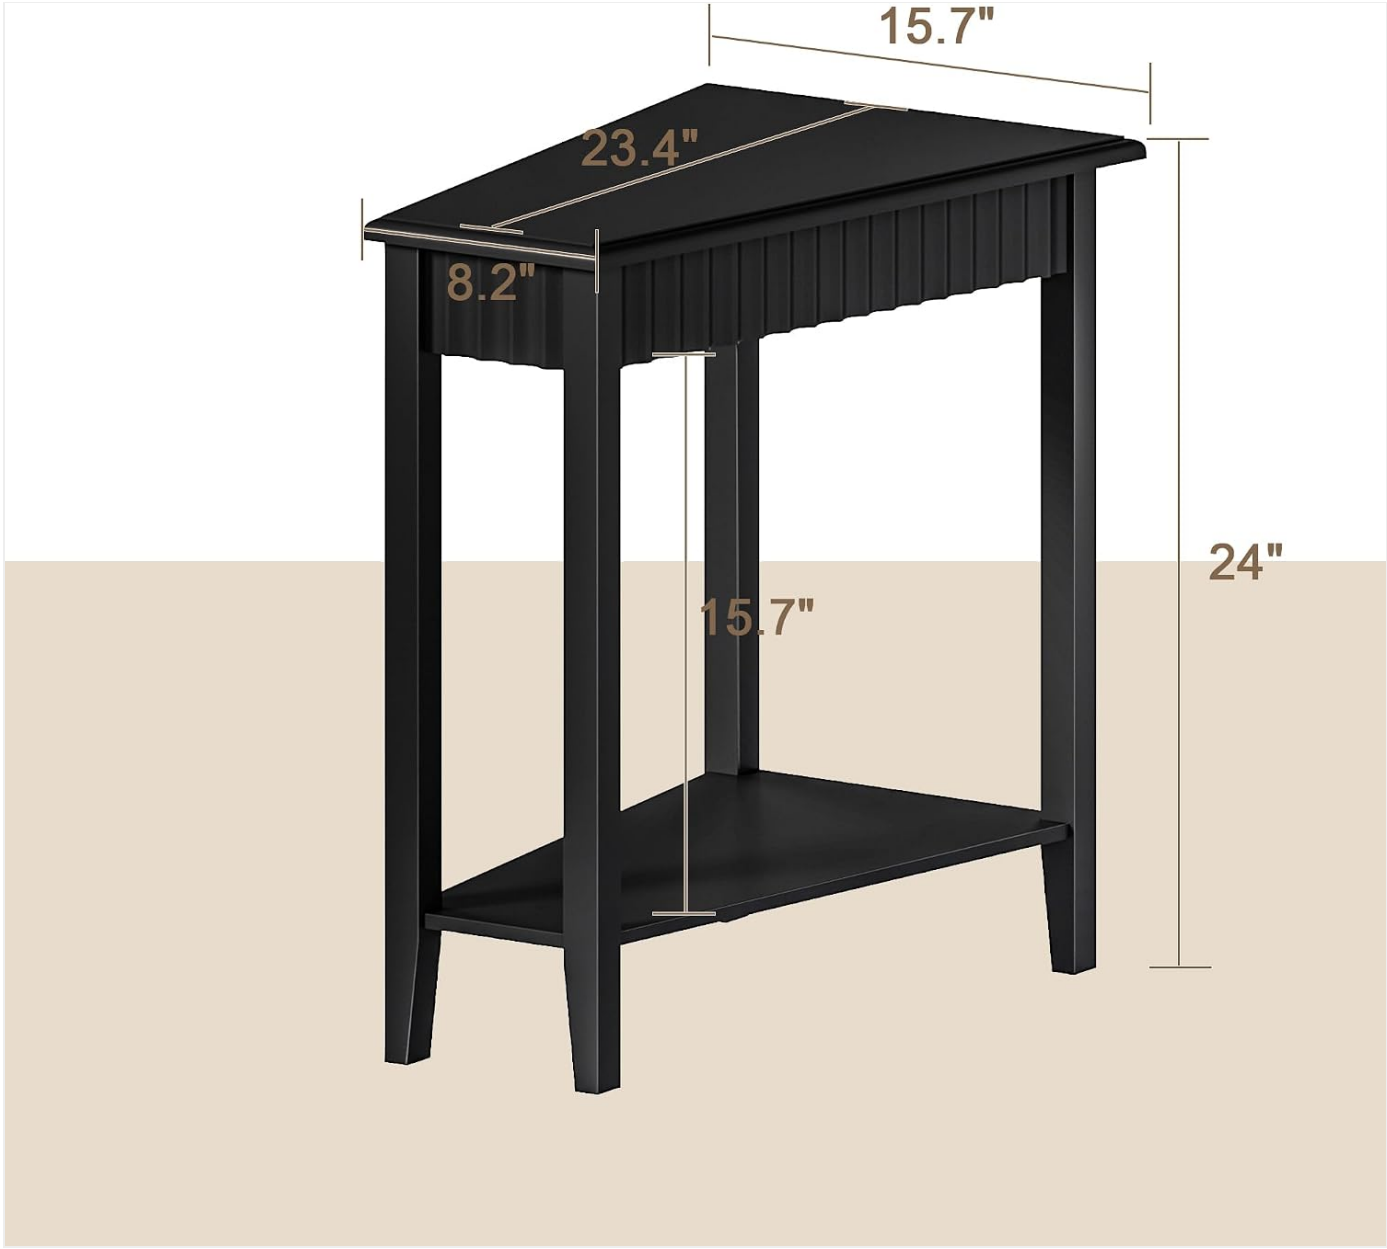


Figure 1: Table dimensions and key components. The table measures 23.6 inches deep, 15.7 inches wide, and 24 inches high. The top surface is 23.4 inches long on one side and 8.2 inches on the other, with a width of 15.7 inches.

Setup and Assembly Instructions

Assembly is straightforward and typically takes about 20-30 minutes. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a soft, clean surface to prevent scratches.
2. **Identify Parts:** Refer to the parts list and diagrams to identify each component. All parts are labeled for easy identification.
3. **Attach Legs to Bottom Shelf:** Securely attach the four legs to the bottom shelf using the provided hardware. Ensure they are oriented correctly.
4. **Attach Tabletop:** Align the tabletop with the top of the legs. Secure the tabletop to the legs using the remaining hardware.
5. **Tighten All Fasteners:** Once all parts are assembled, gently tighten all screws and fasteners. Do not overtighten.
6. **Final Check:** Ensure the table is stable and all connections are secure before placing any items on it.



Figure 2: The assembled ChooChoo Wedge End Table, demonstrating its placement next to a sofa.

Operating Instructions

The ChooChoo Wedge End Table is designed for versatile use in various indoor settings.

- **Placement:** Its unique wedge shape is ideal for fitting into narrow spaces, such as between sofas, recliners, or in room corners.
- **Storage:** Utilize the two tiers for storing books, remote controls, decorative items, or small plants.
- **Weight Capacity:** Distribute weight evenly. Avoid placing excessively heavy items on the table to prevent damage or instability.
- **Indoor Use Only:** This table is designed for indoor use. Avoid exposure to direct sunlight, extreme temperatures, or high humidity.



Figure 3: The wedge end table positioned between two chairs, showcasing its space-saving design and storage capabilities.

Maintenance and Care

Proper care will extend the life and appearance of your ChooChoo Wedge End Table.

- **Cleaning:** Wipe the table surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Clean spills immediately to prevent staining.
- **Protection:** Use coasters under drinks and placemats under hot items to protect the tabletop.
- **Periodic Checks:** Periodically check all fasteners and tighten them if necessary to maintain stability.

Troubleshooting

If you encounter any issues with your ChooChoo Wedge End Table, refer to the following common solutions:

Problem	Possible Cause	Solution
Table is wobbly	Loose fasteners; uneven floor.	Tighten all assembly screws. Ensure the table is on a level surface.
Parts missing or damaged	Packaging error; shipping damage.	Contact ChooChoo customer support with your purchase details.
Difficulty assembling	Incorrect part orientation; unclear instructions.	Review the assembly instructions carefully. Ensure parts are oriented as shown in diagrams.

Product Specifications

Feature	Detail
Brand:	ChooChoo
Model Number:	ET2410-BK
Product Dimensions (D x W x H):	23.6"D x 15.7"W x 24"H
Color:	Black
Material:	Engineered Wood
Style:	Farmhouse
Item Weight:	14.22 Pounds
Number of Tiers:	2
Indoor/Outdoor Usage:	Indoor

Warranty Information

ChooChoo products are manufactured to high-quality standards. For specific warranty details, please refer to the documentation included with your purchase or visit the official ChooChoo website. Typically, warranties cover manufacturing defects under normal use.

Customer Support

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact ChooChoo customer support:

Online: Visit the official ChooChoo Store on Amazon:ChooChoo Store

Please have your model number (ET2410-BK) and purchase date ready when contacting support.

© 2025 ChooChoo. All rights reserved.