INSIGNIA NS40-FEFL26

INSIGNIA 40" Class F20 Series LED Full HD Smart Fire TV

Model: NS40-FEFL26 User Manual

1. Introduction

Thank you for purchasing the INSIGNIA 40" Class F20 Series LED Full HD Smart Fire TV. This television combines stunning 1080p resolution with the power of Fire TV, offering access to millions of movies and TV episodes, live TV, and popular streaming services. With built-in Alexa Voice Remote, you can easily find content, control smart home devices, and more. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new television.



Figure 1.1: Front view of the INSIGNIA 40" Class F20 Series LED Full HD Smart Fire TV.

2. Safety Information

Please read all safety instructions carefully before using your TV. Keep this manual for future reference.

- **Power Source:** Connect the TV only to the type of power source indicated on the marking label.
- **Ventilation:** Ensure proper ventilation. Do not block any ventilation openings.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids, such as vases, on the TV.
- **Cleaning:** Unplug the TV from the wall outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Placement:** Place the TV on a stable, level surface. Avoid placing it in direct sunlight or near heat sources.
- **Lightning:** For added protection during a lightning storm or when left unattended for long periods, unplug the TV from the wall outlet and disconnect the antenna or cable system.

3. What's Included

Verify that all components are present in the package:

- INSIGNIA 40" Class F20 Series LED Full HD Smart Fire TV
- TV Stand (2 pieces)
- User Manual (this document)
- Warranty Card
- Power Cable
- Alexa Voice Remote with batteries

4. Setup

4.1 Attaching the Stand

If you are not wall-mounting your TV, you will need to attach the included stand. Ensure the TV is placed face-down on a soft, clean surface to prevent scratches.

1. Align each stand leg with the corresponding screw holes on the bottom of the TV.
2. Secure each leg with the provided screws. Do not overtighten.



Figure 4.1: Front view of the TV with stand attached.



Figure 4.2: Side view of the TV with stand attached.

4.2 Connecting Devices

Your TV features multiple input ports for connecting various devices. Refer to the image below for port locations.





Figure 4.3: TV Input/Output Ports.

- **HDMI (1 ARC, 2):** Connect Blu-ray players, game consoles, cable/satellite boxes, or other HDMI devices. HDMI 1 supports Audio Return Channel (ARC) for simplified audio connections to soundbars or AV receivers.
- **USB:** Connect USB storage devices for media playback.
- **ETHERNET:** Connect an Ethernet cable for a wired internet connection.

- **CABLE/ANT:** Connect an antenna or cable TV coaxial cable.
- **OPTICAL (Audio Out):** Connect to a soundbar or audio receiver for digital audio output.
- **AV IN (Adapter):** Use the included adapter cable to connect older devices with composite video and stereo audio outputs.
- **Headphone Jack:** Connect headphones for private listening.

4.3 Power Connection

Plug the power cable into the AC IN port on the back of the TV, then plug the other end into a wall outlet.

4.4 Remote Control Setup

Insert the two AAA batteries (included) into the Alexa Voice Remote, matching the polarity indicators (+/-).

5. Operating Your Fire TV

5.1 Initial Setup Wizard

The first time you power on your TV, a setup wizard will guide you through connecting to Wi-Fi, signing in to your Amazon account, and setting up live TV channels.

5.2 Fire TV Interface

The Fire TV home screen provides easy access to your favorite apps, streaming content, and live TV. Navigate using the directional pad on your remote.

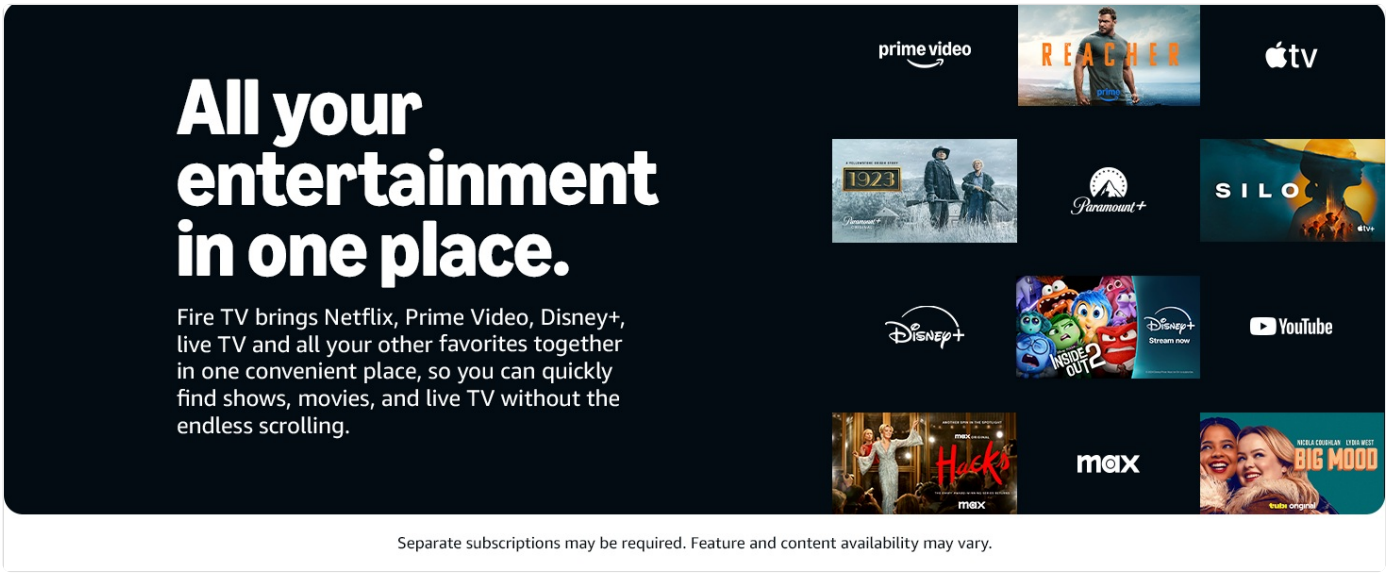


Figure 5.1: Access all your entertainment from one central hub.

5.3 Alexa Voice Remote

Press and hold the Voice button on your remote to activate Alexa. You can use voice commands to:

- Launch apps (e.g., "Open Netflix")
- Search for content (e.g., "Find action movies")
- Control playback (e.g., "Pause", "Fast forward")
- Check weather, sports scores, or set timers

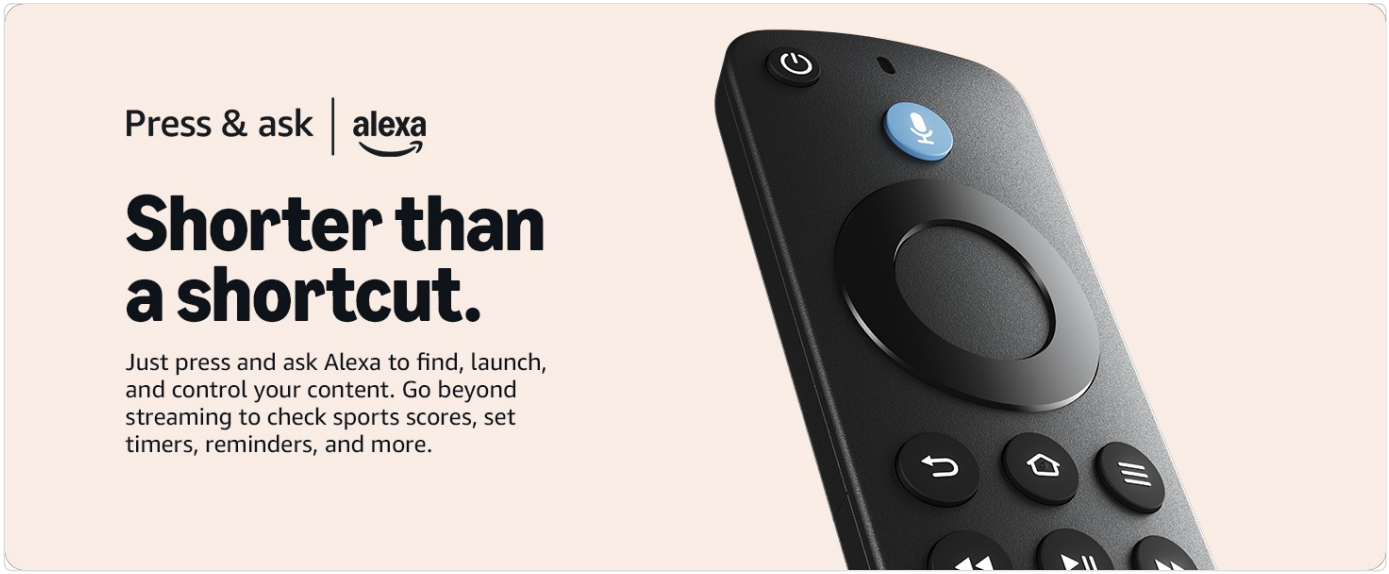


Figure 5.2: The Alexa Voice Remote simplifies content access.

5.4 User Profiles

Create personalized user profiles for each member of your household to customize viewing experiences, recommendations, and watchlists.

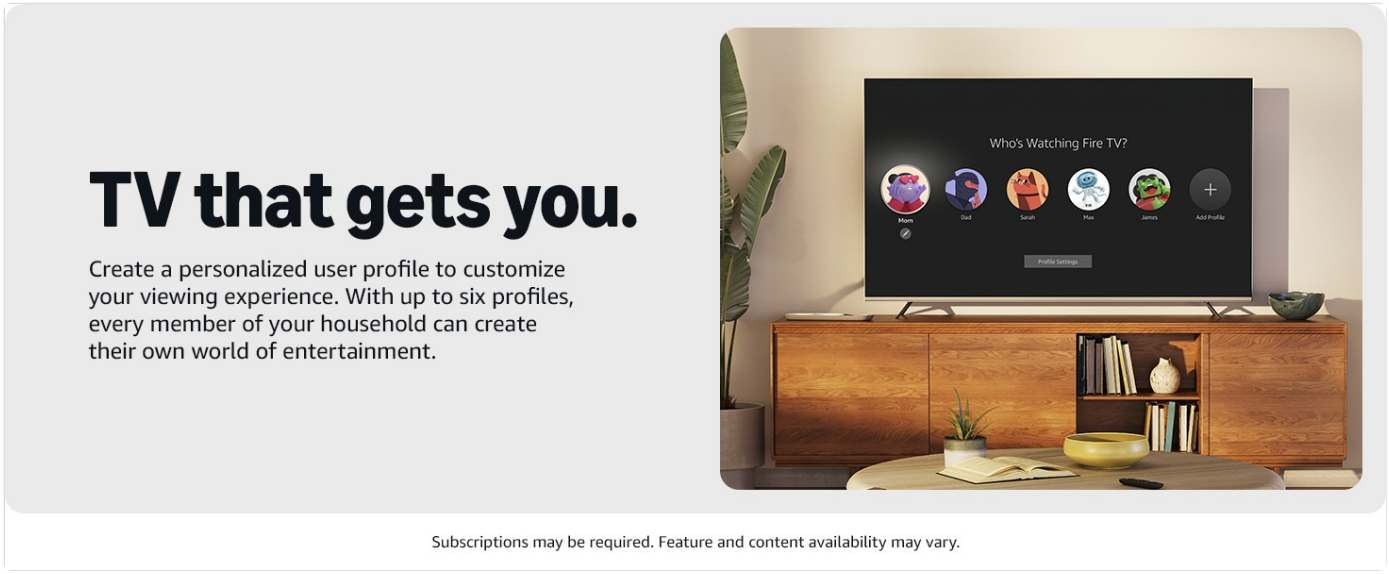


Figure 5.3: Personalized user profiles for tailored viewing.

5.5 Smart Home Integration

Connect compatible smart home devices and control them directly from your Fire TV using Alexa voice commands. For example, you can view live feeds from security cameras.

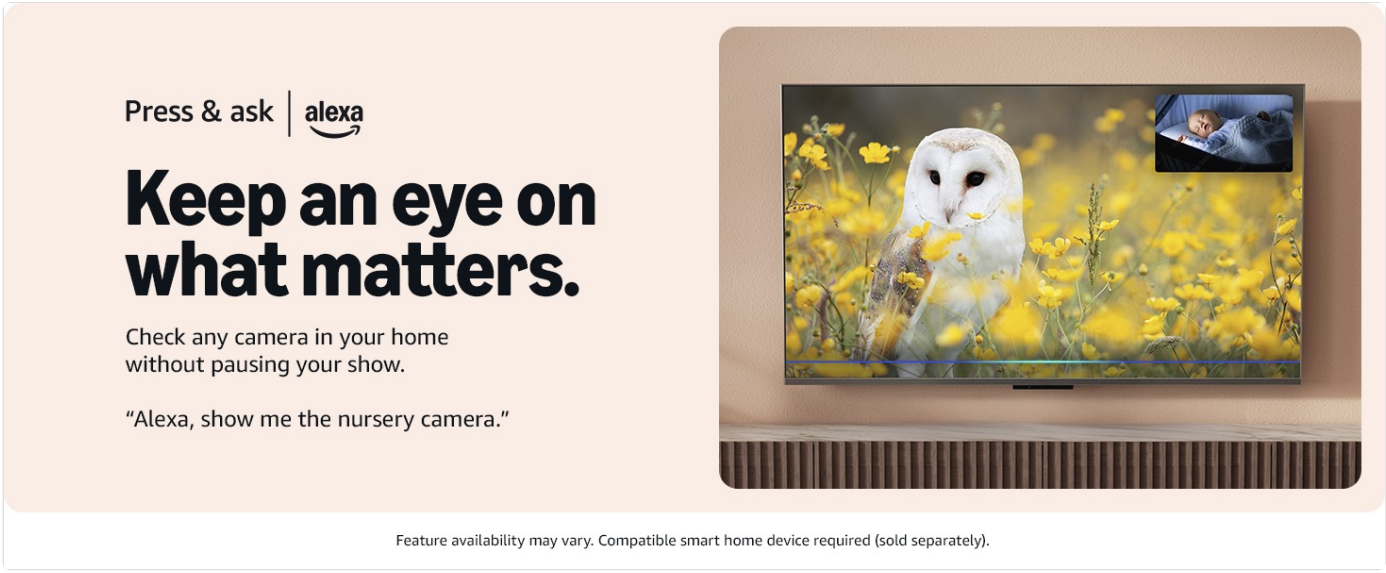


Figure 5.4: Monitor smart home devices directly on your TV.

6. Maintenance

Proper care ensures the longevity of your TV.

- **Screen Cleaning:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner (do not spray directly on the screen).
- **Body Cleaning:** Wipe the TV's frame and stand with a soft, dry cloth.
- **Ventilation:** Keep the ventilation openings clear of dust and debris to prevent overheating.
- **Power Cord:** Regularly check the power cord for any damage. If damaged, contact customer support for replacement.

7. Troubleshooting

If you encounter issues with your TV, try the following solutions before contacting support.

Problem	Possible Cause	Solution
No power	Power cord not connected; outlet not working	Ensure power cord is securely plugged into TV and wall outlet. Test outlet with another device.
No picture, but sound is present	Incorrect input source; loose HDMI cable	Press the **Input** button on the remote to select the correct source. Check HDMI cable connections.
No sound, but picture is present	Volume muted or too low; external audio system issue	Unmute volume or increase level. Check connections to external audio devices.
Remote control not working	Dead batteries; obstruction; pairing issue	Replace batteries. Remove any obstructions between remote and TV. Re-pair remote if necessary (refer to Fire TV online help).
Cannot connect to Wi-Fi	Incorrect password; router issue; TV too far from router	Verify Wi-Fi password. Restart router. Move TV closer to router or use a wired Ethernet connection.

8. Specifications

Detailed technical specifications for your INSIGNIA Fire TV.

Feature	Description
Screen Size	40 Inches
Brand	INSIGNIA
Display Technology	LED
Resolution	1080p (Full HD)
Refresh Rate	60 Hz
Special Feature	Apple Airplay
Connectivity Technology	Bluetooth, Wi-Fi
Aspect Ratio	16:9
Product Dimensions (D x W x H)	3"D x 35.1"W x 20"H

9. Warranty and Support

Your INSIGNIA 40" Class F20 Series LED Full HD Smart Fire TV is covered by a limited warranty. Please refer to the included Warranty Card for specific terms and conditions, including the warranty period and coverage details.

For technical support, troubleshooting assistance, or warranty claims, please contact INSIGNIA Customer Service:

- **Website:** Visit the official INSIGNIA support website (check your warranty card for the exact URL).
- **Phone:** Refer to your warranty card or the INSIGNIA website for customer service phone numbers.

When contacting support, please have your TV's model number (NS40-FEFL26) and serial number ready. The serial number is typically located on a label on the back of the TV.

© 2025 INSIGNIA. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question