Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

SUKACH 5000PWPR002

SUKACH Dual Motor Power Lift Recliner Chair with Heat & Massage

Model: 5000PWPR002

Brand: SUKACH

1. Introduction

This manual provides essential instructions for the safe and efficient use of your SUKACH Dual Motor Power Lift Recliner Chair. Please read this guide thoroughly before assembly and operation, and retain it for future reference.

Important Safety Information

- Do not exceed the maximum weight capacity of 350 pounds.
- Ensure the chair is fully assembled before use.
- Keep children away from the chair when it is being adjusted.

2. Package Contents

Your recliner chair is delivered in two separate boxes. Please ensure all components are present before beginning assembly.



Figure 2.1: Packaging and Components

- **Box A:** Chair base, Pillow
- **Box B:** Upholstered backrest, 2 Armrests, Phone Holder, Lift Remote, Massage Remote, Power Adapter

3. Setup & Assembly

Assembly typically takes approximately 15 minutes and requires no additional tools. Parcels may arrive separately.

Assembly Video Guide

Your browser does not support the video tag.

Video 3.1: Power Lift Chair Assembly Guide

This video demonstrates the step-by-step assembly process for the SUKACH Power Lift Recliner Chair, including connecting the main components and cables.

Step-by-Step Instructions:

1. **Unpacking:** Carefully remove all components from the packaging. Lay out all parts on a clean, soft surface to prevent damage.
2. **Armrest Installation:** Align the metal grooves on the armrests with the corresponding brackets on the chair base. Slide the armrests down until they are securely in place.
3. **Backrest Installation:** Align the metal grooves on the upholstered backrest with the brackets on the chair seat. Slide the backrest down firmly until it locks into position.
4. **Cable Connections:** Locate the various cables extending from the chair base and backrest. Connect the cables by matching their colors (e.g., white to white, red to red). Ensure all connections are secure. Plug the power adapter into the designated port on the chair and then into a wall outlet.
5. **Phone Holder Installation:** Attach the goose-neck phone holder to the designated slot on the armrest. Ensure it is securely fastened.

4. Operating Instructions

Your SUKACH recliner offers multiple functions for comfort and convenience, controlled by the provided remotes.

4.1 Dual Motor & Infinite Position Adjustment

The dual-motor system allows independent adjustment of the backrest and footrest, providing infinite reclining positions up to 173°. This feature also enables a power lift function to assist users in standing up effortlessly.



Figure 4.1: Dual Motor Infinite Position

4.2 Preset Positions

The lift remote control includes preset buttons for quick adjustments:

- **TV Mode:** Adjusts the chair to an optimal viewing position.
- **Sleep Mode:** Reclines the chair to a near-flat position (173°) for napping.
- **Home Button:** Returns the chair to an upright position.
- **Memory Button:** Allows you to customize and save your favorite position.

Your browser does not support the video tag.

Video 4.2: Power Lift Chair Display Video

This video demonstrates the various reclining and lifting functions of the chair, including the use of preset positions for enhanced comfort and ease of use.

4.3 Massage & Heating Functions

The massage chair features 8 vibrating nodes across the back, lumbar, thigh, and leg areas, with 3 intensity options

and 4 vibrating modes. A lumbar heating point operates separately for full-body relaxation and pain relief.



Figure 4.3: Massage & Heating Function Controls

4.4 Detachable Armrests & Cup Holder

The armrests are detachable, secured by Velcro straps and snap buttons, allowing for a widened seating space. A retractable cup holder tray table is located on the left side, operated by a simple button press.

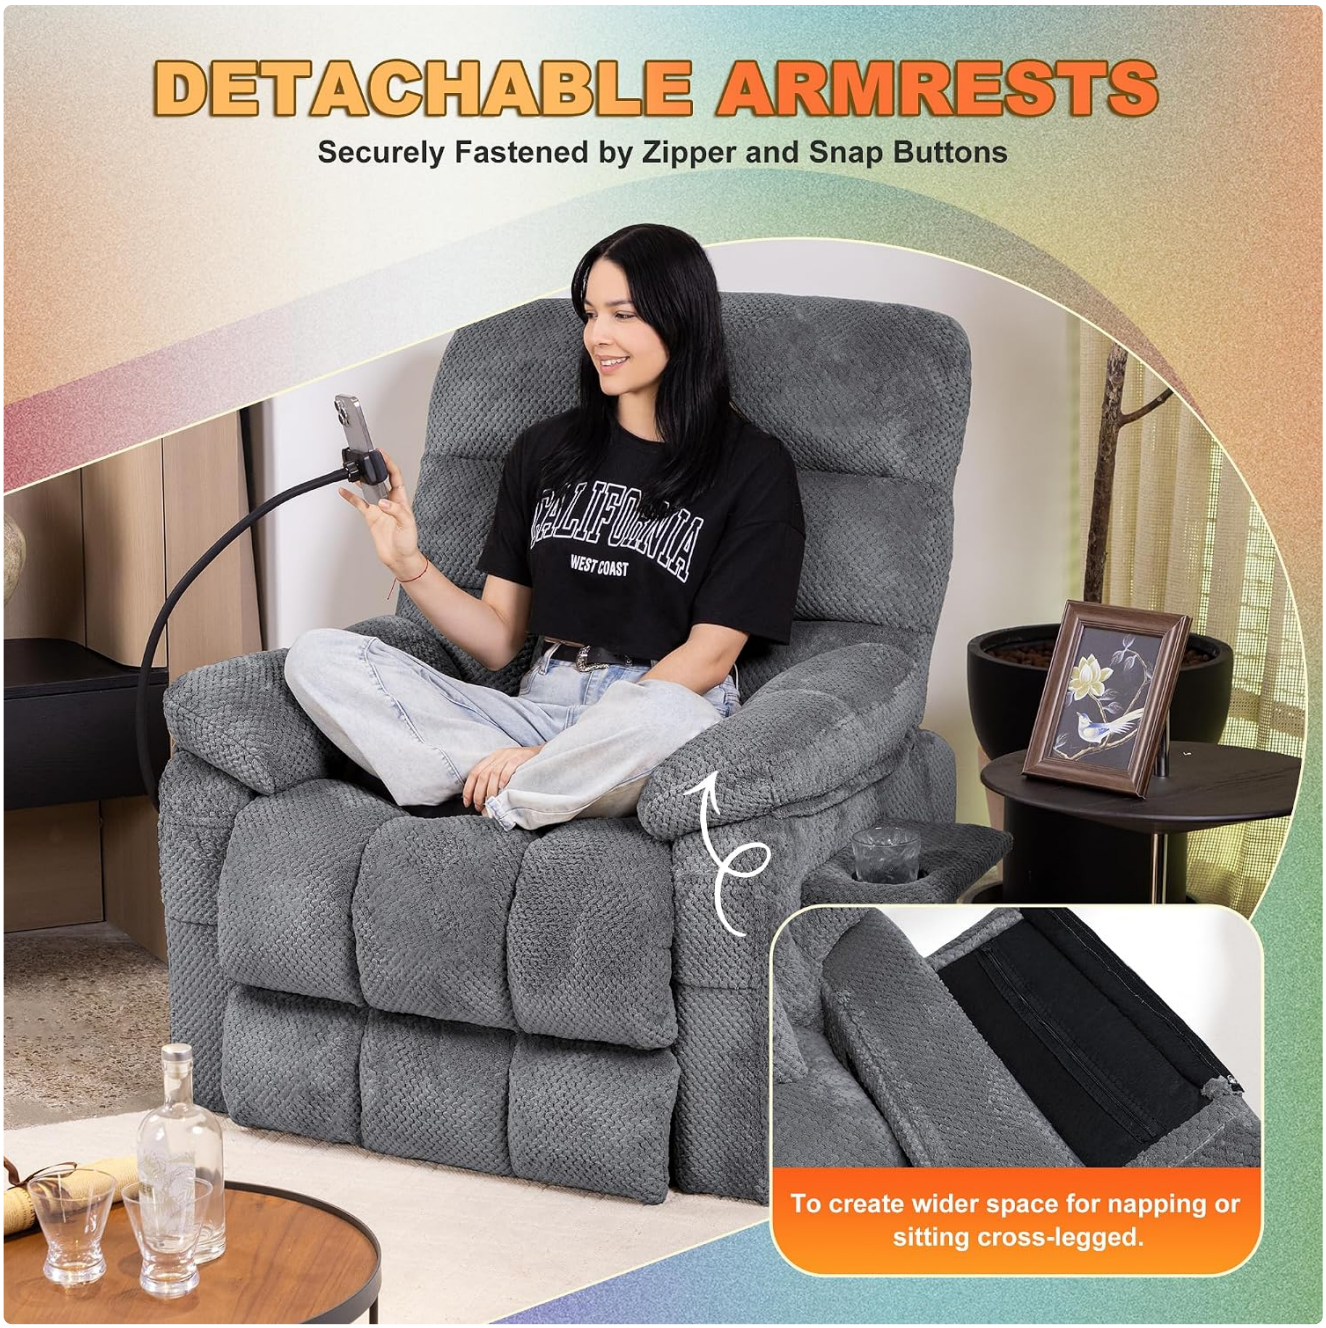


Figure 4.4: Detachable Armrests

4.5 Charging Ports & Phone Holder

The right side of the recliner includes 1 USB port and 1 Type-C port for charging low-power devices. A bendable, 360° rotatable, and detachable goose-neck phone holder provides hands-free convenience.

4.6 Extra Storage

The armrests feature 2 front pockets and 1 side pocket for convenient storage of remotes, magazines, or other small items.

5. Maintenance

To maintain the longevity and appearance of your recliner, follow these simple care instructions:

- **Cleaning:** Wipe clean with a damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Spills:** Blot spills immediately with a clean, dry cloth.
- **Regular Inspection:** Periodically check all connections and mechanisms to ensure they are secure and

functioning correctly.

6. Troubleshooting

If you encounter any issues with your recliner, please refer to the following common troubleshooting tips:

- **Chair Not Responding:** Ensure the power adapter is securely plugged into both the chair and a working wall outlet. Check that the power switch on the chair is in the 'ON' position.
- **Motor Noise:** A slight motor hum is normal during operation. If the noise is excessive or unusual, discontinue use and contact customer support.
- **Massage/Heat Not Working:** Verify that the massage remote is properly connected and powered on. Check the intensity and mode settings.
- **Uneven Reclining:** Ensure all assembly brackets are fully engaged and secured. Avoid placing excessive weight on one side of the chair.

7. Specifications

Feature	Detail
Brand	SUKACH
Model Name	Power Lift Recliner
Product Dimensions	28.74"D x 40.16"W x 45.25"H
Item Weight	125 pounds
Maximum Weight Recommendation	350 Pounds
Material	Textile, Sponge
Special Features	Dual Motor, Heat, Massage, Power Lift, Infinite Position, Cup Holder & Tray Table, Detachable Armrests, Phone Holder, USB & Type-C Ports
Reclining Position Count	4 (Preset)

8. Warranty & Support

SUKACH provides the following warranty for your recliner chair:

- **Upholstery Materials & Electric Parts:** 1-year warranty
- **Chair Frame & Reclining Mechanisms:** 2-year warranty

For any questions, concerns, or warranty claims, please feel free to contact us via Amazon.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F299Z694

More documents and user manuals: **https://manuals.plus/**