Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

antmap 200ANSI

antmap Mini Projector 200ANSI User Manual

Model: 200ANSI

1. Introduction

This manual provides essential instructions for the safe and effective operation of your antmap Mini Projector 200ANSI. Please read this manual thoroughly before use and retain it for future reference.

1.1 Package Contents

Verify that all items are present in the package:

- antmap Mini Projector 200ANSI
- Remote Control (batteries not included)
- Power Adapter
- HDMI Cable
- User Manual



Image: The antmap Mini Projector 200ANSI, showcasing its compact design and compatibility with various streaming platforms and devices.

2. Product Overview

The antmap Mini Projector 200ANSI is a compact and portable device designed for versatile media projection. It features LED technology, WiFi and Bluetooth connectivity, and multiple input ports.

2.1 Physical Features and Ports

Familiarize yourself with the projector's dimensions and available ports for connectivity.



Image: A diagram illustrating the compact dimensions of the antmap Mini Projector: 5.63 x 3.78 x 2.28 inches.

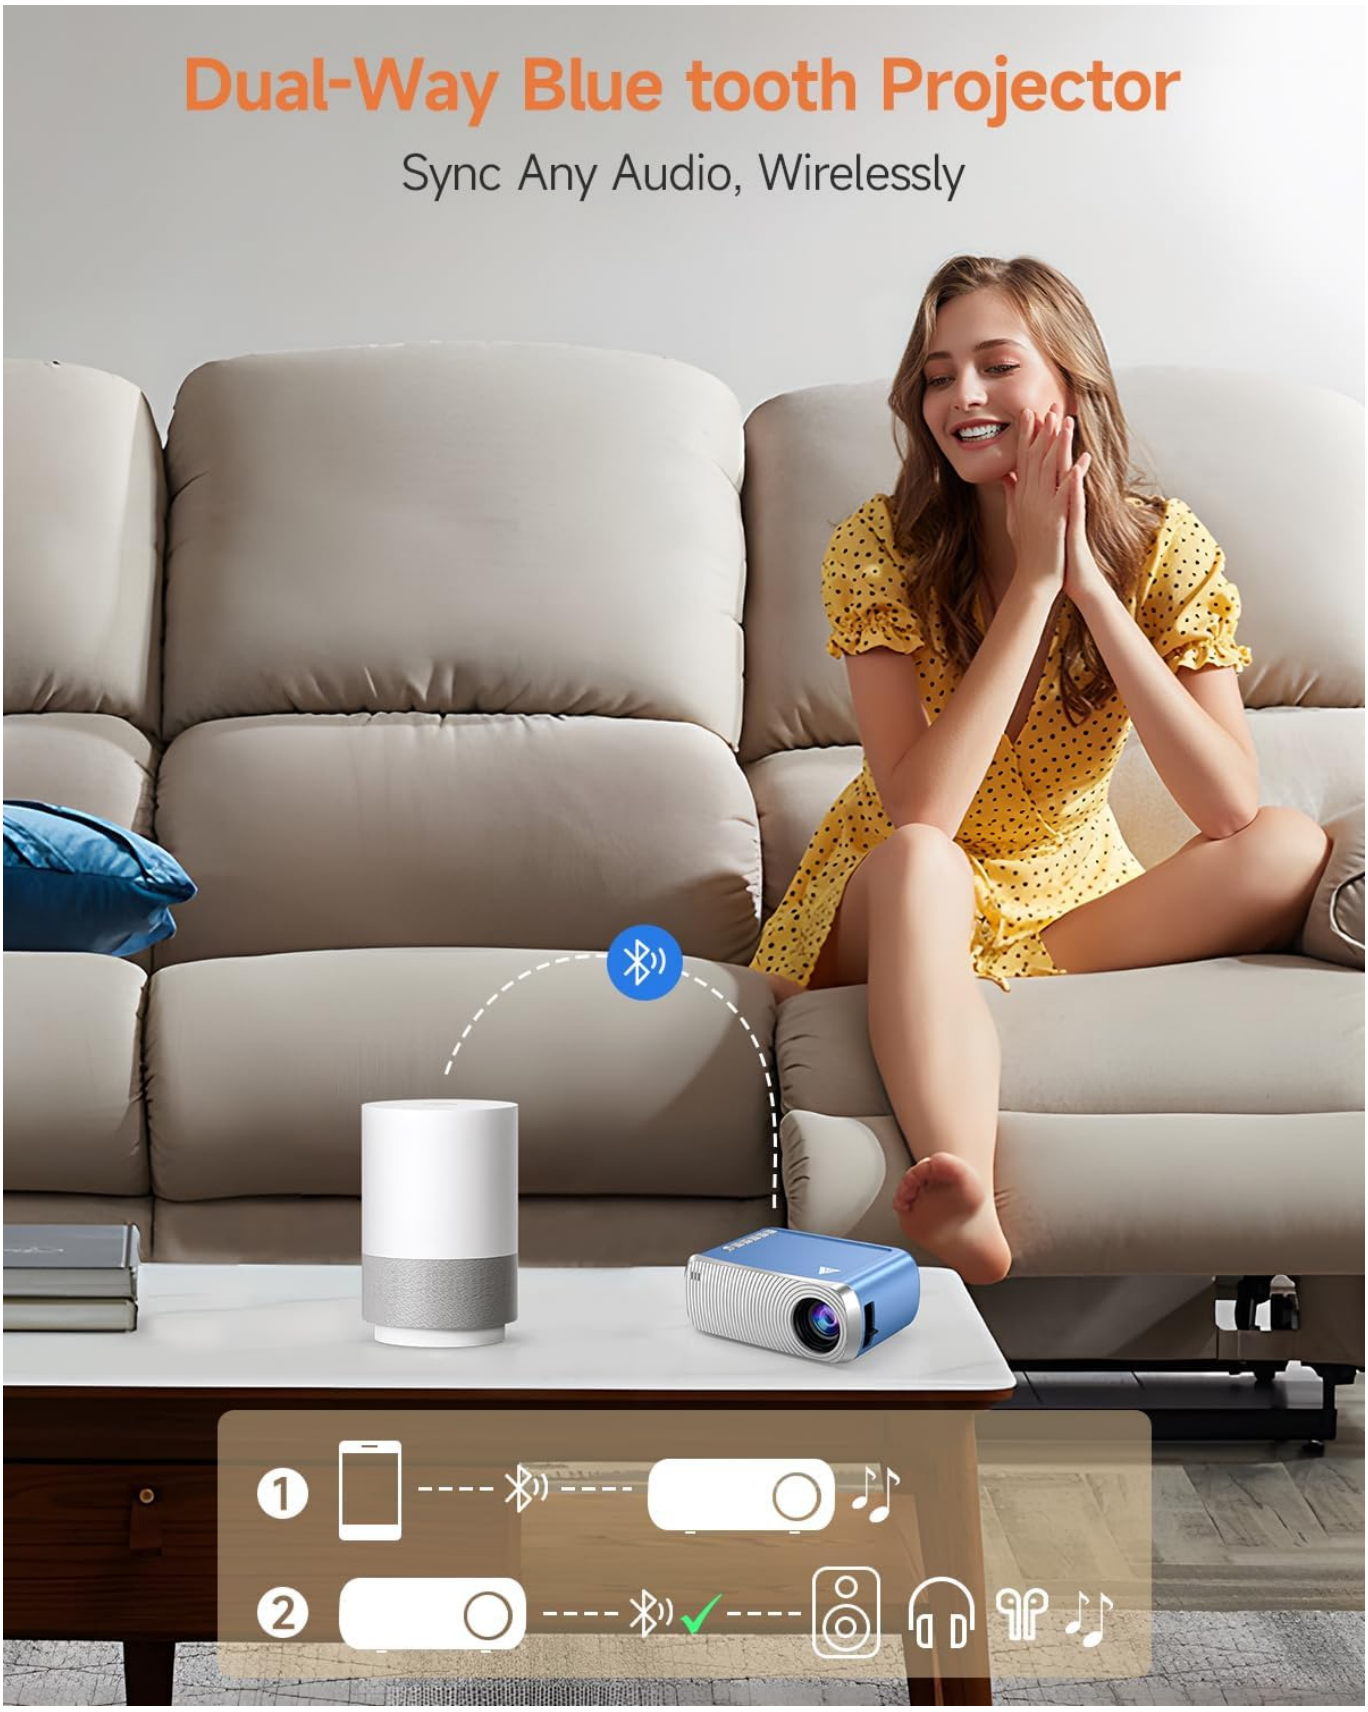


Image: The rear panel of the projector displaying its HDMI, USB, Type-C, and Audio ports, highlighting its multi-device compatibility.

3. Setup

3.1 Powering On/Off

1. Connect the power adapter to the projector's power input and then to a power outlet.
2. Press the power button on the projector or the remote control to turn it on.
3. To turn off, press the power button again and confirm shutdown if prompted.

3.2 Focus Adjustment

Rotate the focus ring located on the side of the projector lens until the projected image appears clear and sharp.

3.3 Placement and Projection Size

Position the projector on a stable, flat surface. The projection size can range from 30 to 170 inches, depending on the distance from the projection surface (2.95 to 16.73 feet).

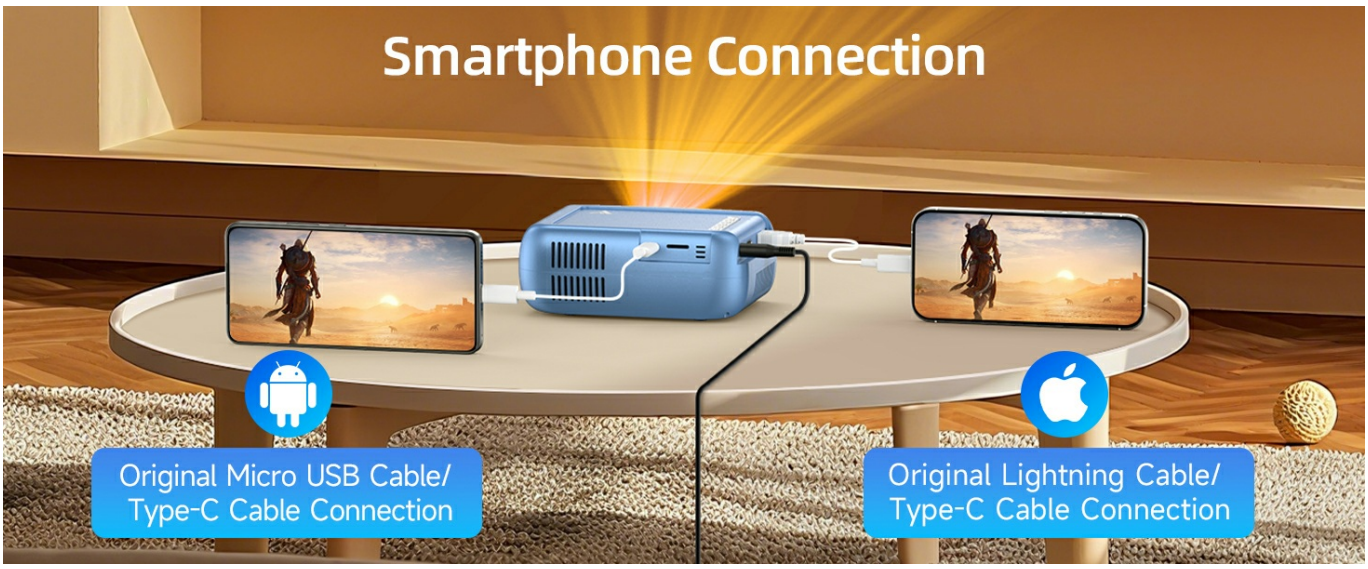


Image: Visual representation of projection distances for screen sizes from 30 to 170 inches, along with examples of floor, tripod, and ceiling mounting.

4. Operating Instructions

4.1 Wireless Connection (WiFi Screen Mirroring)

The projector supports wireless screen mirroring for iOS, Android, and Windows devices via WiFi (2.4G/5G).

1. Ensure both the projector and your device are connected to the same WiFi network.
2. On the projector, navigate to the 'Screen Mirroring' or 'WiFi Display' option.
3. On your mobile device, activate screen mirroring (e.g., 'Screen Mirroring' on iOS, 'Smart View'/'Cast' on Android, 'Project' on Windows).
4. Select the projector's name from the list of available devices.

Note: Due to copyright restrictions, streaming apps like Netflix, Prime Video, and Hulu cannot be mirrored directly from mobile devices. Use an approved TV stick or similar device connected via HDMI for these platforms.



Image: The projector wirelessly displaying content from a smartphone, demonstrating WiFi screen mirroring functionality.

4.2 Wired Connection (HDMI, USB, Type-C)

For a stable connection or to bypass WiFi restrictions, use wired connections.

- **HDMI:** Connect an HDMI cable from your device (e.g., laptop, TV stick, gaming console) to the projector's HDMI port. Select HDMI as the input source on the projector.
- **USB:** Insert a USB drive into the USB port to play media files directly.

- **Type-C:** Connect compatible smartphones or tablets using a Type-C cable for direct video output.



Image: An iPhone connected to the projector using a wired connection, illustrating direct cable projection.

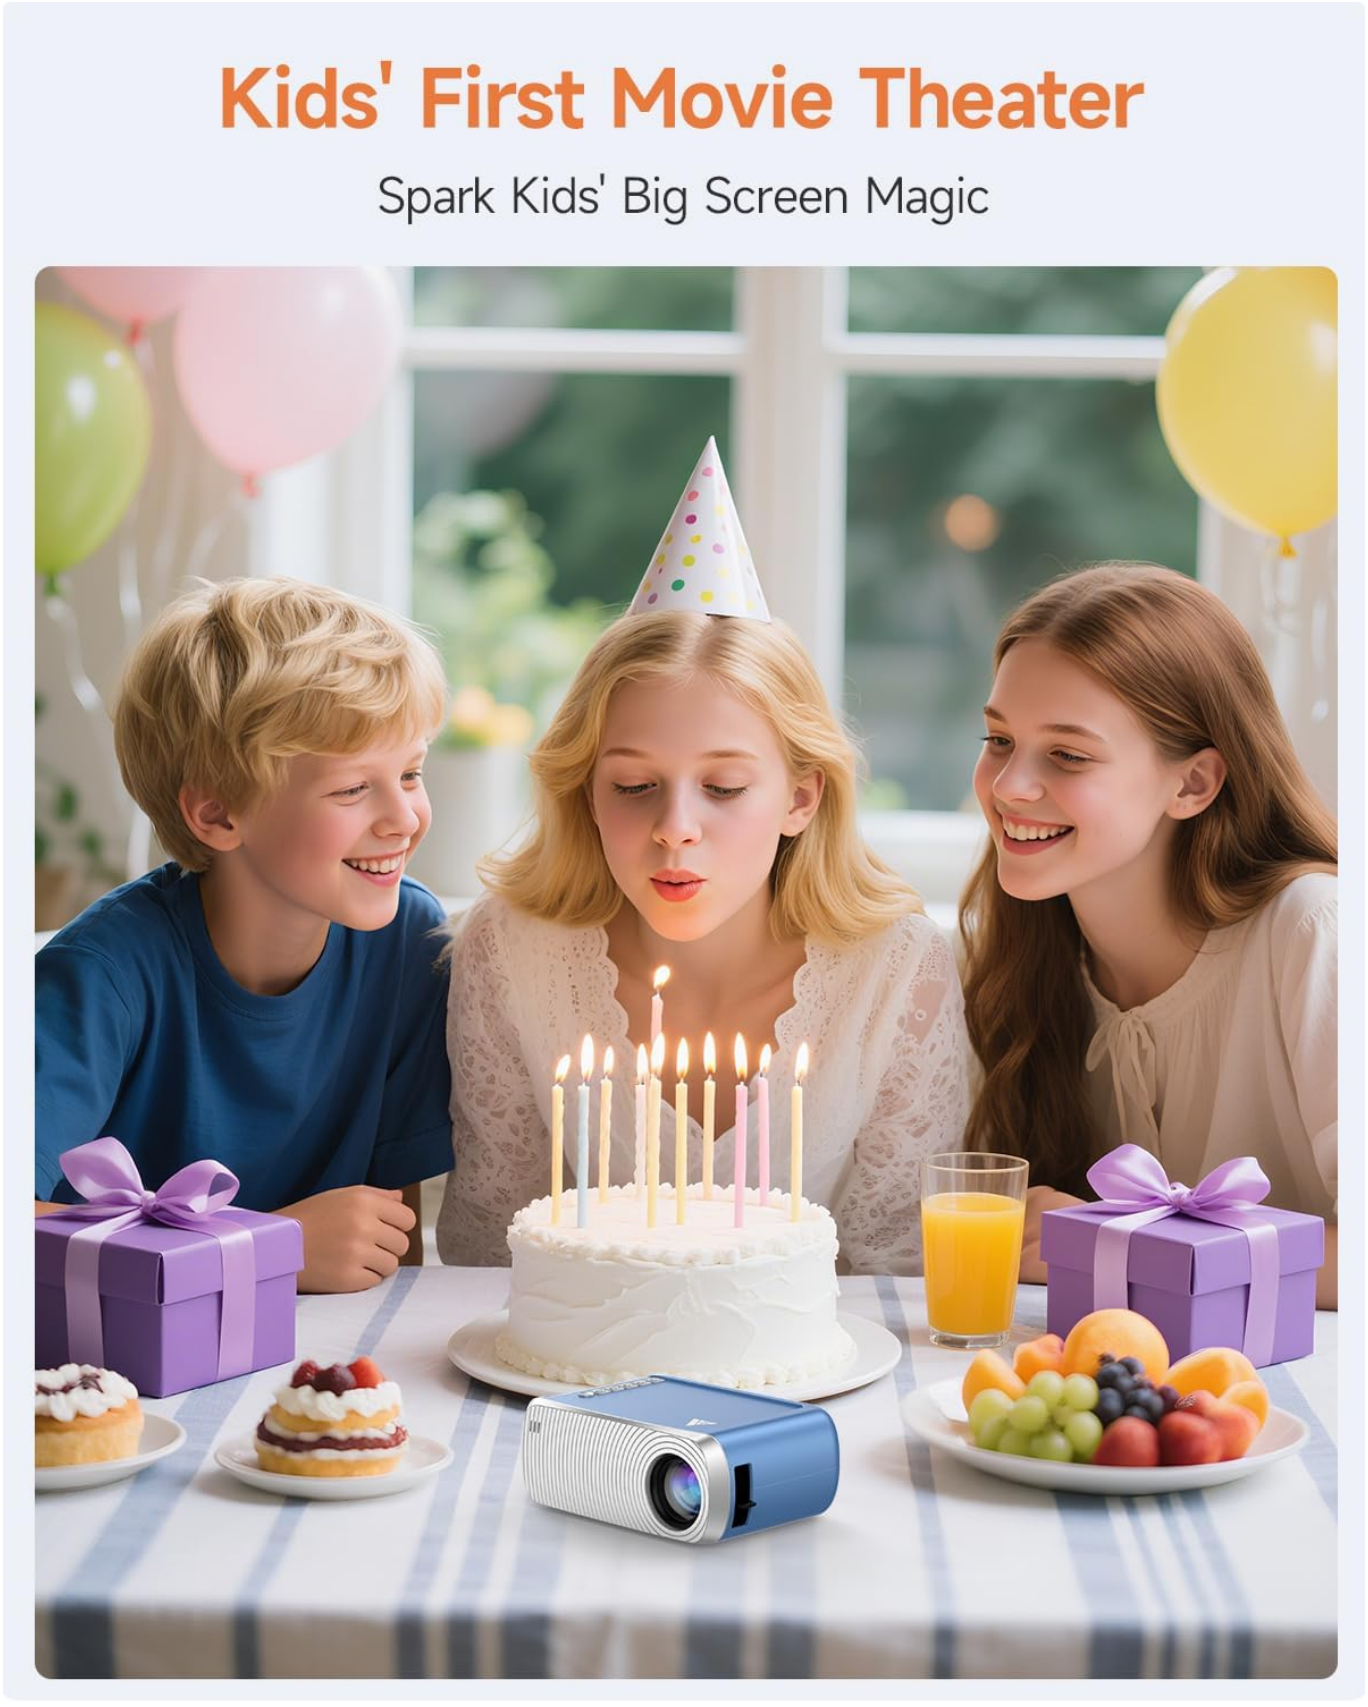


Image: An Android phone connected to the projector using a wired connection, demonstrating compatibility with various phone types.

4.3 Bluetooth Audio Connection

Connect external Bluetooth speakers or headphones for enhanced audio.

1. Ensure your Bluetooth audio device is in pairing mode.
2. On the projector, navigate to the Bluetooth settings.
3. Select your audio device from the list to pair.

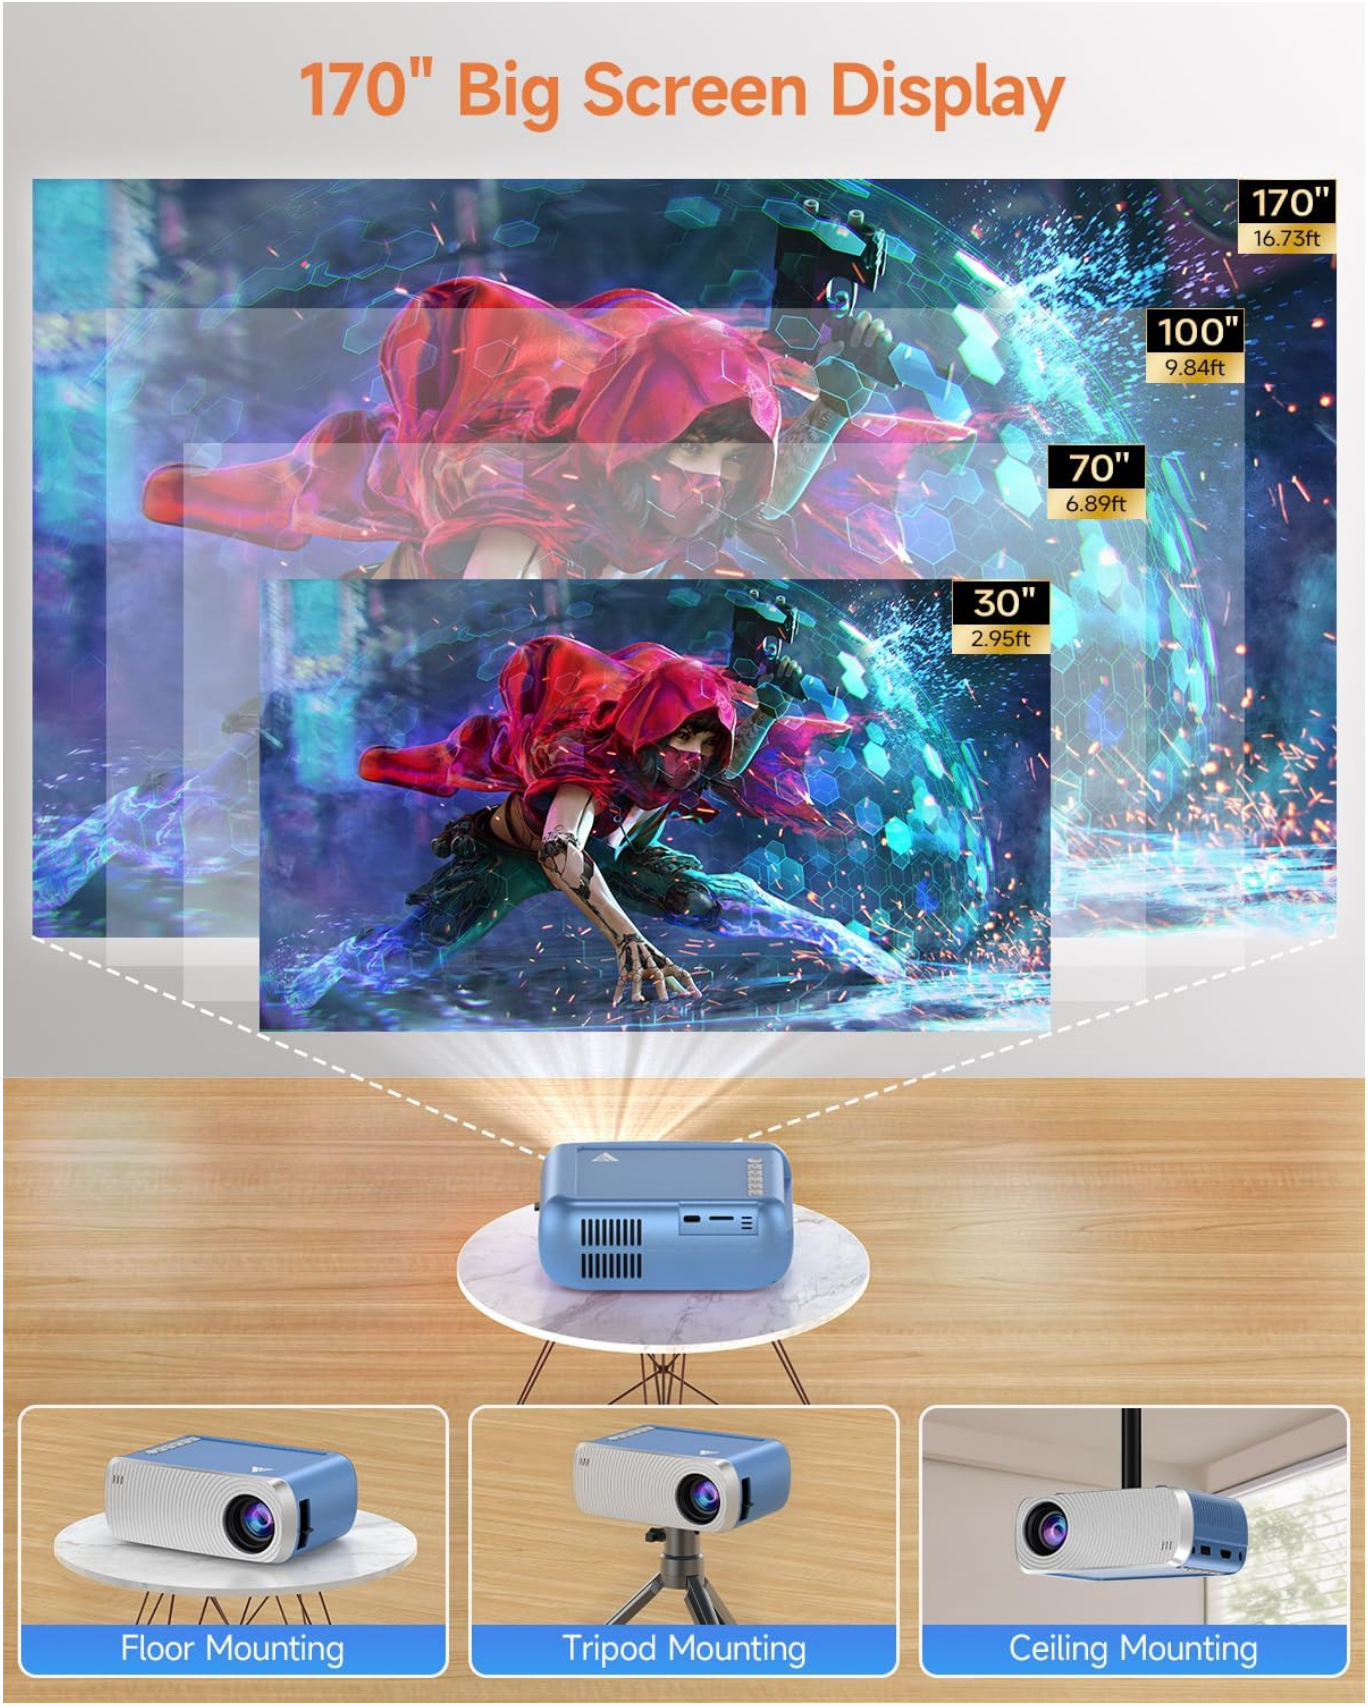


Image: The projector wirelessly transmitting audio to an external Bluetooth speaker, illustrating the Bluetooth audio feature.

5. Maintenance

5.1 General Care

- Keep the projector in a clean, dry environment.
- Avoid exposing the projector to extreme temperatures or humidity.
- Do not block the ventilation openings to ensure proper cooling.

5.2 Cleaning

- Use a soft, dry cloth to clean the exterior of the projector.
- For the lens, use a specialized lens cleaning cloth and solution to avoid scratches.
- Do not use abrasive cleaners or solvents.

6. Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No image displayed	Power issue, incorrect input source, loose cable connection.	Check power connection. Select correct input source. Ensure cables are securely connected.
Blurred image	Focus not adjusted, incorrect projection distance.	Adjust the focus ring. Move the projector closer or further from the screen.
No sound	Volume too low, incorrect audio output, Bluetooth not connected.	Increase volume. Check audio settings. Ensure Bluetooth speaker is paired and connected.
WiFi mirroring not working	Devices on different networks, app restrictions, network interference.	Ensure both devices are on the same WiFi. Use wired connection for restricted apps. Restart router and devices.
Remote control not responding	Dead batteries, obstruction, remote out of range.	Replace batteries. Remove obstructions. Point remote directly at the projector's IR receiver.

7. Specifications

Feature	Detail
Brand	antmap
Model	200ANSI
Native Resolution	800 x 480 pixels
Supported Resolution	Up to 1080P Full HD
Connectivity Technology	Wi-Fi (2.4G/5G), Bluetooth 5.1, HDMI, USB, Type-C, 3.5mm Audio Jack
Projection Size	30-170 inches
Projection Distance	2.95-16.73 feet
Built-in Speaker	3W Stereo Speaker
Noise Level	Under 30dB
Dimensions (L x W x H)	5.63 x 3.78 x 2.28 inches
Weight	0.75 lbs (12.3 ounces)
Special Features	Built-In Cooling System, Built-In Speaker, Built-In Wi-Fi, Lightweight, Portable

8. Warranty and Support

For warranty information and technical support, please refer to the documentation included with your purchase or contact antmap customer service. Details regarding specific warranty periods and support channels are typically provided at the point of sale or on the official product website.

© 2025 antmap. All rights reserved.

This manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F2FK14XZ

More documents and user manuals: **https://manuals.plus/**