Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Grunkel MW-25MG-PARENT

Grunkel MW-25MG-PARENT Microwave with Grill User Manual

Model: MW-25MG-PARENT

1. Important Safety Instructions

Read all instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or injury.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not use corrosive chemicals or vapors in this appliance.
- Liquids or other foods must not be heated in sealed containers since they are liable to explode.
- Always use oven mitts when handling hot items from the microwave.

2. Product Overview

The Grunkel MW-25MG-PARENT microwave with grill is designed for efficient heating and cooking. It features a 25-liter capacity, 900W microwave power, and a 1000W grill.

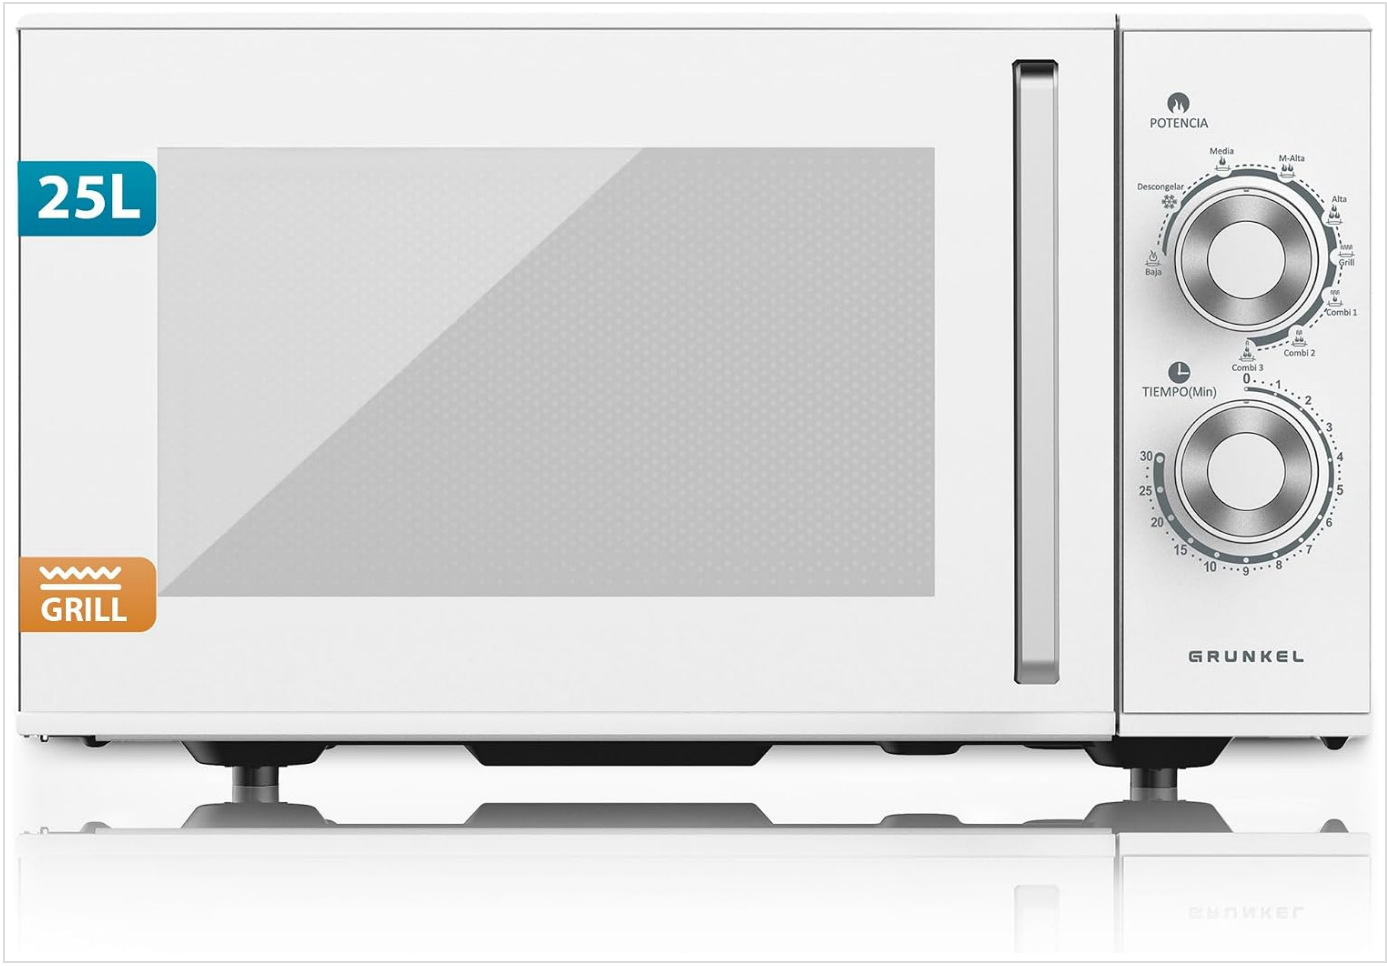


Image: Front view of the Grunkel MW-25MG-PARENT microwave with grill, showing the door, control panel, and '25L' and 'GRILL' indicators.

Components

- Microwave Oven Unit
- Glass Turntable Tray (Diameter: 270 mm)
- Turntable Ring
- User Manual



Image: Interior view of the microwave showing the glass turntable tray and turntable ring. Dimensions of the interior are indicated as 27 cm (height), 18 cm (depth), and 27 cm (width), with a turntable diameter of 270 mm.

Control Panel

The control panel features two rotary knobs for easy operation:

- **Upper Knob (Power/Function Selector):** Used to select microwave power levels (Low, Medium-Low, Medium, Medium-High, High), defrost function, and grill/combination modes.
- **Lower Knob (Timer):** Used to set the cooking time, up to 30 minutes.



Image: The microwave on a kitchen counter, highlighting its compact design and key features: 25L capacity, 900W power, 1000W grill, and up to 30-minute timer.

3. Setup and Installation

Placement

- Place the microwave on a flat, stable surface strong enough to hold its weight.
- Ensure adequate ventilation. Leave at least 10 cm of space at the rear, 20 cm at the top, and 5 cm on both sides for proper airflow.
- Do not block any ventilation openings.
- Keep the microwave away from heat sources and strong magnetic fields.



Image: The microwave placed on a kitchen counter, illustrating its dimensions: 28 cm height, 48 cm width, and 38 cm depth, with a 25L capacity.

Electrical Connection

- Plug the microwave into a properly grounded electrical outlet.
- Ensure the voltage matches the rating label on the appliance.

Initial Use

- Remove all packaging materials and accessories.
- Wipe the interior and exterior with a damp cloth before first use.
- Place the turntable ring and glass tray inside the oven.

4. Operating Instructions

This microwave offers various cooking functions. Always ensure food is placed on the glass turntable tray.



Image: The microwave on a kitchen counter, illustrating its 6 power levels, 900W microwave power, 1000W grill, defrost function, audible signal upon completion, and safe cooking features. The timer knob is shown with a 30-minute range.

Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the door securely.
3. Turn the **Upper Knob (Power/Function Selector)** to select the desired microwave power level (e.g., High for 900W). There are 6 power levels available.
4. Turn the **Lower Knob (Timer)** to set the cooking time (up to 30 minutes). The oven will start automatically.
5. When the set time expires, the oven will stop and an audible signal will sound.

Grill Cooking

The 1000W grill function is ideal for browning and toasting.

1. Place food on the grill rack (if included) or a heat-resistant dish on the turntable.
2. Close the door securely.
3. Turn the **Upper Knob (Power/Function Selector)** to the 'Grill' setting.

4. Turn the **Lower Knob (Timer)** to set the grilling time.
5. Monitor food closely to prevent over-browning.

Combination Cooking

This appliance offers 3 combination modes, combining microwave and grill functions for versatile cooking.

1. Place food in a suitable container on the turntable.
2. Close the door securely.
3. Turn the **Upper Knob (Power/Function Selector)** to select one of the 'Combi' modes (Combi 1, Combi 2, Combi 3). Refer to the knob markings for specific power distribution.
4. Turn the **Lower Knob (Timer)** to set the cooking time.

Defrost Function

The defrost function allows for thawing frozen foods.

1. Place frozen food on the glass turntable.
2. Close the door securely.
3. Turn the **Upper Knob (Power/Function Selector)** to the 'Defrost' setting.
4. Turn the **Lower Knob (Timer)** to set the defrosting time. Adjust time based on food type and weight.

5. Care and Maintenance

Cleaning the Oven Interior

- Always unplug the appliance before cleaning.
- Wipe the interior cavity after each use with a damp cloth to remove food splatters.
- For stubborn stains, use a mild detergent and then wipe with a clean, damp cloth.
- The glass turntable tray and turntable ring can be removed and washed in warm soapy water or a dishwasher.

Cleaning the Oven Exterior

- Wipe the exterior surface with a soft, damp cloth.
- Do not use abrasive cleaners or harsh chemicals, as they may damage the finish.

Door Care

- Clean the door seals and sealing surfaces regularly to ensure proper closure and efficient operation.
- Do not allow grease or food particles to build up around the door.



Image: The microwave interior illuminated by LED lighting, providing enhanced visibility during operation.

6. Troubleshooting

If you encounter any issues with your microwave, please refer to the following table before contacting customer service.

Problem	Possible Cause	Solution
Oven will not start	Power cord not plugged in; Door not closed properly; Timer not set.	Ensure power cord is securely plugged in; Close the door firmly; Set the timer knob.
Food not heating	Door not closed properly; Power level not selected; Cooking time too short.	Close the door firmly; Select an appropriate power level; Increase cooking time.
Sparking inside the oven	Metal in the oven; Food residue on cavity walls.	Remove any metal objects; Clean the oven interior thoroughly.

Problem	Possible Cause	Solution
Turntable not rotating	Turntable not properly placed; Obstruction under turntable.	Ensure turntable and ring are correctly positioned; Remove any obstructions.

7. Specifications

Feature	Specification
Model Number	MW-25MG-PARENT
Capacity	25 Liters
Microwave Power	900W
Grill Power	1000W
Power Levels	6
Grill Modes	3 Combination Modes
Timer	Up to 30 minutes
Turntable Diameter	270 mm
Product Dimensions (D x H x W)	42 cm x 28 cm x 48 cm
Product Weight	10 kg
Color	White
Special Features	Grill Function, Defrost Function, Audible Signal, LED Interior Lighting

8. Warranty and Support

This Grunkel appliance is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.
For technical assistance, spare parts, or any questions regarding your product, please contact Grunkel customer support through their official website or the contact information provided in your warranty documentation.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F2GJ4FJ5

More documents and user manuals: **https://manuals.plus/**