MASHI Dinosaurs Alarm Clock C26

MASHI Dinosaur Kids Alarm Clock Instruction Manual

Introduction

This manual provides detailed instructions for setting up and operating your MASHI Dinosaur Kids Alarm Clock. This device is designed to assist children in developing healthy sleep habits through visual cues and customizable features.

Product Overview

Key Features

- **Sleep Training Clock:** Helps children understand wake-up and sleep times using sun and moon icons.
- **Visual Cues:** Green light and sun icon for wake-up, blue light and moon icon for bedtime. Lights automatically turn off after one hour.
- **Soothing Sounds:** 6 ambient sounds (cricket, seagull/ocean, campfire, birdsong, brook, thunderstorm) with a 30-minute auto-off timer.
- **Dual Alarm:** Two independent alarms with 6 alarm sounds and a loud alarm option for deep sleepers.
- **Night Light:** 2 lighting modes and 7 customizable colors. Tap to change colors.
- **Power Options:** Built-in battery for portable use, Type-C cable for daily plugged-in use.

Components

- MASHI Dinosaur Kids Alarm Clock Unit
- USB Type-C Cable
- Instruction Manual

Setup

Powering the Device

The alarm clock can be powered by its built-in battery for temporary use or continuously via the included Type-C USB

cable. For extended use of lighting modes, keep the clock plugged in.



Image: The MASHI Dinosaur Alarm Clock with two power options: built-in battery for short trips and Type-C cable for daily use.

Initial Time Setting

1. In time display mode, long press the Time button (clock icon) to enter time setting.
2. The hour will flash. Use the '+' and '-' buttons to adjust. Short press the Time button to confirm and move to minutes.
3. Repeat for minutes. Short press the Time button to confirm and exit.

Operating Instructions

Button Functions Overview



Image: Diagram illustrating the functions of each button on the back of the MASHI Dinosaur Alarm Clock, including long press and short press actions for setting alarms, adjusting brightness, controlling white noise, and setting time.

Sleep Wake-up Mode Setting

This mode uses visual cues (sun/moon icons and light colors) to indicate wake-up and sleep times.

1. In time display mode, short press the Sleep Wake-up Mode button (sun/moon icon) to turn the mode ON/OFF.
2. To set the Sleep Wake-up Mode time, long press the Sleep Wake-up Mode button for 3 seconds.
3. The setting sequence is: Wake-up Hour → Wake-up Minute → Sleep Hour → Sleep Minute → Exit.
4. Use '+' and '-' buttons to adjust values. Short press the Sleep Wake-up Mode button to proceed to the next setting.
5. After setting, the screen will display the sun or moon icon.



Image: Visual guide for setting the sleep wake-up mode, showing button presses and the sequence for adjusting wake-up and sleep hours and minutes.

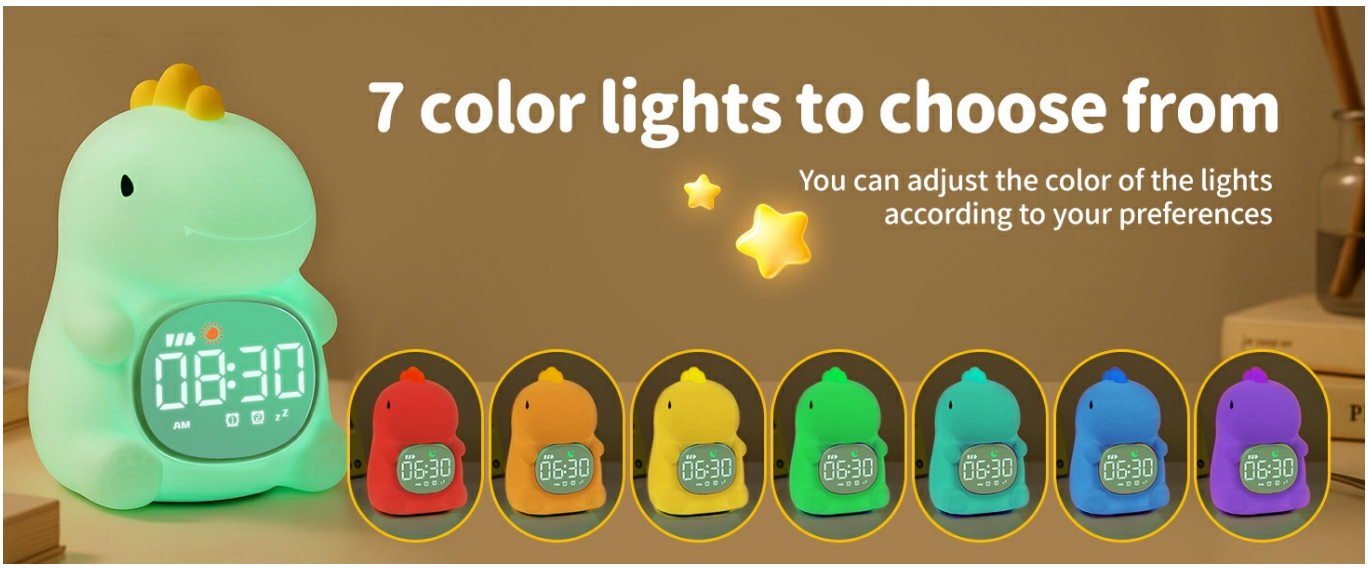


Image: Demonstrates the sleep training feature, showing the clock displaying green light for "TIME TO WAKE UP" (7:00-18:59) and blue light for "TIME TO SLEEP" (19:00-6:59).

Alarm On/Off

The clock supports two independent alarms.

1. In time display mode, short press the Alarm button (bell icon). The screen will display "Alarm 1 Time" or "OFF".
2. While "Alarm 1 Time" or "Alarm 2 Time" is displayed, long press the Alarm button for 3 seconds to toggle the alarm ON/OFF.
3. Short press the Alarm button again to set ON/OFF for the second alarm, using the same method.

Alarm Time Setting

1. In time display mode, long press the Alarm button for 3 seconds to enter alarm time setting.
2. The corresponding setting will flash. Use '+' and '-' buttons to adjust. Short press the Alarm button to proceed to the next step.
3. Setting sequence: Hour → Minute → Ringtone Selection → Volume → Weekday Mode ON/OFF.
4. Repeat for the second alarm if desired.
5. Options for Weekday Mode: "dF-E" (Monday-Friday) or "oN-E" (Every day).



Image: Visual instructions for turning alarms on or off and setting alarm times, including options for weekday or daily alarms.

White Noise Sounds

The clock offers 6 soothing ambient sounds to aid sleep.

1. Short press the Music Note button to turn white noise ON/OFF.
2. Long press the Music Note button to cycle through the 6 white noise sounds.
3. Use '+' and '-' buttons to adjust the volume (8 levels).
4. The white noise feature has a 30-minute auto-off timer.



Image: Showcases the 6 available white noise sounds (thunderstorm, campfire, brook, seagulls, birdsong, forest) and indicates a 30-minute sleep timer.

Night Light and Color Change

The clock features 2 lighting modes and 7 customizable colors.

1. Short press the Power button to turn the night light ON/OFF.
2. Tap the clock body to cycle through the 7 available colors.
3. Use the Light Bulb button to adjust screen brightness (3 levels: Low, Medium, High).



Image: Displays the MASHI Dinosaur Alarm Clock with 7 different color light options, noting that the clock should be plugged in for extended lighting use.



Image: Visual representation of the three screen brightness levels (30% Low Light, 60% Medium Light, 100% High Light) for the MASHI Dinosaur Alarm Clock.

Snooze Function

When the alarm sounds, short press any key to activate the snooze function for 5 minutes. This can be done up to 3 times.



Image: Illustrates the snooze function, showing a hand patting the clock for "Sleep for 5 more mins" and indicating that the alarm can be turned off by short pressing any key.

Official Product Videos

Ok to Wake Dinosaur Clock Feature

Your browser does not support the video tag.

Official MASHI video demonstrating the 'Ok to Wake' sleep training feature of the Dinosaur Alarm Clock.

Dinosaur Clock Product Overview

Your browser does not support the video tag.

Official MASHI video showcasing various features and uses of the Dinosaur Alarm Clock, highlighting its appeal as a gift.

Maintenance

Cleaning

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.

Storage

Store the clock in a cool, dry place when not in use for extended periods.

Troubleshooting

Clock Not Keeping Accurate Time

Ensure the clock is fully charged or continuously plugged in, especially if using lighting features frequently. Reset the time if necessary.

Alarm Not Sounding

Verify that the alarm is set to ON in the alarm settings. Check the alarm volume level.

Light Not Changing Colors

Ensure the clock is plugged in for optimal lighting performance. Tap the clock body firmly to cycle colors.

Battery Drains Quickly

Continuous use of lighting modes and white noise will consume battery faster. For prolonged use, keep the device plugged in via the Type-C cable.

SPECIFICATIONS

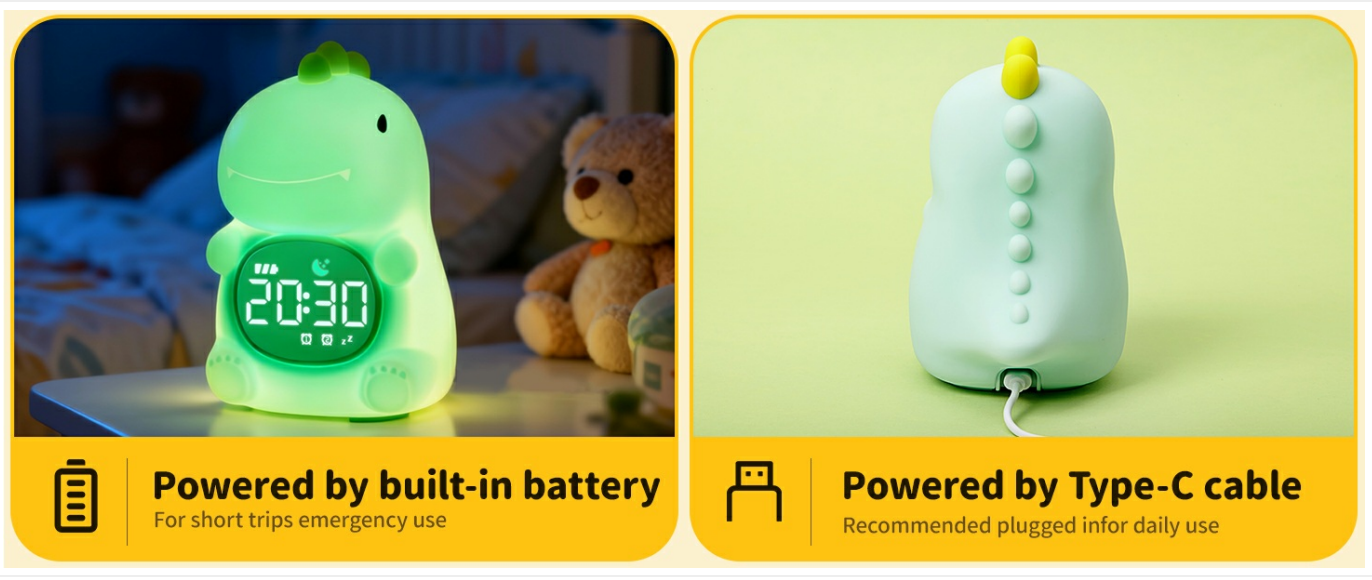


Image: Detailed specifications table for the MASHI Dinosaur Alarm Clock, including product size, power, accessories, battery capacity, input interface, and material.

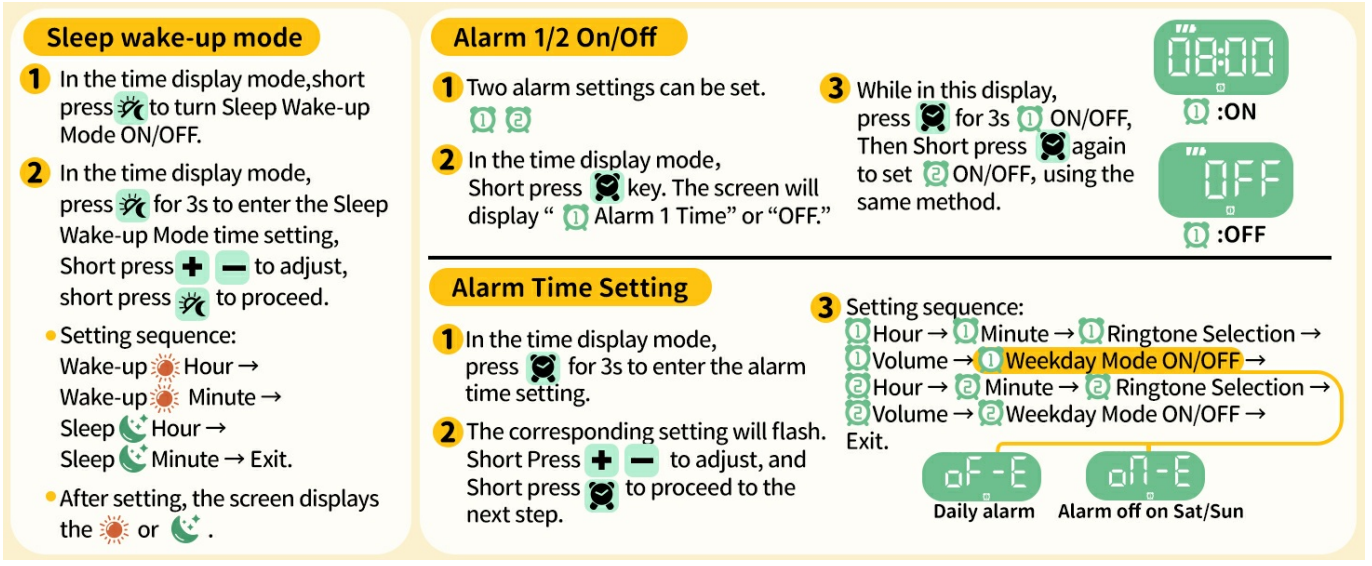


Image: Shows the dimensions of the MASHI Dinosaur Alarm Clock: 3.62 inches (width), 5.28 inches (depth), and 5.43 inches (height).

Feature	Detail
Brand	MASHI
Model Number	Dinosaurs Alarm Clock C26
Product Dimensions	5.28"W x 5.43"H

Item Weight	1.6 ounces
Power Source	Corded Electric (Type-C) / Built-in Battery
Battery Capacity	1500mAh
Power	1.5W
Display Type	Digital
Material	ABS/HIPS/Silicone Rubber
Special Features	Sleep Trainer, White Noise, Night Light, Dual Alarm

Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official MASHI website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question