Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Tecaki X3

Tecaki Mini Portable Projector Model X3 User Manual

1. Introduction

This user manual provides detailed instructions for the safe and effective operation of your Tecaki Mini Portable Projector, Model X3. Please read this manual thoroughly before using the product and retain it for future reference. This projector is designed for versatile entertainment and presentation purposes, offering high-definition visuals and flexible connectivity options.

2. Package Contents

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- Tecaki Mini Portable Projector (Model X3)
- Remote Control
- HDMI Cable
- Power Adapter
- User Manual (this document)



Image: The Tecaki Mini Portable Projector shown with its included remote control and HDMI cable.

3. Product Overview

Familiarize yourself with the physical components and connection ports of your projector.

3.1 Front View

- **Projection Lens:** Emits the image onto the screen or surface.
- **Focus Ring:** Manual adjustment for image clarity.

3.2 Rear View (Ports)

- **HDMI Port:** Connects to devices like laptops, gaming consoles, or TV sticks.
- **USB Port:** Connects to USB drives for media playback or charging.
- **AV Port:** Connects to older devices using an AV cable (not included).
- **Audio Out (3.5mm) Port:** Connects to external speakers or headphones.
- **Power Input:** Connects to the power adapter.



Image: The rear panel of the projector displaying various input and output ports for device connectivity.

3.3 Dimensions

The projector features a compact design for portability and flexible placement.



Image: A visual representation of the projector's compact dimensions, highlighting its small footprint.

4. Setup

4.1 Initial Placement

Place the projector on a stable, flat surface. The 180° rotatable stand allows for flexible projection angles, including wall, ceiling, or floor projection. Ensure there are no obstructions in front of the lens.



Image: The projector positioned to demonstrate its 180-degree rotation capability for various projection surfaces.

4.2 Power Connection

Connect the power adapter to the projector's power input port, then plug the adapter into a power outlet. The projector will typically enter standby mode.

4.3 Focus Adjustment

Turn the focus ring on the projector's lens until the projected image appears sharp and clear on your screen or surface.

4.4 Keystone Correction

The projector features automatic vertical keystone correction. If the image appears trapezoidal, the projector will automatically adjust it to a rectangular shape. Manual adjustments may also be available in the settings menu if needed.



Image: A visual explanation of the auto keystone correction feature, ensuring a perfectly rectangular image.

5. Operating Instructions

5.1 Power On/Off

- **Power On:** Press the power button on the projector or the remote control.
- **Power Off:** Press the power button again. Confirm shutdown if prompted.

5.2 Input Source Selection

Use the 'Source' button on the remote control or the projector's control panel to cycle through available input sources (HDMI, USB, AV, Screen Mirroring).

5.3 Connecting Devices

- **HDMI:** Connect an HDMI cable from your device (e.g., laptop, TV stick, gaming console) to the projector's HDMI port. Select HDMI as the input source.
- **USB:** Insert a USB flash drive into the USB port. The projector's media player interface will typically appear, allowing you to browse and play compatible files.

- **WiFi (Screen Mirroring):**
  - Navigate to the 'Screen Mirroring' or 'Wireless Projection' option in the projector's menu.
  - Connect your smartphone or tablet to the same Wi-Fi network as the projector.
  - On your device, activate screen mirroring (e.g., 'Smart View' on Android, 'Screen Mirroring' on iOS) and select the projector from the list of available devices.
  - **Note:** Due to content protection (HDCP), certain streaming apps (e.g., Netflix, Hulu, Amazon Prime Video) may not support screen mirroring. For these apps, connect a streaming device (like a TV Stick) directly via HDMI.
- **Bluetooth:** The Bluetooth function supports audio transmission only. It allows you to connect external Bluetooth speakers or headphones for enhanced audio. It does not support video mirroring via Bluetooth.



Image: Illustration of the projector's dual-band WiFi and Bluetooth capabilities for seamless connectivity.

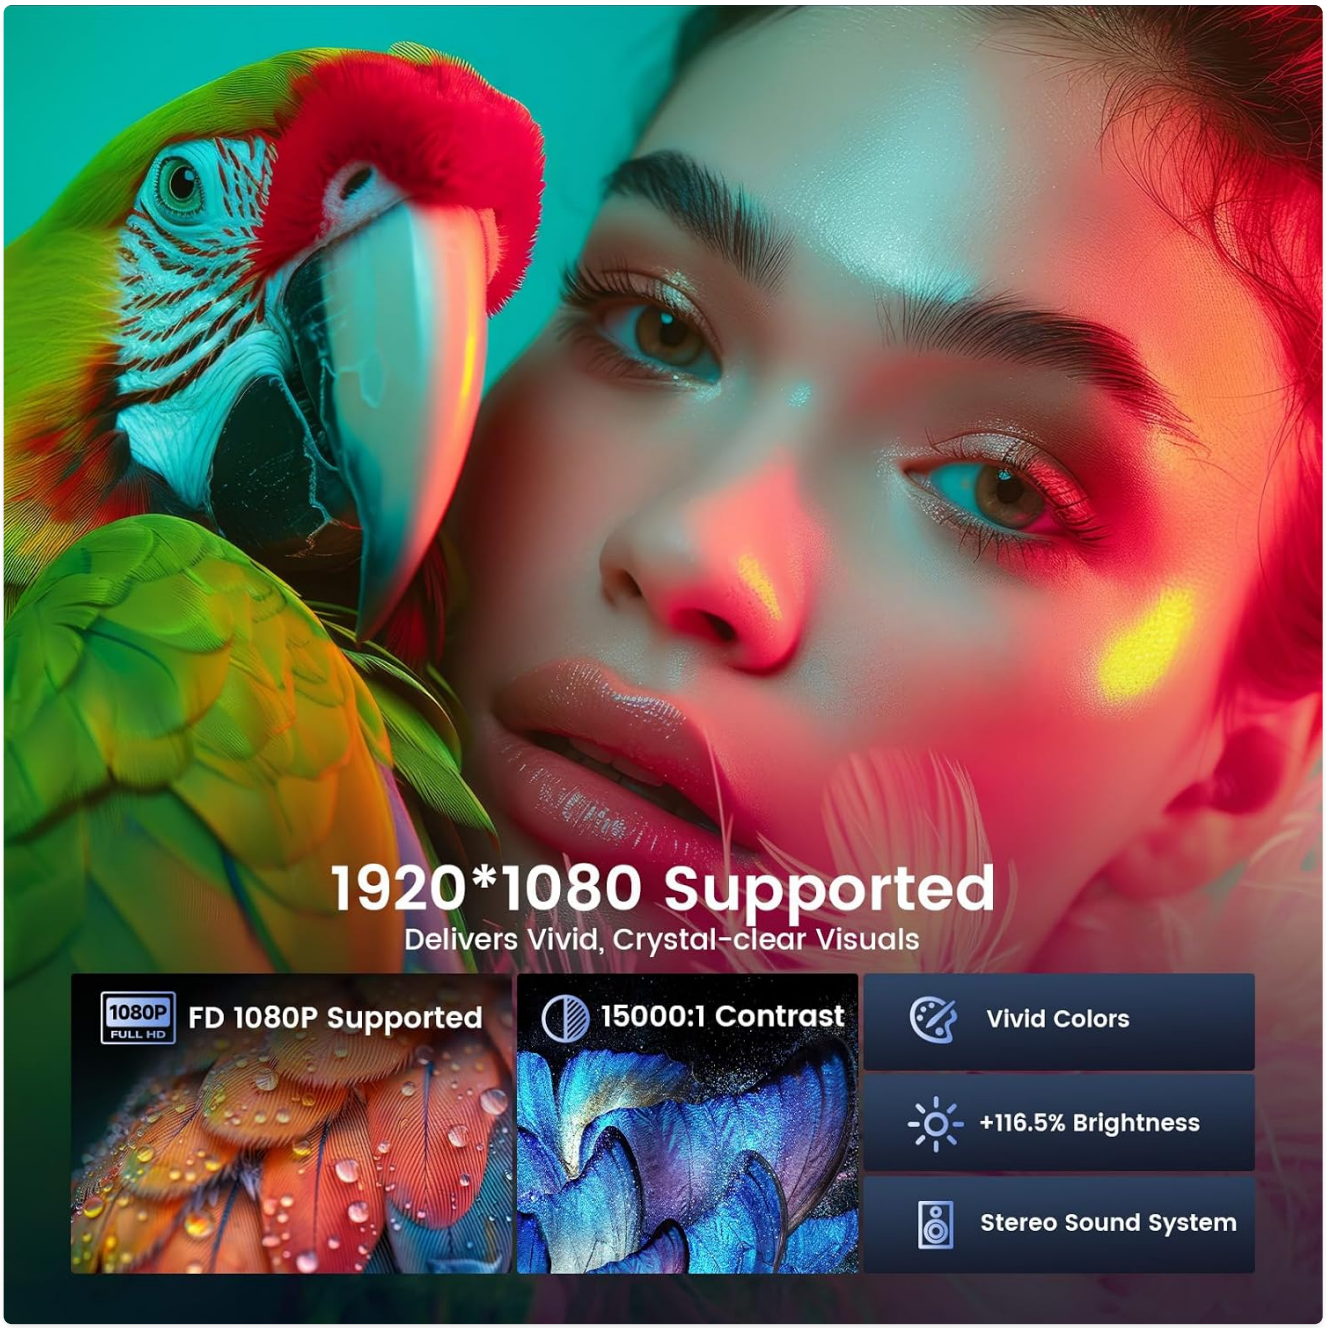


Image: The projector demonstrating compatibility with a TV Stick for accessing popular streaming services.

5.4 Audio Output

The projector has a built-in speaker. For a more immersive audio experience, connect external speakers or headphones via the 3.5mm audio out port or pair Bluetooth speakers.

5.5 Projection Size

The projector supports a screen size range of 30 to 200 inches. Adjust the distance from the projection surface to achieve your desired screen size. The optimal projection distance is typically between 1 to 2 meters (3.2 to 7.2 feet).



Image: A visual representation of the projector's ability to create a large screen experience from a compact device.

6. Maintenance

6.1 Cleaning

- **Lens:** Use a soft, lint-free cloth specifically designed for optical lenses. Do not use abrasive cleaners or cloths.
- **Exterior:** Wipe the projector's exterior with a soft, dry cloth. Avoid using liquid cleaners directly on the device.
- **Vents:** Periodically check and gently clean the ventilation openings to ensure proper airflow and prevent overheating.

6.2 Storage

When not in use, store the projector in a cool, dry place away from direct sunlight and extreme temperatures. Use the original packaging or a protective case to prevent dust accumulation and physical damage.

7. Troubleshooting

If you encounter issues with your projector, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No image projected	Power not connected; Incorrect input source; Lens cap on	Ensure power is connected; Select correct input source; Remove lens cap
Blurry image	Focus not adjusted; Incorrect projection distance	Adjust the focus ring; Adjust projector distance from screen
No sound	Volume too low; Muted; External audio device not connected/selected	Increase volume; Unmute; Check external audio connections/settings
Screen mirroring issues	Wi-Fi connection unstable; HDCP content protection; Device compatibility	Ensure stable Wi-Fi; Use HDMI for protected content; Check device compatibility
Remote control not working	Batteries low/dead; Obstruction; Not pointed at IR receiver	Replace batteries; Remove obstructions; Point remote directly at projector's IR receiver

If the problem persists after trying these solutions, please contact Tecaki customer support.

8. Specifications

Key technical specifications for the Tecaki Mini Portable Projector Model X3:

- **Brand:** Tecaki
- **Model Number:** X3
- **Item Weight:** 1.87 pounds
- **Product Dimensions:** 4.3 x 4.3 x 6.7 inches
- **Connectivity Technology:** Wi-Fi (2.4G + 5G), Bluetooth 5.2
- **Display Resolution:** 1920 x 1080 (1080P HD Supported, 4K Input Supported)
- **Special Features:** Portable, Auto Keystone Correction, 180° Rotatable Stand
- **Recommended Uses:** Gaming, Movie Viewing
- **Lamp Lifespan:** Over 50,000 hours

9. Warranty and Support

Tecaki is committed to providing high-quality products and customer service. Your projector comes with comprehensive support and warranty coverage.


9.1 Warranty Information

- **Standard Warranty:** 12 months manufacturer warranty from the date of purchase.
- **Extended Warranty:** An additional 24 months extended warranty may be available. Please consult Tecaki service support to activate your product warranty.
- If the product experiences any suspected fault issues within 36 months from the date of order, our technicians will assess and repair or replace it.



12 Months Manufacturer

Warranty

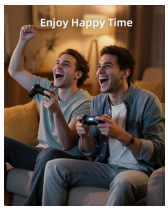


Product & Extended Warranty

9.2 Customer Support


- **Response Time:** Quick and professional replies within 24 hours.
- **Return Policy:** 30-day return policy.
- **Technical Support:** Lifetime technical support is provided for your product.



24 Hours Support

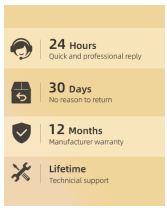

30 Days Return

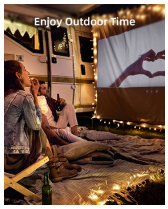

Lifetime Technical Support

For further assistance, please refer to the contact information provided with your product or visit the official Tecaki website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

The power light is on, but my Tecaki X3 projector is not opening or responding. What should I do?

If the power light on your Tecaki X3 is appearing but the projector is not responding or displaying an image, please follow these troubleshooting steps: Check the Lens Cap: Ensure the lens cap has...

Read full answer

Open the live page

https://manuals.plus/asin/B0F32BBV5M

More documents and user manuals: **https://manuals.plus/**