Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ALLIMITY RM-D420 RMD420

Instruction Manual for ALLIMITY RM-D420 RMD420 Replacement Remote Control

Model: RM-D420 RMD420

Introduction

This manual provides instructions for the ALLIMITY RM-D420 RMD420 Replacement Remote Control, designed for use with various Sony Compact Disc (CD) Players. This remote control is a direct replacement and requires no programming or pairing for the compatible models listed below.

Compatible Sony CD Player Models:

- 579da
- CDP-361
- CDP-213
- CDP-36
- CDP-XE330
- CDP-261





Figure 1: Front view of the RM-D420 RMD420 Replacement Remote Control. This image shows the full layout of the buttons, including number keys, playback controls, and function buttons.

Setup

The RM-D420 RMD420 remote control operates using two AAA alkaline batteries (not included). No programming or pairing is required for this replacement remote.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

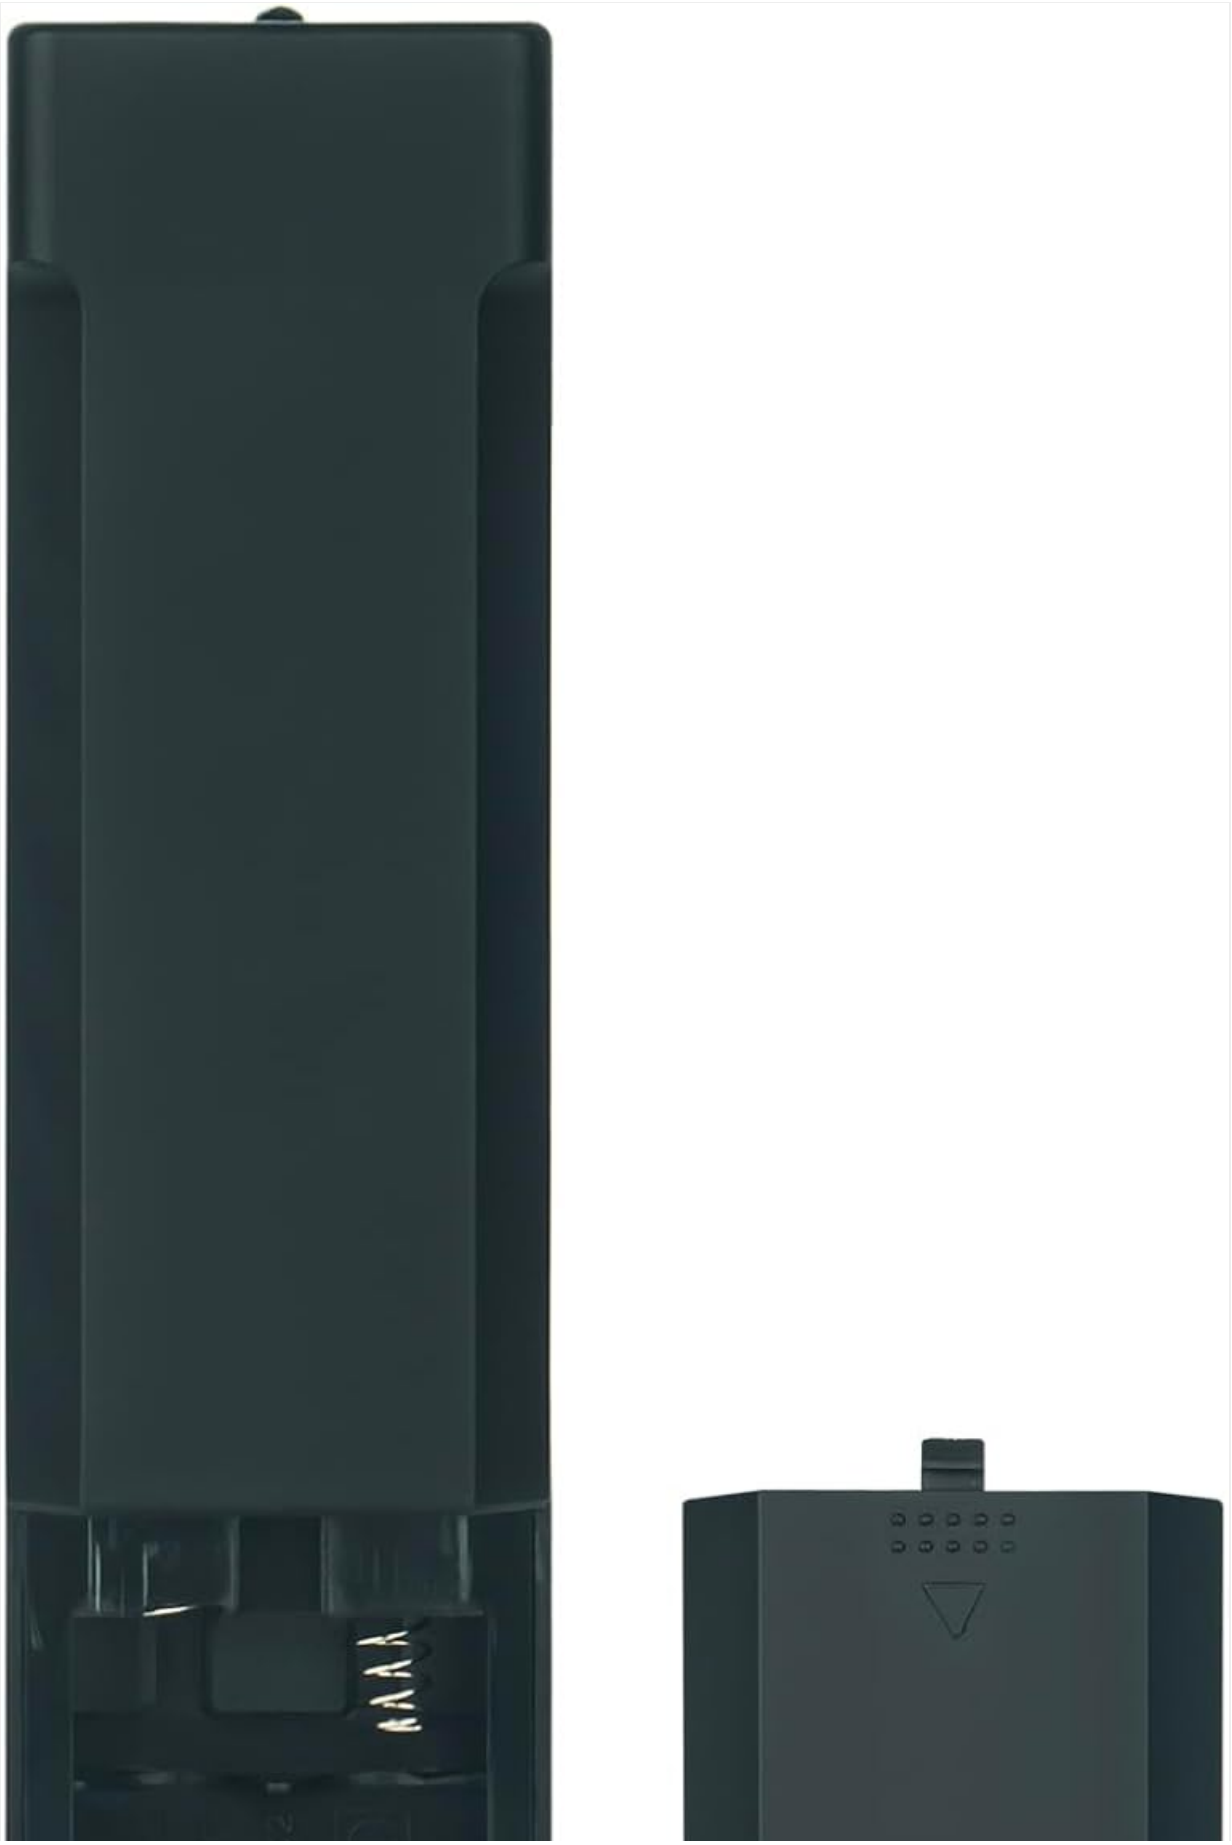




Figure 2: Back view of the remote control, illustrating the battery compartment and the required AAA battery type.

Operating Instructions

Once batteries are installed, the remote control is ready for use with your compatible Sony CD Player. Ensure there is a clear line of sight between the remote control and the CD player's infrared (IR) receiver.

Basic Functions

- **Number Buttons (0-9, >10):** Used for direct track selection.
- **PLAY MODE (CONTINUE, SHUFFLE, PROGRAM):** Selects the playback mode for your CD.
  - *CONTINUE:* Plays tracks in sequential order.
  - *SHUFFLE:* Plays tracks in a random order.
  - *PROGRAM:* Allows you to create a custom playback sequence.
- **PROGRAM:** Initiates or confirms program mode for custom track lists.
- **REPEAT:** Repeats the current track or the entire disc/program.
- **TIME:** Displays different time information (e.g., elapsed time, remaining time).
- **CHECK:** Verifies the programmed track list.
- **CLEAR:** Clears a programmed track from the list.
- **FADER:** Adjusts audio fade-in/fade-out (functionality may vary by CD player model).
- **Playback Controls (► Play, Pause, ■ Stop, ◄◄ Skip Back, ►► Skip Forward):**Standard controls for CD playback.
- **AMS (Automatic Music Sensor):** Used for quick track searching.
- **LINE OUT LEVEL (+/-):** Adjusts the audio output level from the CD player's line out jacks (functionality may vary by CD player model).



Figure 3: Angled view of the remote control, providing a clearer perspective of the button arrangement.

Maintenance

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water and a mild detergent, then wipe dry immediately. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the remote's finish or internal components.

Battery Care

- Replace batteries when the remote's responsiveness decreases.
- Remove batteries if the remote control will not be used for an extended period to prevent battery leakage, which can damage the device.
- Dispose of used batteries according to local regulations.

Troubleshooting

If the remote control is not functioning as expected, consider the following:

- **No Response from CD Player:**
  - Ensure new AAA batteries are correctly installed in the remote control.
  - Verify that there is nothing blocking the path between the remote control's IR emitter and the CD player's IR receiver. Obstructions can prevent the signal from reaching the device.
  - Check if the CD player is powered on.
  - Confirm that your CD player model is listed as compatible with this remote control.
- **Intermittent Functionality:**
  - Batteries may be low. Replace them with new alkaline batteries.
  - Ensure you are within the effective range of the CD player's IR receiver.

Specifications

Feature	Detail
Model Number	RM-D420 RMD420
Brand	ALLIMITY
Compatible Devices	Sony Compact Disc (CD) Players (models: 579da, CDP-361, CDP-213, CDP-36, CDP-XE330, CDP-261)
Power Source	2 x AAA Alkaline Batteries (not included)
Product Dimensions	5 x 1 x 0.5 inches (approximately 12.7 x 2.54 x 1.27 cm)
Item Weight	1.94 ounces (approximately 55 grams)
Color	Black
Special Feature	Ergonomic design
Max Number of Supported Devices	18 (Refers to internal remote capability, pre-programmed for listed CD players)
Manufacturer	YUDAXINFACTORY





Figure 4: Dimensions of the RM-D420 RMD420 remote control. The remote measures approximately 17.5 cm (6.89 inches) in length and 4 cm (1.57 inches) in width.

Warranty and Support

Information regarding specific warranty terms or direct customer support for the ALLIMITY RM-D420 RMD420 Replacement Remote Control is not available in the provided product data. For any inquiries regarding warranty or support, please refer to the seller or manufacturer directly through your purchase platform.

Official Product Videos

No official product videos from the seller were provided in the available data for this product.

© 2025 ALLIMITY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F32TL3TH

More documents and user manuals: **https://manuals.plus/**