OUKITEL

OUKITEL C1 Smartphone User Manual

Model: C1

1. Introduction

This manual provides essential information for the safe and efficient use of your OUKITEL C1 smartphone. Please read it thoroughly before operating your device to ensure optimal performance and longevity.



Figure 1: OUKITEL C1 Smartphone, highlighting its sleek design and Android 15 operating system.

Your browser does not support the video tag.

Video 1: An overview of the OUKITEL C1 Android 15 Cell Phone, showcasing its design and key features.

2. What's in the Box

Verify that all items are present in your package:

- 1x OUKITEL C1 Smartphone
- 1x Charger Cable (Type-C)
- 1x Protective Case
- 1x Type-C Data Cable
- 1x Card Needle (SIM Ejector Tool)



Figure 2: Contents of the OUKITEL C1 retail package.

3. Physical Features and Components

Familiarize yourself with the physical layout of your OUKITEL C1 smartphone:

- **Display:** 6.52-inch HD+ Waterdrop Screen with 400nit peak brightness.
- **Cameras:** 13MP Main Camera (rear) and 5MP Front Camera.
- **Buttons:** Power button (with integrated fingerprint sensor) and Volume buttons on the side.
- **Ports:** USB Type-C port for charging and data transfer, 3.5mm audio jack.
- **SIM Tray:** Supports Triple SIM (two 4G SIM cards and one TF card for storage expansion up to 1TB).



Figure 3: The OUKITEL C1's slim profile and lightweight design.



Figure 4: Key hardware components including the Octa-Core processor, 3.5mm audio jack, and integrated GPS.

4. Setup

4.1 SIM and TF Card Installation

The OUKITEL C1 supports two Nano-SIM cards and one TF (microSD) card simultaneously.

1. Locate the SIM tray on the side of the phone.
2. Insert the provided card needle into the small hole next to the tray to eject it.
3. Carefully place your Nano-SIM cards and TF card into the designated slots on the tray. Ensure they are correctly oriented.
4. Gently push the tray back into the phone until it is flush with the device body.



Figure 5: Correct insertion of SIM and TF cards into the tray.

4.2 Initial Power On and Basic Setup

1. Press and hold the Power button (located on the side) until the OUKITEL logo appears.
2. Follow the on-screen prompts to complete the initial setup, which includes selecting your language, connecting to Wi-Fi, setting up your Google account, and configuring security options.
3. Ensure your device is sufficiently charged before beginning the setup process.

5. Operating Instructions

5.1 Basic Navigation

The OUKITEL C1 operates on Android 15, offering an intuitive touch-based interface. Use gestures such as tapping, swiping, pinching, and spreading to navigate the system and applications.

5.2 Calls and Messaging

- **Making Calls:** Open the Phone app, enter the number, and tap the call icon.
- **Sending Messages:** Open the Messages app, start a new conversation, enter the recipient and your message.

5.3 Internet and Connectivity

- **Wi-Fi:** Go to Settings > Network & internet > Wi-Fi to connect to available networks. The phone supports 2.4G/5G Wi-Fi.
- **Mobile Data:** Ensure your SIM card is active and mobile data is enabled in Settings > Network & internet > Mobile network. The OUKITEL C1 supports 4G networks and is compatible with T-Mobile (not AT&T or Verizon).

- **Bluetooth:** Enable Bluetooth in Settings > Connected devices to pair with other Bluetooth devices.
- **GPS:** The device features built-in GPS, GLONASS, Galileo, and Beidou for precise navigation.

5.4 Battery Management

The OUKITEL C1 is equipped with a 5150mAh battery for extended usage. To optimize battery life:

- Charge the phone using the provided charger and Type-C cable.
- Enable Battery Saver mode in Settings > Battery.
- Close unused applications running in the background.
- Reduce screen brightness or enable adaptive brightness.

The phone also supports OTG (On-The-Go) functionality, allowing it to charge other compatible devices.

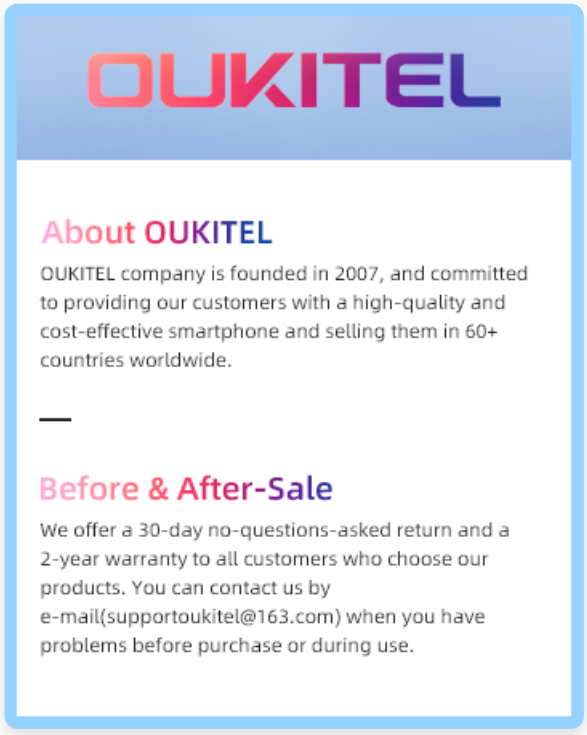


Figure 6: The OUKITEL C1's reverse charging feature.

6. Camera Usage

Capture your moments with the OUKITEL C1's 13MP rear camera and 5MP front camera.

6.1 Taking Photos and Videos

1. Open the Camera app from your home screen or app drawer.
2. Switch between photo and video modes as desired.
3. Tap the shutter button to take a photo or start/stop video recording.
4. Use the front/rear camera switch icon to change cameras.



Figure 7: OUKITEL C1 camera specifications and capabilities.

6.2 Camera Modes

- **Portrait Mode:** Enhances subjects by blurring the background, creating a professional-looking depth effect.
- **Panorama:** Capture wide-angle scenes by slowly panning the camera.

7. Storage and Performance

The OUKITEL C1 is designed for smooth performance and ample storage:

- **RAM:** 16GB (4GB physical RAM + 12GB virtual memory expansion) for efficient multitasking.
- **ROM:** 128GB internal storage for your apps, photos, and files.
- **Expandable Storage:** Supports TF card expansion up to 1TB, providing vast space for your media.



Figure 8: Storage capabilities of the OUKITEL C1.

8. Security Features

The OUKITEL C1 offers convenient and secure unlocking methods:

- **Fingerprint Unlock:** The power button integrates a fingerprint sensor for quick and secure access to your device.

- **Face Unlock:** Utilize the front camera for facial recognition to unlock your phone.
- **Standard Security:** PIN, Pattern, and Password options are also available.

9. Maintenance and Care

To ensure the longevity and optimal performance of your OUKITEL C1 smartphone, follow these guidelines:

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive materials or harsh chemicals.
- **Temperature:** Operate the device within normal temperature ranges. Avoid extreme heat or cold.
- **Water Exposure:** The OUKITEL C1 is not waterproof. Avoid exposure to water or excessive moisture.
- **Impact:** Protect your phone from drops and impacts. Use the provided protective case.
- **Software Updates:** Regularly check for and install system updates to ensure your device has the latest features and security patches.

10. Troubleshooting

If you encounter issues with your OUKITEL C1, try the following solutions:

Problem	Possible Solution
Phone does not turn on	Ensure the battery is charged. Press and hold the Power button for at least 10-15 seconds to force restart.
Apps are slow or crashing	Close background apps. Clear app cache (Settings > Apps > [App Name] > Storage > Clear cache). Restart the phone.
Cannot connect to Wi-Fi	Ensure Wi-Fi is enabled. Restart your router. Forget the network and reconnect.
No mobile network signal	Check SIM card insertion. Ensure mobile data is enabled. Verify carrier compatibility (T-Mobile supported). Restart the phone.
Fingerprint sensor not working	Ensure your finger is clean and dry. Re-register your fingerprints in Settings > Security.

For further assistance, please contact OUKITEL customer support.

11. Specifications

Key technical specifications of the OUKITEL C1 smartphone:

Feature	Detail
Operating System	Android 15
Processor	Octa-Core

Feature	Detail
RAM	16GB (4GB physical + 12GB virtual)
Internal Storage (ROM)	128GB
Expandable Storage	Up to 1TB via TF card
Display	6.52-inch HD+ IPS Waterdrop Screen (400nit brightness)
Rear Camera	13MP
Front Camera	5MP
Battery Capacity	5150mAh
SIM Card Support	Triple SIM (Dual Nano-SIM + TF Card)
Network Compatibility	4G (Supports T-Mobile; Not AT&T or Verizon)
Connectivity	Wi-Fi (2.4G/5G), Bluetooth, GPS (GLONASS, Galileo, Beidou)
Audio Jack	3.5mm
Security Features	Fingerprint Unlock, Face Unlock
Dimensions	9.18mm thickness
Weight	214g

12. Warranty and Support

OUKITEL is committed to providing high-quality products and customer satisfaction.

- **Warranty:** Your OUKITEL C1 smartphone comes with a 2-year warranty.
- **Returns:** A 30-day no-questions-asked return policy is offered.
- **Customer Service:** For any inquiries, technical support, or warranty claims, please contact OUKITEL customer service via email at supportoukitel@163.com.

© 2025 OUKITEL. All rights reserved.