Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Aspes AV3602

Aspes AV3602 Ceramic Hob User Manual

Model: AV3602

1. Introduction

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Aspes AV3602 ceramic hob. Please read these instructions carefully before using the appliance and keep them for future reference.
The Aspes AV3602 is a high-performance ceramic hob featuring three cooking zones, touch controls, and nine power levels, designed for modern kitchens. It incorporates safety features such as automatic shutdown to ensure secure operation.

2. Safety Instructions

General Safety:

- Read all instructions before installation and use.
- This appliance is intended for domestic use only.
- Do not operate the appliance with wet hands or when standing in water.
- Keep children away from the appliance during operation.
- Ensure proper ventilation in the kitchen.

Electrical Safety:

- The appliance must be correctly earthed.
- Do not modify the power cord. If damaged, it must be replaced by a qualified technician.
- Disconnect the appliance from the power supply before any cleaning or maintenance.

During Use:

- Do not leave the hob unattended during cooking, especially when using high heat settings.
- Avoid placing metallic objects like knives, forks, spoons, and lids on the hob surface as they can become hot.
- Do not use the hob as a work surface or for storage.
- After use, switch off the hob using its control. Do not rely on pan detection.

3. Product Overview

The Aspes AV3602 ceramic hob features a sleek black glass design with three radiant cooking zones and intuitive touch controls.

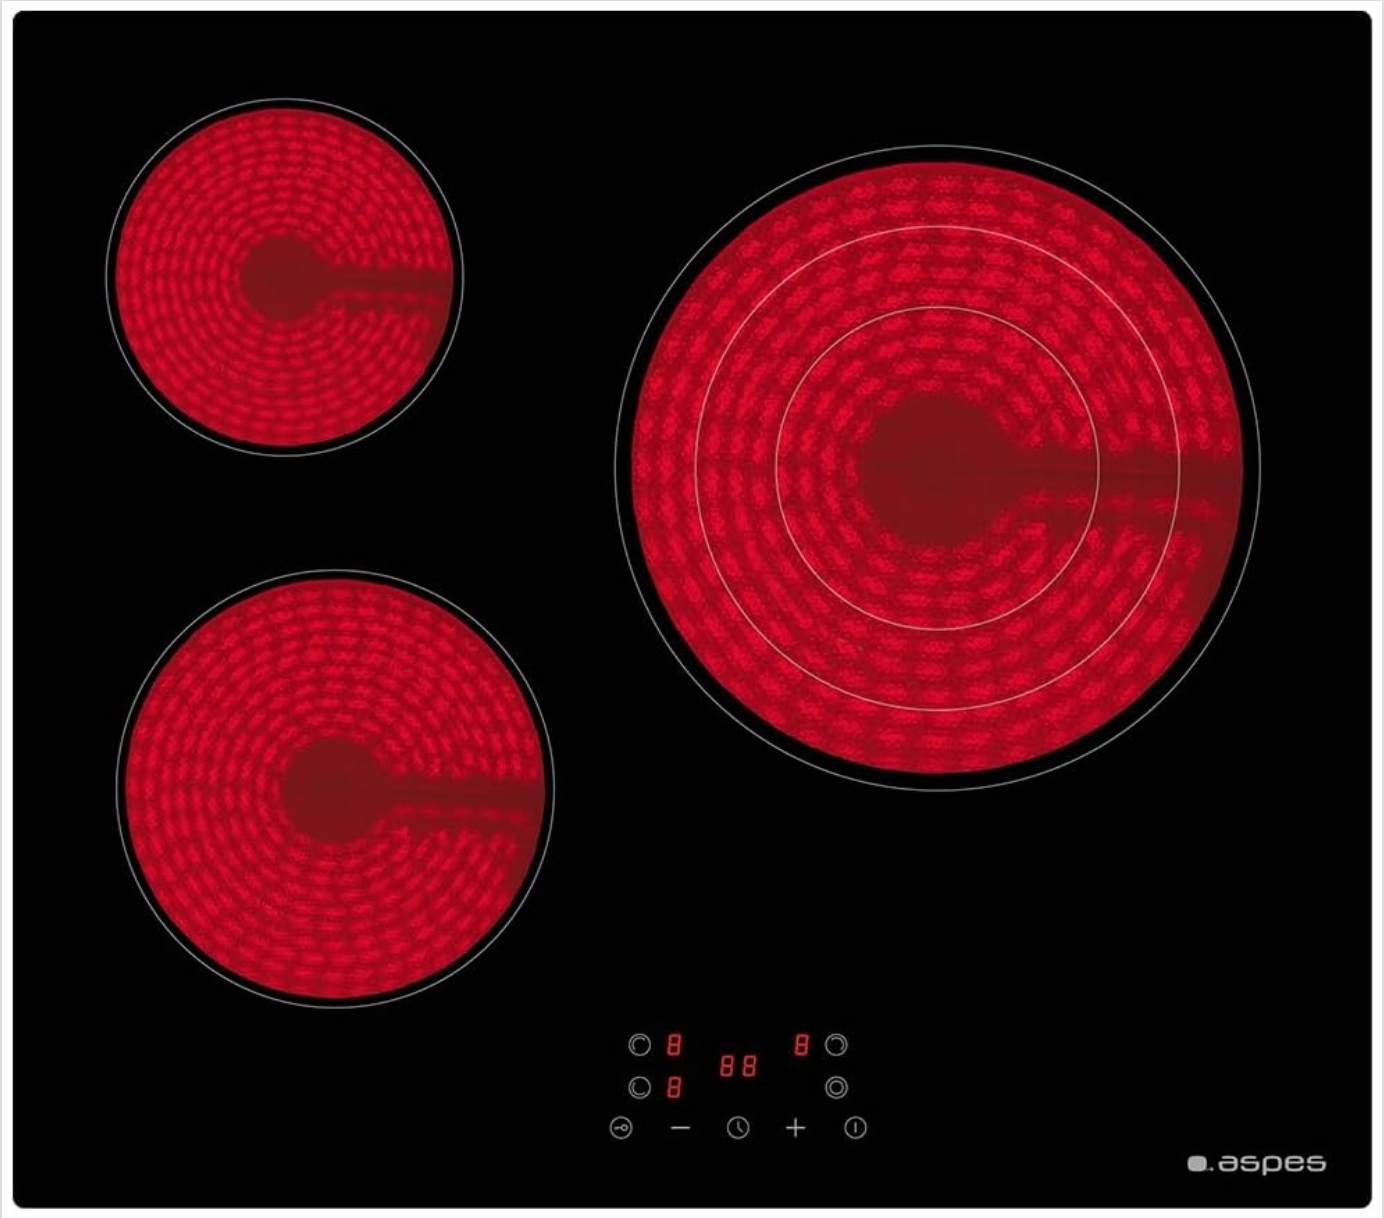


Image 1: Top view of the Aspes AV3602 ceramic hob. It shows a black glass surface with three circular radiant cooking zones. The largest zone is on the right, and two smaller zones are on the left. Below the cooking zones, the touch control panel is visible, featuring power level indicators and control buttons.

3.1 Components

- **Cooking Zones:** Three radiant zones, including one triple-crown zone for varying pot sizes.
- **Touch Control Panel:** For power selection and function activation.
- **Black Glass Surface:** Durable and easy to clean.
- **Safety Auto-Shutdown:** Automatically turns off a zone if left unattended for too long.

4. Installation and Setup

Installation should only be carried out by a qualified technician in accordance with local regulations and safety standards.

4.1 Unpacking

- Carefully remove the hob from its packaging.
- Check for any damage during transit. Do not install if damaged.
- Retain packaging materials for future transport or disposal.

4.2 Required Dimensions

The hob requires an installation cutout of **560 mm x 490 mm**. Ensure sufficient clearance around the appliance for ventilation.

4.3 Electrical Connection

- The appliance operates on **220 Volts**.
- The electrical connection must be made to a suitable power supply by a qualified electrician.
- Ensure the wiring is correctly earthed and protected by an appropriate circuit breaker.

4.4 Securing the Hob

The hob is secured into the countertop using mounting clips. Ensure the hob is firmly seated and stable to prevent movement during use. The product description mentions "2 solapas o grapas para la sujeción", which translates to "2 flaps or clips for fastening". While a review mentions this might be insufficient, the manual should reflect the intended installation method.

5. Operating Instructions

The Aspes AV3602 ceramic hob is controlled via a touch-sensitive panel. The controls are intuitive and respond to light touches.

5.1 Control Panel Layout

The control panel typically includes:

- **Power On/Off Button:** To activate or deactivate the hob.
- **Zone Selection Buttons:** To select the desired cooking zone.
- **Power Level Adjusters (+/-):** To increase or decrease the heat setting (9 levels).
- **Timer Function (if applicable):** To set cooking duration.
- **Lock Function:** To prevent accidental changes to settings.

5.2 Turning On and Selecting a Zone

1. Touch the Power On/Off button () to turn on the hob. The display will show "0" or a similar indicator.
2. Select the desired cooking zone by touching its corresponding selection button.
3. Use the '+' or '-' buttons to adjust the power level from 1 to 9.

5.3 Using the Triple-Crown Zone

One of the cooking zones features a triple-crown design, allowing it to adapt to different pot diameters. When selecting this zone, you may be able to activate inner, middle, or outer rings depending on the size of your cookware. Refer to the hob's display for active ring indicators.

5.4 Safety Auto-Shutdown

The hob is equipped with an automatic shutdown function for safety. If a cooking zone is left active without any changes to its settings for an extended period, it will automatically switch off. The duration before shutdown varies depending on the power level selected.

5.5 Child Lock Function

To activate the child lock, touch and hold the lock button (often indicated by a key or padlock symbol) for a few seconds. This will disable the control panel, preventing accidental operation. Repeat the process to deactivate the lock.

6. Cleaning and Maintenance

Regular cleaning and maintenance will ensure the longevity and optimal performance of your ceramic hob.

6.1 Daily Cleaning

- Always ensure the hob is cool and disconnected from the power supply before cleaning.
- Wipe the glass surface with a damp cloth and a small amount of mild detergent.
- For stubborn stains, use a specialized ceramic hob cleaner and a scraper designed for glass hobs.
- Rinse with a clean damp cloth and dry thoroughly with a soft cloth.

6.2 Avoiding Damage

- Do not use abrasive cleaners, scouring pads, or harsh chemicals.
- Avoid dropping heavy or sharp objects on the glass surface.
- Do not drag pots and pans across the surface, as this can cause scratches.
- Clean up spills immediately, especially sugary liquids, to prevent them from burning onto the surface and causing permanent damage.

7. Troubleshooting

Before contacting customer service, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; child lock activated.	Check power connection; deactivate child lock.
Cooking zone not heating.	Incorrect power level selected; pan not suitable.	Increase power level; ensure pan base is flat and covers the zone.
Hob switches off automatically.	Safety auto-shutdown activated; overheating.	This is a normal safety feature. Allow to cool if overheating.
Error code displayed.	Specific malfunction.	Refer to the full manual for specific error codes or contact customer support.

8. Technical Specifications

- **Model:** Aspes AV3602
- **Type:** Ceramic Hob (Radiant)
- **Color:** Black Glass
- **Number of Cooking Zones:** 3
- **Total Power:** 5700 W
- **Power Levels:** 9
- **Voltage:** 220 V
- **Product Dimensions (H x W x D):** 50 x 590 x 520 mm (5 x 59 x 52 cm)
- **Cutout Dimensions (W x D):** 560 x 490 mm
- **Weight:** 8.67 kg
- **Control Type:** Touch Control
- **Safety Features:** Automatic Shutdown, Child Lock

9. Warranty Information

Your Aspes AV3602 ceramic hob comes with a standard manufacturer's warranty. The warranty period and terms may vary depending on your country of purchase and local regulations. Please retain your proof of purchase for any warranty claims.

The warranty typically covers manufacturing defects and malfunctions under normal domestic use. It does not cover damage caused by improper installation, misuse, accidental damage, or unauthorized repairs.

For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official Aspes website.

10. Customer Support

If you encounter any issues that cannot be resolved using the troubleshooting guide, or if you require further assistance, please contact Aspes customer support.

- **Website:** Visit the official Aspes website for support resources, FAQs, and contact information.
- **Service Center:** Locate an authorized service center in your area for professional repairs.
- **Before Contacting:** Please have your model number (AV3602) and proof of purchase ready.

© 2025 Aspes. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F3DQZ6S1

More documents and user manuals: **https://manuals.plus/**