Chefman RJ14-DB-MID-AM

Chefman Caffeinator Single Serve Coffee Maker

User Manual

Model: RJ14-DB-MID-AM

Introduction

Thank you for choosing the Chefman Caffeinator Single Serve Coffee Maker. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new coffee machine. Please read it thoroughly before first use and keep it for future reference.



Image: The Chefman Caffeinator coffee maker, showcasing its sleek design, a coffee mug, and options for K-Cup pods and ground coffee brewing.

Setup and First Use

1. **Unpacking:** Carefully remove all packaging materials and inspect the coffee maker for any damage. Ensure all components are present: coffee maker unit, 48 oz. removable water reservoir, reusable coffee grounds basket, and charcoal water filter.
2. **Placement:** Place the coffee maker on a stable, flat, heat-resistant surface, away from the edge of the countertop. Ensure adequate ventilation around the unit.
3. **Clean the Water Reservoir:** Before first use, wash the removable 48 oz. water reservoir and the reusable coffee grounds basket with warm, soapy water. Rinse thoroughly and dry.
4. **Install Charcoal Water Filter:** Insert the charcoal water filter into its designated slot within the water reservoir. This helps ensure optimal coffee taste.

5. **Fill Water Reservoir:** Fill the 48 oz. removable water reservoir with fresh, cold water up to the MAX fill line. Reattach it securely to the coffee maker.



Image: The Chefman Caffeinator coffee maker with its transparent 48 oz. removable water reservoir, showing the charcoal filter inside and an LED alert for low water level.

6. **Initial Cleaning Cycle:** Perform an initial cleaning cycle without coffee. Fill the reservoir with water, place a large mug on the drip tray, and select the "CLEAN" function. This primes the system and removes any manufacturing residues. Repeat if desired.

Operating Instructions

The Chefman Caffeinator offers versatile brewing options and customizable settings for your perfect cup.

Brewing Coffee

1. **Prepare Coffee:**
    - **For K-Cup Pods:** Lift the brew head handle, insert a K-Cup pod into the holder, and close the handle firmly until it clicks.
    - **For Ground Coffee:** Place the reusable coffee grounds basket into the brew head. Add your desired amount of ground coffee (typically 1-2 tablespoons per cup, adjust to taste). Close the brew head handle firmly.



Image: A top-down view of the Chefman Caffeinator's brew head, illustrating how to insert a K-Cup pod or use the included reusable coffee filter with ground coffee.

2. **Place Mug:** Position your coffee mug or travel cup on the adjustable drip tray. The "Easy Lift System" allows you to adjust the height to minimize splashes.



Image: Two Chefman Caffeinator units side-by-side, illustrating the adjustable mug lift system that accommodates various cup sizes and reduces splatter.

3. **Select Settings:** Use the touch controls on the display panel to customize your brew.
    - **Cup Size:** Choose from 4oz, 6oz, 8oz, 10oz, or 12oz.
    - **Brew Strength:** Select Light, Classic, or Strong.
    - **Coffee Temperature:** Choose Warm, Hot, or Piping Hot.
    - **Iced Coffee Function:** For iced coffee, select "OVER ICE". This function brews at a lower temperature to prevent dilution.



Image: The Chefman Caffeinator brewing coffee directly over ice into a glass, demonstrating its specialized "OVER ICE" function for undiluted iced coffee.

- **Programmable Favorites:** Use the FAV 1-4 buttons to save your preferred brew settings for quick, one-touch brewing.



Image: A detailed view of the Chefman Caffeinator's control panel, showing options for cup size, brew strength, temperature, iced coffee, and programmable favorite buttons.

4. **Start Brewing:** Press the "BREW" button to begin. The "TripleStream Technology" ensures optimal flavor extraction.



Image: A close-up shot of the Chefman Caffeinator's internal brewing mechanism, highlighting the TripleStream Technology nozzles designed for robust flavor extraction.

5. **Stop Brewing:** Press the "STOP" button at any time to halt the brewing process.

Care and Maintenance

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Chefman Caffeinator.

- **Daily Cleaning:**
  - After each use, remove and empty the K-Cup holder or reusable grounds basket. Wash with warm, soapy water and rinse thoroughly.
  - Empty and clean the drip tray and its cover. Wipe down the exterior of the machine with a damp cloth.
- **Self-Clean Function:** Periodically use the "CLEAN" function to flush the internal components. Fill the water reservoir,

place an empty mug, and press "CLEAN".

- **Descaling:** Mineral deposits can build up over time, affecting performance. Descale your coffee maker every 3-6 months, or more frequently if you have hard water.
  - Fill the water reservoir with a mixture of white vinegar and water (1:1 ratio).
  - Place a large mug on the drip tray.
  - Run several brew cycles until the reservoir is empty.
  - Rinse the reservoir and fill with fresh water. Run several cycles with fresh water to flush out any remaining vinegar.
- **Charcoal Water Filter Replacement:** The charcoal water filter should be replaced approximately every 2 months or after 60 uses, whichever comes first, to maintain water quality.

Troubleshooting

If you encounter issues with your Chefman Caffeinator, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Coffee maker does not brew.	No water in reservoir; reservoir not seated correctly; brew head not closed properly; machine needs descaling.	Fill reservoir; ensure reservoir is firmly in place; close brew head until it clicks; perform descaling cycle.
Coffee tastes weak or watery.	Incorrect coffee-to-water ratio; wrong brew strength selected; machine needs descaling.	Adjust coffee amount; select "Strong" brew setting; perform descaling cycle.
Brew head is difficult to open or close.	Coffee grounds or debris obstructing mechanism; misalignment.	Clean around the brew head area thoroughly. Ensure no K-Cup or grounds basket is jammed. If issue persists, contact customer support.
"LOW WATER" LED alert.	Water reservoir is low or empty.	Refill the 48 oz. water reservoir with fresh, cold water.
Coffee is not hot enough.	Temperature setting is too low; machine needs descaling.	Select "Piping Hot" temperature setting; perform descaling cycle.

Product Specifications

- **Model Name:** Caffeinator
- **Model Number:** RJ14-DB-MID-AM
- **Brand:** Chefman
- **Dimensions (D x W x H):** 14" x 4.5" x 12.6"
- **Weight:** 5.7 Pounds

- **Power:** 1500W / 120V
- **Water Reservoir Capacity:** 48 oz.
- **Coffee Input Type:** K-Cup Pods, Ground Coffee
- **Filter Type:** Reusable (included), Charcoal Water Filter
- **UPC:** 810170923418

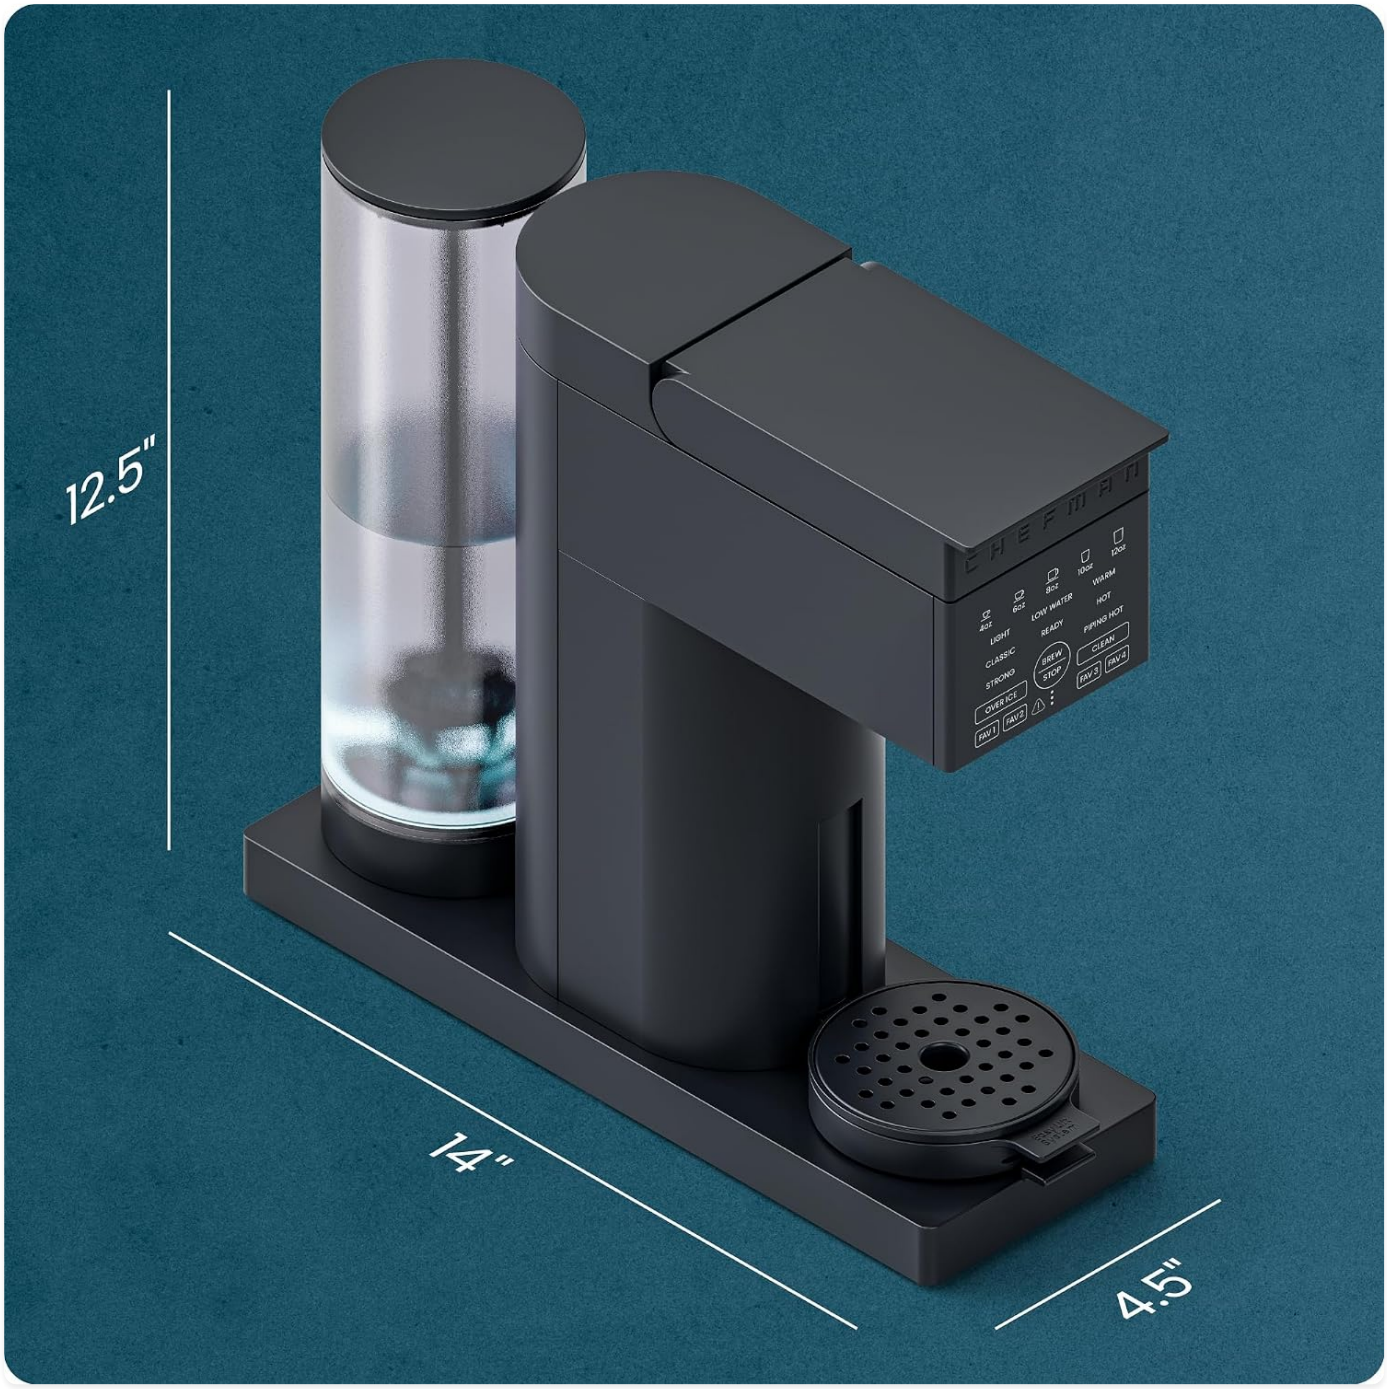


Image: A diagram illustrating the precise dimensions (depth, width, and height) of the Chefman Caffeinator coffee maker.

Warranty and Support

Your Chefman Caffeinator Single Serve Coffee Maker is backed by a**5-year warranty** provided by Chefman, ensuring long-lasting durability and peace of mind.
For product support, warranty claims, or further assistance, please visit the official Chefman website or contact their customer service department. Refer to the product packaging or Chefman's official resources for the most current contact

information.

Please retain your proof of purchase for warranty purposes.

© 2025 Chefman. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Where can I buy a replacement reusable coffee filter basket for the Chefman Caffeinator RJ14-DB-MID-AM?

To purchase a replacement reusable coffee grounds basket for your Chefman Caffeinator (Model RJ14-DB-MID-AM), you should follow these steps:Contact Chefman Support: The official manual recommends visiting the official Chefman website or contacting their customer...

Read full answer