oneisall P2

oneisall P2 Cordless Pet Grooming Clippers User Manual

Model: P2

1. Introduction

Thank you for choosing the oneisall P2 Cordless Pet Grooming Clippers. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your grooming kit. Please read it thoroughly before first use and retain it for future reference.
The oneisall P2 grooming kit is designed to provide a comfortable and efficient grooming experience for your pets, featuring low noise operation, sharp blades, and a cordless design for ease of use.

2. Safety Instructions

- Read all instructions before using the appliance.
- Keep the appliance away from water. Do not use it near bathtubs, showers, basins, or other vessels containing water.
- Do not immerse the clipper body in water. The blades are detachable and washable, but the main unit is not waterproof.
- Always unplug the charger from the power outlet when not in use, before cleaning, or before performing maintenance.
- Do not operate the appliance with a damaged cord or plug, or if it malfunctions or has been dropped or damaged.
- Keep the cord away from heated surfaces.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual.
- Ensure the pet is calm and comfortable before grooming.
- Regularly check blades for damage or dullness to prevent pulling hair or injury to the pet.

3. Product Components

The oneisall P2 Pet Grooming Kit includes the following items:

- 1 x oneisall P2 Pet Grooming Clipper
- 6 x Detachable Guard Combs (3mm, 6mm, 9mm, 12mm, 15mm, 18mm)
- 1 x Steel Comb
- 1 x Pair of Scissors
- 1 x AC Power Adapter
- 1 x Cleaning Brush
- 1 x Bottle of 5ml Lubricant Oil



Image 3.1: Overview of the oneisall P2 Pet Grooming Kit, showing the clipper, six guard combs, steel comb, scissors, power adapter, cleaning brush, and lubricant oil.

4. Setup

4.1 Charging the Clipper

Before first use, fully charge the clipper. Connect the AC power adapter to the charging port on the clipper and then plug it into a power outlet.

- The red indicator light will illuminate when the clipper is charging.
- Once fully charged, the indicator light will turn green.



Image 4.1: The clipper connected to its charger, illustrating the charging indicator light. Red indicates charging, green indicates fully charged.

4.2 Attaching and Detaching Guard Combs

The kit includes six guard combs for various hair lengths. To attach a guard comb:

1. Ensure the clipper is turned off.
2. Align the guard comb with the clipper blade.
3. Slide the comb onto the blade until it clicks securely into place.

To detach a guard comb, gently push it off the blade.



Image 4.2: The oneisall P2 clipper shown with several guard combs, demonstrating how they attach to the blade for different cutting lengths.

5. Operating Instructions

5.1 Adjusting Blade Length

The clipper features an adjustable blade distance mechanism, allowing for fine-tuning of cutting length without a guard comb. Rotate the ring on the clipper body to select your desired blade length (e.g., 0.8mm, 1.1mm, 1.4mm, 1.7mm, 2.0mm).



Image 5.1: Close-up of the clipper showing the adjustable blade length settings, ranging from 0.8mm to 2.0mm.

5.2 Grooming Your Pet

1. **Prepare Your Pet:** Ensure your pet is clean, dry, and free of tangles. Use the included steel comb to brush out any mats before clipping.
2. **Select Blade/Comb:** Choose the appropriate guard comb or adjust the blade length according to your pet's coat type and desired length.
3. **Turn On:** Press the power button to turn on the clipper. The clipper operates with low vibration and ultra-quiet design to minimize pet anxiety.
4. **Begin Clipping:** Hold the clipper firmly and move it in the direction of hair growth. Use smooth, even strokes. Be cautious around sensitive areas such as ears, paws, and face.
5. **Monitor Pet:** Observe your pet's reaction. If they show signs of distress, take a break.
6. **Turn Off:** After grooming, press the power button to turn off the clipper.

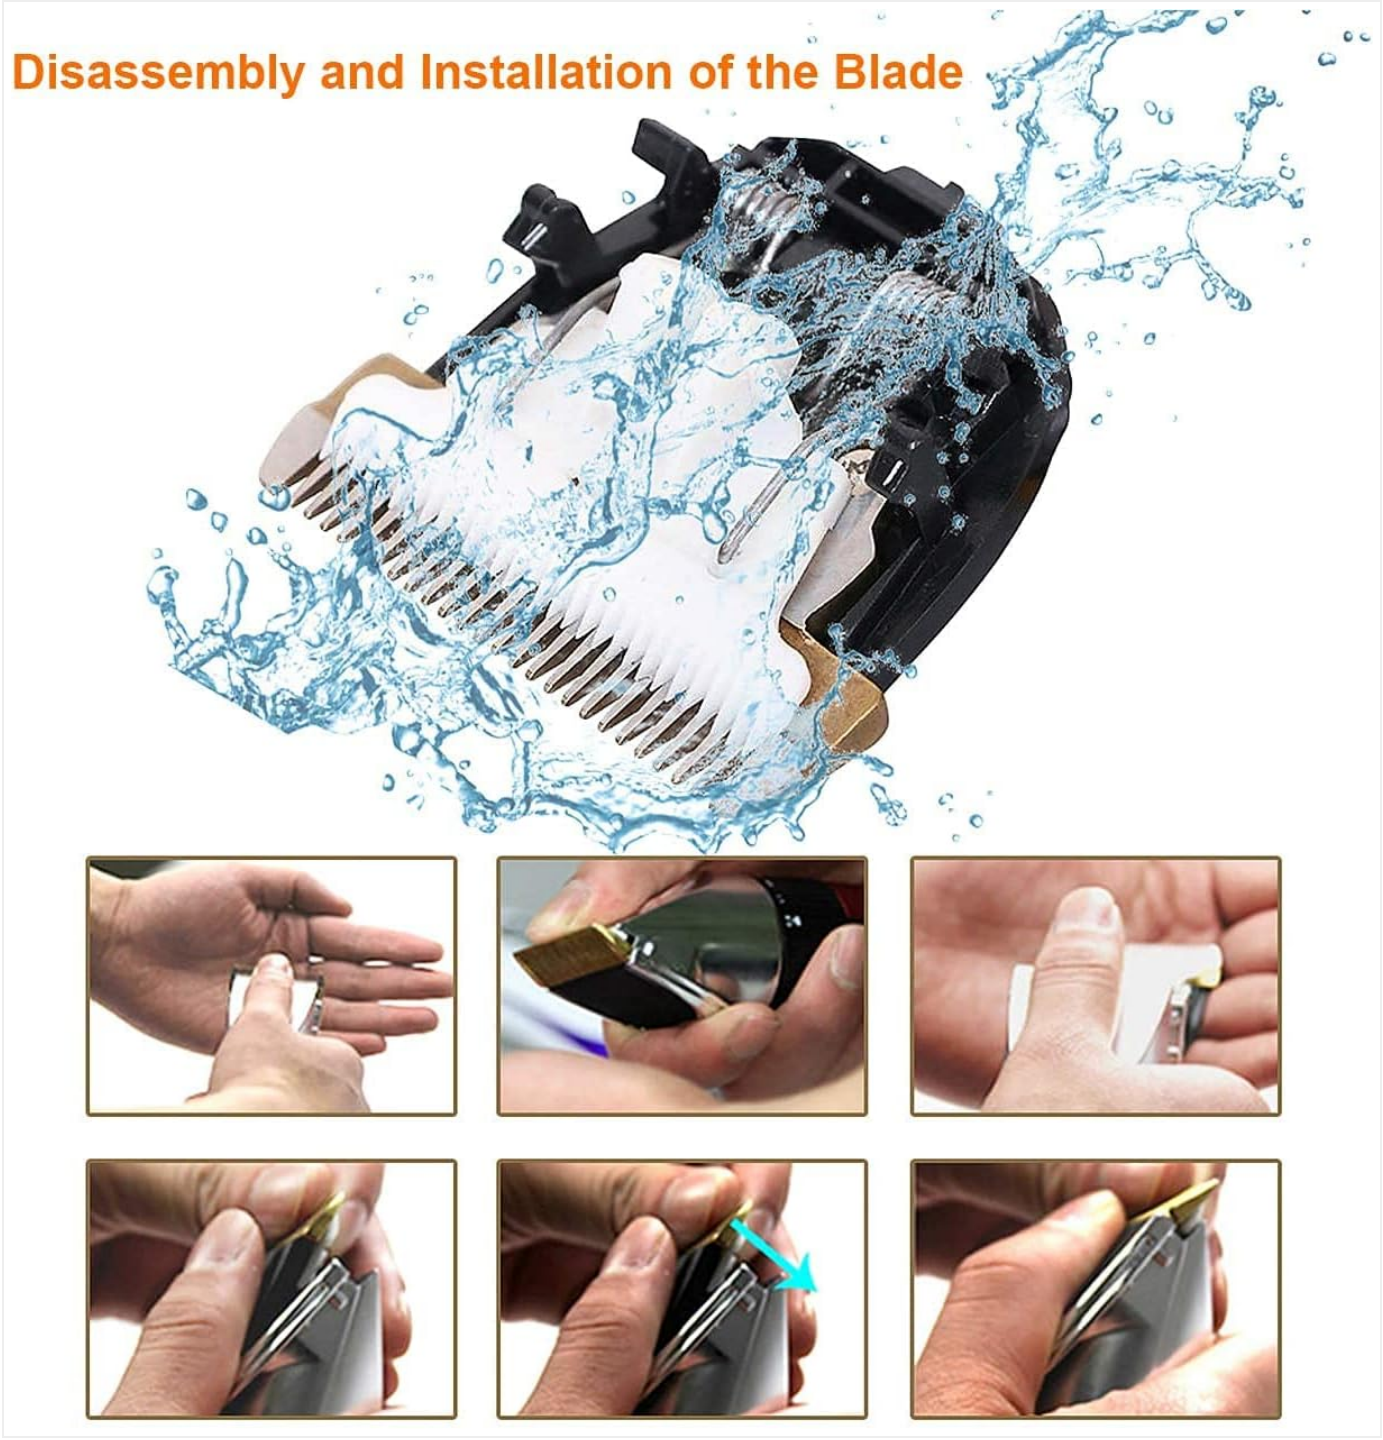


Image 5.2: An illustration of the clipper's internal components, emphasizing the sharp ceramic and stainless steel blade and the powerful motor designed for efficient and snag-free grooming.

6. Maintenance

6.1 Cleaning the Blades

Regular cleaning ensures optimal performance and extends the life of your clipper. The blades are detachable for easy cleaning.

1. **Detach Blades:** With the clipper turned off, gently push the blade assembly forward to detach it from the clipper body.
2. **Remove Hair:** Use the included cleaning brush to remove any trapped hair from the blades and the clipper head.
3. **Rinse Blades:** The detached blades can be rinsed directly under running water. Ensure they are completely dry before reattaching. Do NOT rinse the main clipper body.

4. **Lubricate Blades:** After cleaning and drying, apply a few drops of the provided lubricant oil to the blades. Turn on the clipper for a few seconds to distribute the oil evenly. This reduces friction and maintains sharpness.
5. **Reattach Blades:** Align the blade assembly with the clipper body and push it back until it clicks into place.



Image 6.1: A visual guide demonstrating the steps for disassembling, cleaning, and reassembling the clipper blades, including rinsing under water.

6.2 Storage

Store the clipper and its accessories in a dry, cool place, away from direct sunlight and out of reach of children and pets.

7. Troubleshooting

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper fully.
Clipper pulls hair or cuts poorly.	Blades are dull, dirty, or not lubricated. Pet's hair is tangled.	Clean and lubricate blades. Ensure pet's hair is clean and detangled before grooming. Consider replacing blades if excessively dull.
Clipper makes unusual noise.	Blades are not properly aligned or lubricated. Internal issue.	Ensure blades are correctly attached and lubricated. If problem persists, contact customer support.
Charging indicator light does not turn green.	Clipper not fully charged. Faulty charger or battery.	Allow more time for charging. Ensure charger is properly connected. If issue persists, contact customer support.

8. Specifications

Model	P2
Brand	oneisall
Power Source	Corded Electric (for charging), Cordless (for operation)
Battery Type	Rechargeable (1 x 9V battery included)
Noise Level	Approximately 50 dB
Adjustable Blade Lengths	0.8mm, 1.1mm, 1.4mm, 1.7mm, 2.0mm
Guard Comb Lengths	3mm, 6mm, 9mm, 12mm, 15mm, 18mm
Item Weight	0.56 Kilograms (approx. 1.23 Pounds)
Package Dimensions	9.06 x 7.8 x 2.2 inches

9. Warranty and Support

For warranty information, please refer to the documentation provided at the time of purchase or contact the seller directly. oneisall offers various protection plans which may be available for purchase separately.
If you encounter any issues or have questions regarding your oneisall P2 Pet Grooming Clippers, please contact oneisall customer support. You can often find support information on the manufacturer's official website or through the retailer where the product was purchased.
Visit the official oneisall store for more information:oneisall Store

© 2025 oneisall. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question