DEWENWILS HORS11S

DEWENWILS Outdoor Remote Control Outlet User Manual

Model: HORS11S

Introduction

The DEWENWILS Outdoor Remote Control Outlet provides convenient wireless control for outdoor electrical devices. Designed for durability and ease of use, this system allows you to manage your outdoor lighting, seasonal decorations, and other appliances from a distance. Its robust, weatherproof construction ensures reliable performance in various outdoor conditions.

Safety Information

- **Electrical Safety:** Always ensure the outlet is properly grounded. Do not exceed the maximum electrical ratings (125V, 15A, 1875W). Overloading can cause overheating and fire.
- **Water Exposure:** While weatherproof, this unit is not submersible. Do not immerse the outlet in water. Ensure the outlet is installed vertically and at least 2 feet above ground level to prevent water accumulation and direct water streams from entering the unit.
- **Installation:** For outdoor use, plug the unit into a Ground Fault Circuit Interrupter (GFCI) protected outlet.
- **Maintenance:** Do not attempt to disassemble or repair the unit. Refer all servicing to qualified personnel.
- **Children and Pets:** Keep the device and remote control out of reach of children and pets.



Image Description: An outdoor remote control outlet plugged into a wall, with a power cord extending downwards. Text overlays indicate "WEATHER RESISTANT" and "Please use the outlet vertically at least 2ft above the ground." Two smaller inset images show incorrect usage: one with the outlet fully submerged in water (crossed out) and another with direct water streams hitting the outlet (crossed out). This illustrates proper installation and water exposure precautions.

Package Contents

Please check the package for the following items:

- 1 x DEWENWILS Outdoor Remote Control Outlet
- 1 x Wireless Remote Control (with 1 CR2032 battery included)
- 1 x User Manual (this document)



Image Description: A black DEWENWILS outdoor remote control outlet with a flat plug and a single grounded outlet. Next to it is a black wireless remote control with ON and OFF buttons, attached to a keychain. This image displays the main components included in the package.

Product Overview

The DEWENWILS Outdoor Remote Control Outlet system consists of two main parts: the outdoor outlet unit and the wireless remote control.

Outdoor Outlet Unit

- **Power Plug:** A flat plug designed for easy insertion into wall outlets.
- **Power Cord:** Features a 7" SJTW 14/3C heavy gauge cord for durability.
- **Outlet Receptacle:** A single grounded outlet for connecting your appliance.
- **Manual ON/OFF Button:** Allows for local control of the outlet.
- **Indicator Light:** Shows the power status of the outlet.
- **Mounting Hole:** For secure installation.
- **Construction:** Made of 750°C high flame retardant housing with high quality copper pieces and thickened copper core for enhanced safety and durability.

Wireless Remote Control

- **ON Button:** To turn the connected appliance ON.
- **OFF Button:** To turn the connected appliance OFF.
- **Battery:** Powered by one CR2032 3V battery (included).
- **Keychain:** Attached for portability and convenience.



Image Description: A detailed overhead view of the DEWENWILS outdoor remote control outlet and its remote. Various dimensions are labeled, such as the remote's length (2.8") and width (1.4"), and the outlet's length (3.94"). Key features like the flat plug, 7" SJTW 14/3C Heavy Gauge Cord, Mounting Hole, and the CR2032 battery compartment are highlighted. ETL Listed and FCC logos are also visible, indicating product certifications.

Setup Instructions

The DEWENWILS Outdoor Remote Control Outlet is designed for simple plug-and-play operation. No complex wiring or

app installation is required.

1. **Unpack:** Carefully remove the outdoor outlet and remote control from the packaging.
2. **Battery Check:** The CR2032 battery for the remote control is pre-installed. Ensure the plastic pull tab (if present) is removed before first use. The positive pole of the battery should face upwards.
3. **Placement:** Choose a suitable outdoor location for the outlet. Ensure it is installed vertically and at least 2 feet above ground level to maximize weather resistance.
4. **Plug In:** Plug the DEWENWILS outdoor remote control outlet into a standard 125V electrical outlet. For outdoor use, it is highly recommended to use a GFCI (Ground Fault Circuit Interrupter) protected outlet.
5. **Connect Appliance:** Plug the device you wish to control (e.g., outdoor lights, pump) into the receptacle on the DEWENWILS outdoor outlet.
6. **Initial Test:** Press the "ON" button on the remote control. The connected appliance should turn on. Press the "OFF" button to turn it off.

Pairing/Syncing (If needed)

The remote and outlet are pre-paired from the factory. If re-pairing is necessary or if you wish to pair additional remotes/outlets (for multi-outlet versions), follow these steps:

1. Plug the outlet into a power source.
2. Press and hold the manual ON/OFF button on the outlet unit for approximately 3 seconds until the indicator light begins to flash slowly.
3. While the indicator light is flashing, press the "ON" button on the remote control. The indicator light on the outlet should stop flashing and remain solid, indicating successful pairing.
4. Repeat for any additional remotes or outlets you wish to pair.



Image Description: A person's hand holding the remote control, pressing a button, with the DEWENWILS outdoor outlet plugged into a wooden wall in the background. The outlet's indicator light is on, and blue wireless signals are depicted emanating from the remote and the outlet, illustrating the ease of use and wireless control. An outdoor patio with string lights is visible in the background.

Operating Instructions

Operating the DEWENWILS Outdoor Remote Control Outlet is straightforward.

- **Turning ON:** Press the **ON** button on the wireless remote control to power on the connected appliance. The

indicator light on the outlet will illuminate.

- **Turning OFF:** Press the **OFF** button on the wireless remote control to power off the connected appliance. The indicator light on the outlet will turn off.
- **Manual Control:** You can also press the manual ON/OFF button directly on the outdoor outlet unit to toggle power.
- **Remote Range:** The remote control has an impressive range of up to 100 feet in open areas and can transmit signals through walls and doors, providing flexibility in placement and control.

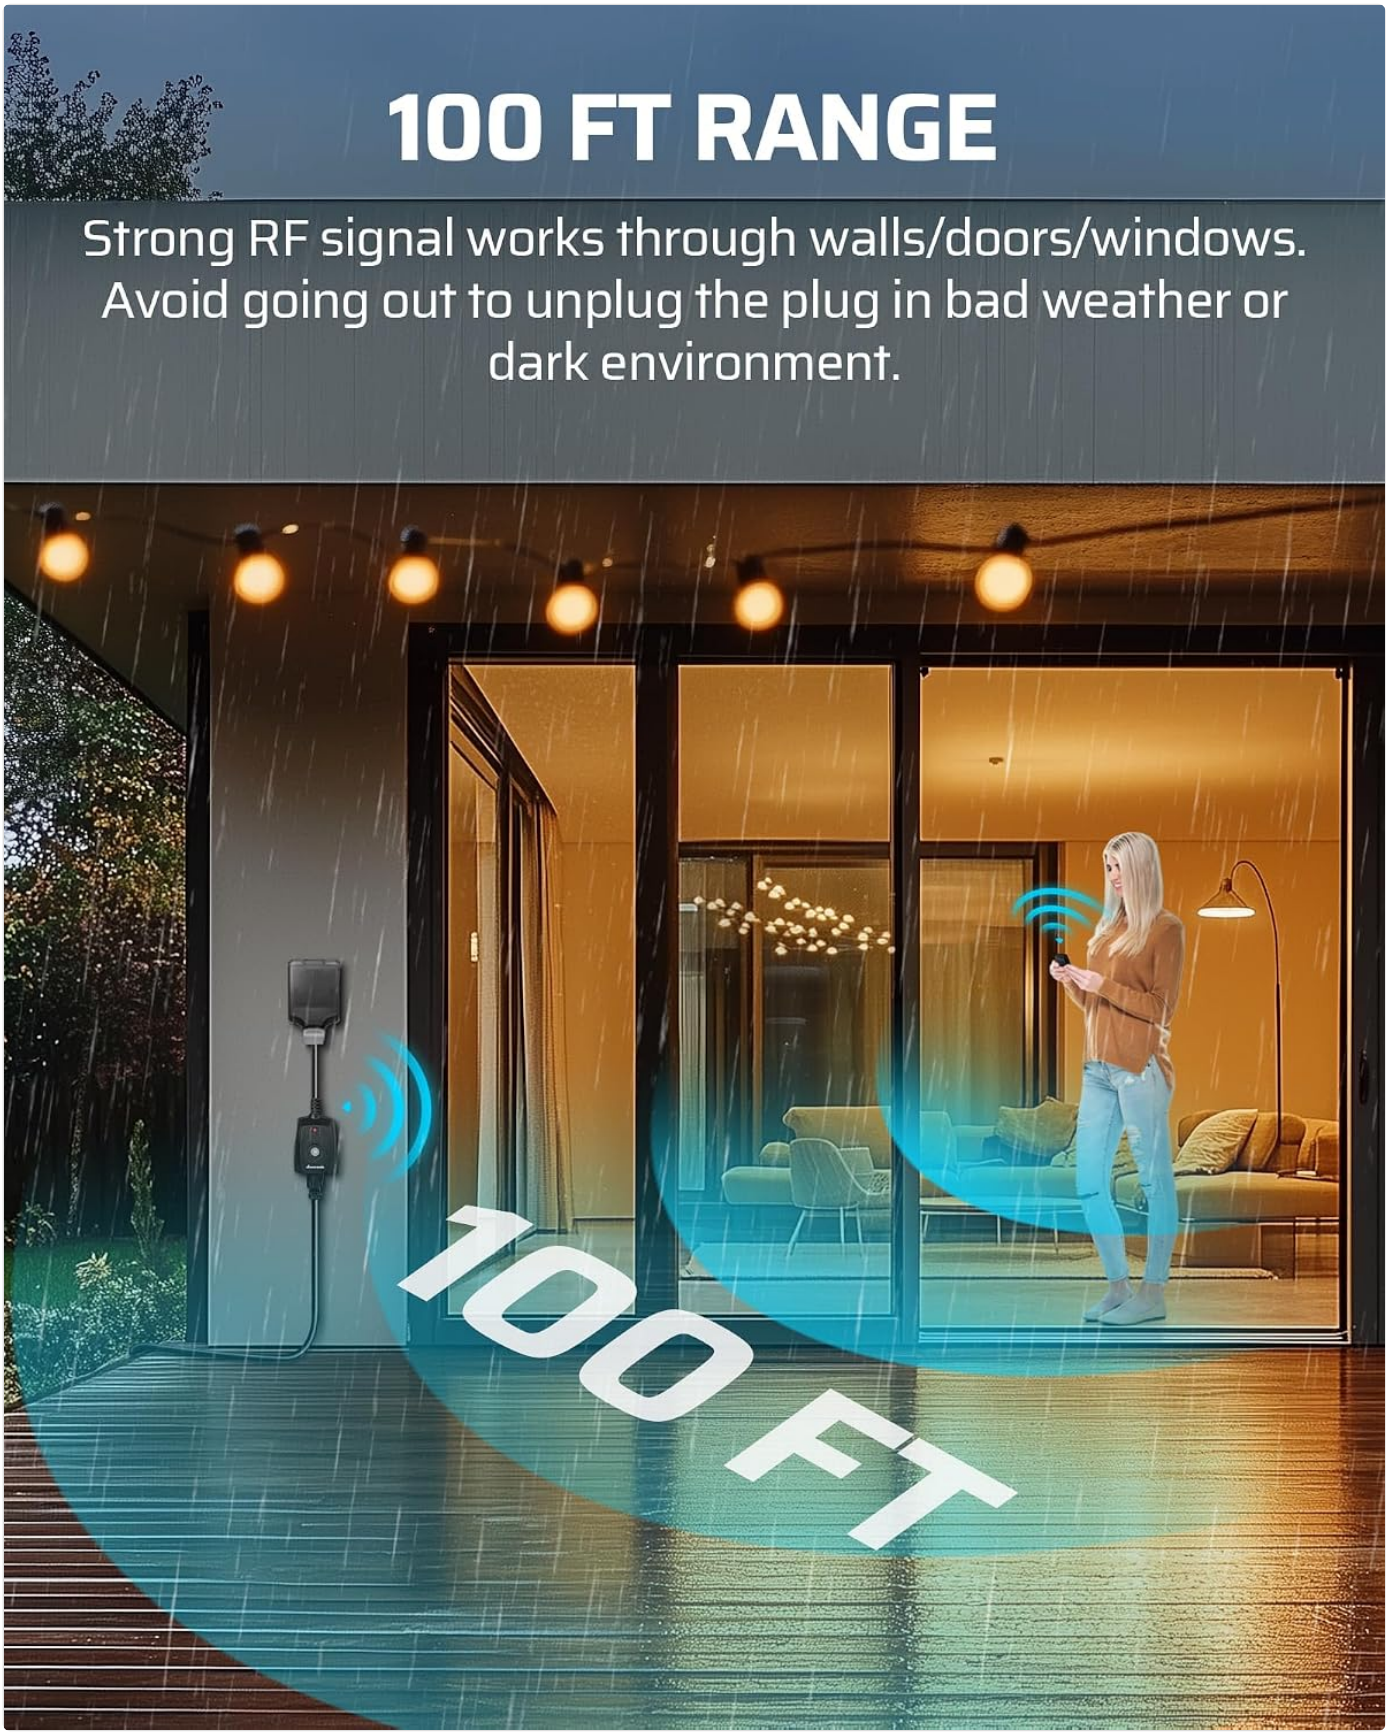


Image Description: A person standing inside a modern home, looking out through large glass doors towards an outdoor patio with string lights. The person is holding the remote control, and blue wireless signals are depicted extending from the remote towards the outdoor outlet, illustrating the 100-foot control range and the ability to operate the device from indoors.



Image Description: A split image showcasing various applications. The left side shows outdoor string lights illuminating a patio area at dusk. The right side shows indoor decorative string lights illuminating a room. A hand holding the remote control is overlaid on the image, emphasizing the product's versatility for both indoor and outdoor lighting control.



Image Description: A four-panel collage demonstrating diverse outdoor applications. Top-left shows outdoor string lights in a garden. Top-right shows illuminated reindeer and holiday decorations. Bottom-left shows a sprinkler watering a lawn. Bottom-right shows hanging decorative lights in a tree. This illustrates the wide range of devices that can be controlled by the outlet.

Maintenance

- **Cleaning:** Disconnect the outlet from power before cleaning. Wipe the unit with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.

- **Battery Replacement:** If the remote control's range decreases or it stops responding, the CR2032 battery may need replacement. Open the battery compartment on the back of the remote, replace the old battery with a new CR2032 3V battery, ensuring correct polarity (positive pole upwards), and close the compartment.
- **Storage:** When not in use for extended periods, store the unit in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the power cord and outlet unit for any signs of damage, such as frayed wires or cracks. Discontinue use if damage is found.

Troubleshooting

Problem	Possible Cause	Solution
Outlet not responding to remote.	Remote battery is low or dead. Outlet and remote are not paired. Obstruction or distance too great.	Replace the CR2032 battery in the remote. Re-pair the remote and outlet (refer to "Setup Instructions"). Move closer to the outlet or remove obstructions.
Outlet has no power.	Power outage. Outlet not fully plugged in. GFCI tripped.	Check your home's circuit breaker. Ensure the outlet is securely plugged into the wall receptacle. Reset the GFCI outlet.
Connected appliance not working.	Appliance is faulty. Appliance not fully plugged into the remote outlet. Appliance exceeds maximum load.	Test the appliance by plugging it directly into a working wall outlet. Ensure the appliance's plug is fully inserted into the remote outlet. Verify the appliance's power consumption does not exceed 15A / 1875W.

Specifications

Feature	Detail
Model Number	HORS11S
Operating Voltage	125 Volts AC
Current Rating	15 Amps
Max. Power Rating	1875 Watts
Operation Mode	ON-OFF-ON
Remote Control Range	Up to 100 feet (open area)
Remote Battery Type	1 x CR2032 3V (included)
Product Dimensions	4.9 x 3.7 x 1.7 inches
Item Weight	6.46 ounces

Feature	Detail
Weather Resistance	Weatherproof (not submersible)
Certifications	FCC Listed, ETL Listed

Warranty and Support

DEWENWILS products are designed and manufactured to the highest quality standards. This product is covered by a limited warranty from the date of purchase against defects in materials and workmanship.
For warranty claims, technical support, or any questions regarding your DEWENWILS Outdoor Remote Control Outlet, please contact our customer support team:

- **Website:** Visit the official DEWENWILS website for FAQs and contact information.
- **Email:** Refer to your product packaging or the DEWENWILS website for customer service email.
- **Phone:** Refer to your product packaging or the DEWENWILS website for customer service phone number.

Please have your model number (HORS11S) and purchase date ready when contacting support.

© 2025 DEWENWILS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question