TELESIN CXCY-EU-P1-MP-10-ZHU

TELESIN Fun Shot Magnetic Phone Camera DSLR Style Shutter Grip User Manual

Model: CXCY-EU-P1-MP-10-ZHU

Introduction

The TELESIN Fun Shot Magnetic Phone Camera DSLR Style Shutter Grip is designed to enhance your mobile photography and videography experience by providing a comfortable, stable grip and intuitive controls. This manual provides detailed instructions for setup, operation, and maintenance of your new device.

What's in the Box

- Phone Camera Shutter Grip ×1
- Magnetic Ring ×1
- Cleaning Kit ×1
- Battery Removal Tool ×1
- Instruction Manual ×1
- Phone Lanyard ×1

Setup Guide

1. Attaching the Grip to Your Phone

The Fun Shot Magnetic Grip features a powerful double magnetic mounting design for secure attachment. It can be used directly with MagSafe-compatible devices or with the included magnetic ring for non-MagSafe phones.

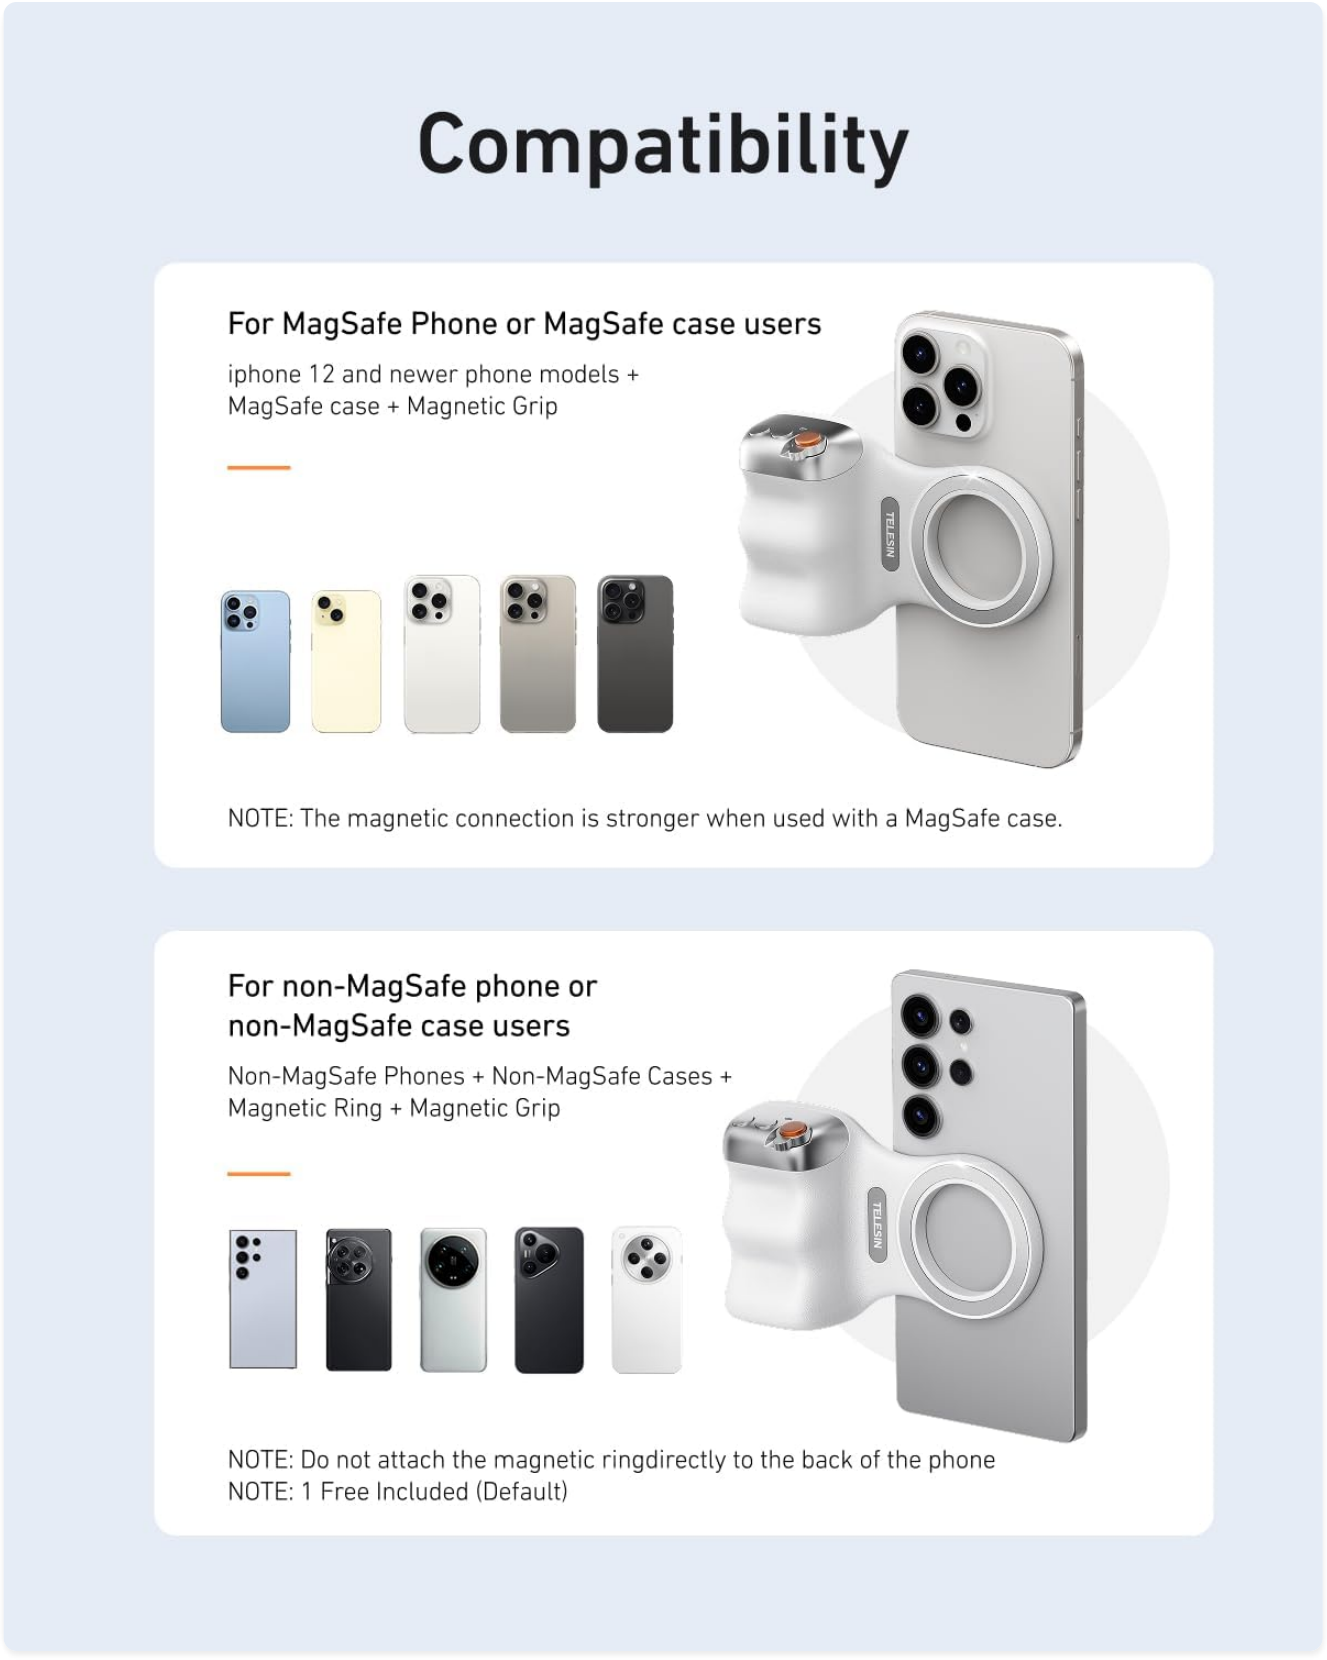


Image: The grip attaches magnetically to MagSafe phones. For non-MagSafe phones, apply the included magnetic ring to your phone case for secure attachment.

2. Detachable Wireless Remote Control

The grip includes a detachable wireless remote control for convenient operation. To remove, gently slide the remote out from the top of the grip. To reattach, align it with the slot and slide it back in until it clicks securely.



Image: The detachable remote control can be used independently for remote shooting. The grip also features a 1/4" screw thread for tripod mounting.

3. Bluetooth Pairing

The wireless remote control connects to your smartphone via Bluetooth. No additional apps are required.

- **For Android users:** Simply connect via Bluetooth and use directly.
- **For iPhone users:** After the first connection, enable the Zoom function. Navigate to**Settings > Accessibility > Zoom** and press to activate the zoom button. When Zoom is enabled, the screen will magnify. Double-tap with three fingers to restore. Other settings remain unchanged.

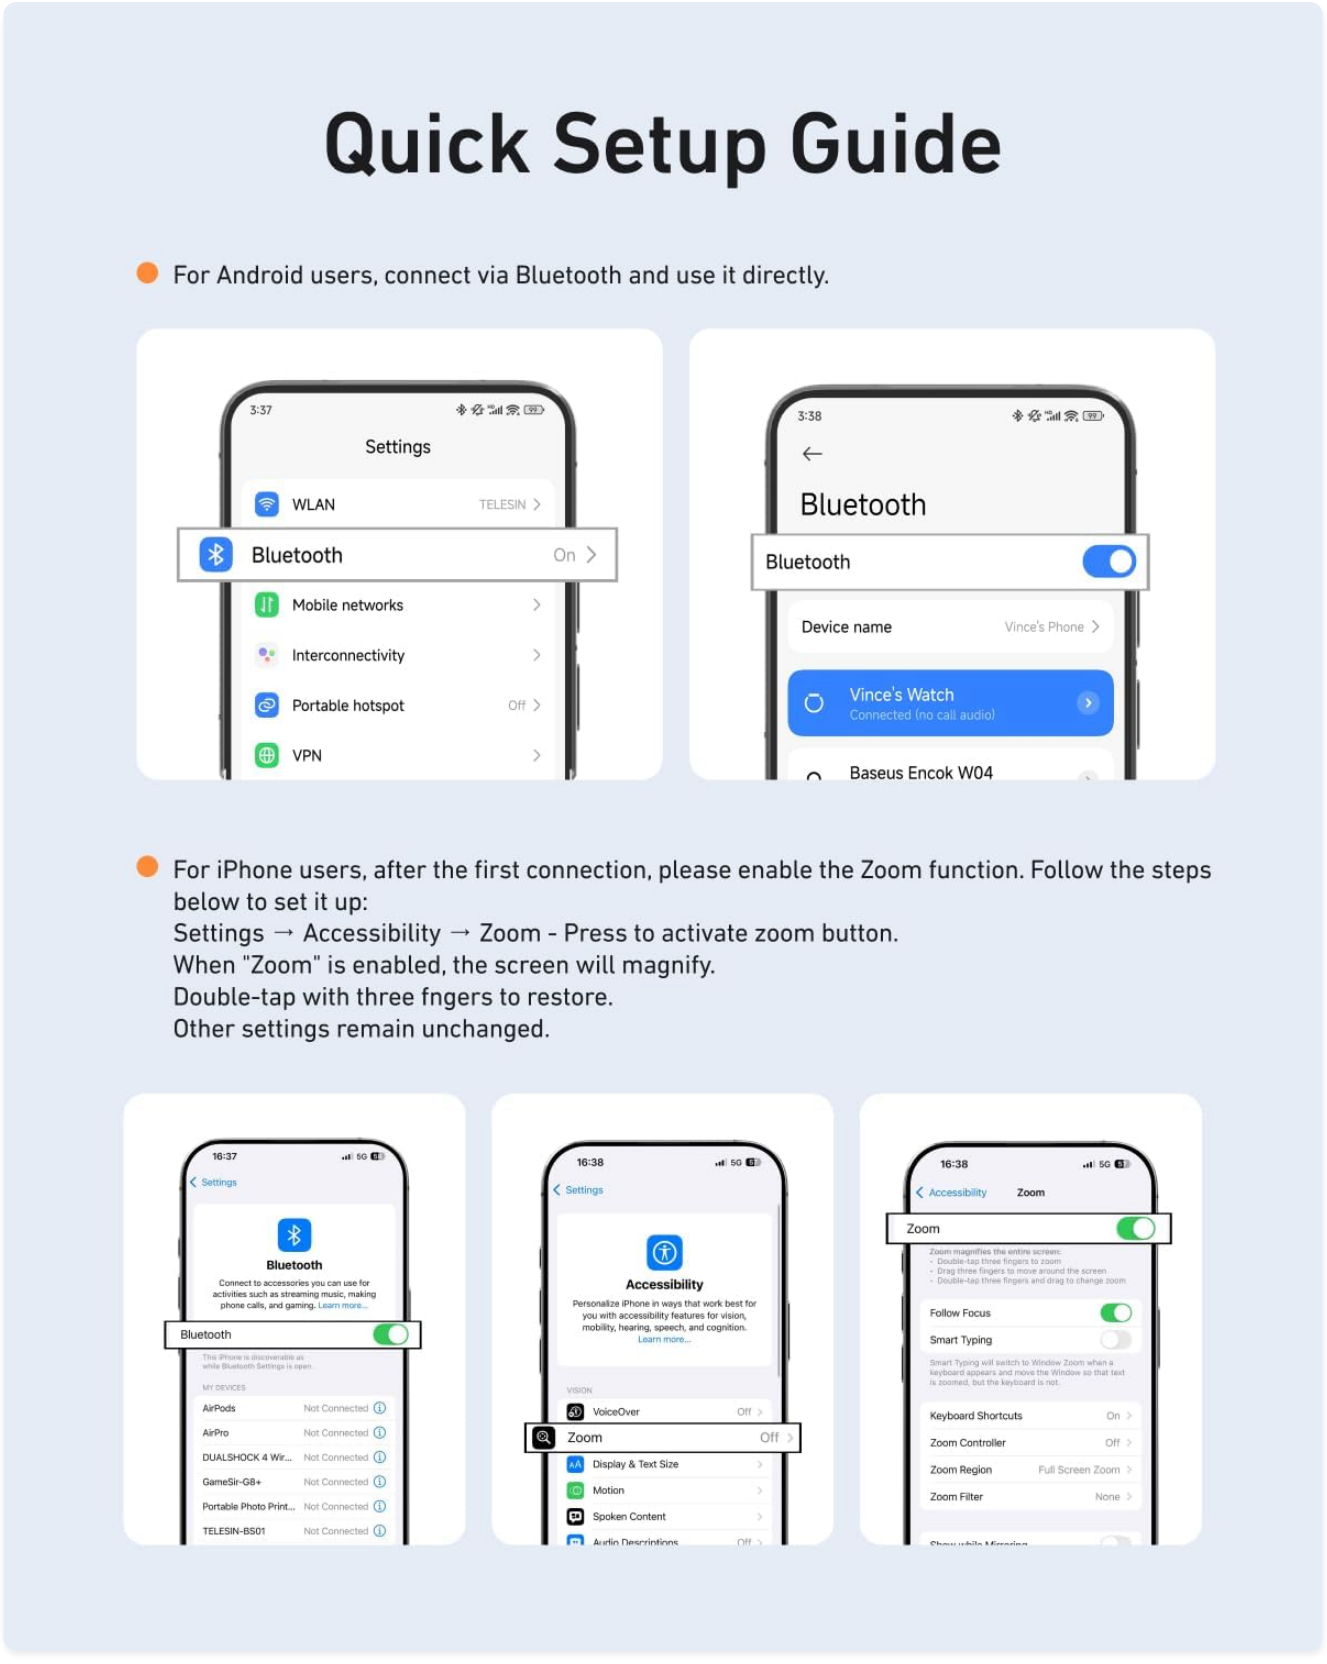


Image: Screenshots illustrating Bluetooth pairing steps for Android and enabling Zoom accessibility settings for iPhone.

4. Battery Installation (Remote Control)

The remote control uses a replaceable battery. Use the provided battery removal tool to open the battery compartment, insert the battery with the correct polarity, and close the compartment securely.

Operating Instructions

The TELESIN Fun Shot Magnetic Grip offers intuitive controls for a DSLR-like shooting experience.



Image: Close-up view of the grip's controls, highlighting the two-stage shutter, zoom lever, and mode switch buttons.

1. Shutter Button

- **Half-Press:** Focuses the camera.
- **Full-Press:** Captures a photo or starts/stops video recording.

2. Zoom Lever

Use the integrated zoom lever to easily zoom in and out within your camera application.

3. Mode Switch Buttons

The additional buttons on the remote allow you to switch between photo and video modes, and toggle between the front and back cameras of your smartphone.

4. Quick Camera Launch

The grip supports quick camera launch from the lock screen on compatible devices, allowing you to capture moments instantly.

5. Using with Accessories

The 1/4” tripod screw connector at the bottom of the grip allows for easy attachment to tripods, monopods, or other camera accessories. The double-sided magnetic design also supports attachment of TELESIN magnetic selfie lights (sold separately) for enhanced illumination.

Video: Demonstrates the ease of use and various functions of the TELESIN Fun Shot Magnetic Grip, including attachment, remote control features, and compatibility with accessories.

Maintenance

- **Cleaning:** Use the provided cleaning kit or a soft, dry cloth to wipe the grip and remote. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** If the remote control's responsiveness decreases, replace the battery using the battery removal tool. Ensure correct battery type and polarity.
- **Storage:** Store the grip in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

Troubleshooting

- **Remote Not Connecting:** Ensure the remote's battery is not depleted. Re-pair the remote via Bluetooth in your phone's settings. Make sure no other Bluetooth devices are interfering.
- **Buttons Not Responding:** Check Bluetooth connection. If connected, try re-pairing. Ensure the remote is securely seated in the grip if using it attached.
- **Magnetic Attachment Issues:** Ensure your phone or case is MagSafe compatible. If using the magnetic ring, ensure it is properly adhered and aligned on your phone case.
- **Camera App Glitches:** Some users have reported unusual behavior with certain phone models (e.g., iPhone 16 Pro). Ensure your phone's operating system is up to date. If issues persist, try restarting your phone and the grip.

Specifications

Feature	Detail
Product Name	Fun Shot Magnetic Grip
Material	ABS + PC + Aluminum Alloy
Product Dimensions	4.91 x 3.13 x 1.48 inches (124.7mm × 79.6mm × 37.7mm)
Item Weight	3.53 ounces (100 Grams)

Feature	Detail
Battery Type	1 Lithium Polymer battery (included)
Battery Capacity	130mAh
Wireless Range	Up to 10 meters / 32.8 feet
Maximum Weight Recommendation	3 Kilograms
Compatible Devices	iPhone & Android (various models)
Special Features	Magnetic, MFI Official Certification, Lightweight, Detachable Wireless Shutter Button, Ergonomic Design

Warranty and Support

TELESIN products are manufactured to high-quality standards. For warranty information and technical support, please refer to the official TELESIN website or contact their customer service directly. Keep your proof of purchase for any warranty claims.