Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Greesum GS-83-0416

Greesum 10x30 Outdoor Canopy Tent User Manual

Model: GS-83-0416

Introduction

This manual provides essential instructions for the safe assembly, operation, and maintenance of your Greesum 10x30 Outdoor Canopy Tent. Please read this manual thoroughly before setup and retain it for future reference.

The Greesum 10x30 Outdoor Canopy Tent is designed for temporary outdoor use, providing shelter for events such as parties, weddings, and BBQ gatherings. It features a durable frame, waterproof canopy, and removable sidewalls for versatile use.



Image: The Greesum 10x30 Outdoor Canopy Tent fully assembled and decorated for an outdoor event, showcasing its spacious interior and windowed sidewalls.



Image: A side view of the Greesum 10x30 Outdoor Canopy Tent with all eight sidewalls securely attached, providing full enclosure and privacy.

Important Safety Guidelines

WARNING:

- Do not use this tent in severe weather conditions, including heavy winds, rain, snow, or thunderstorms.
- Always ensure the tent is securely anchored to the ground using all provided ropes and stakes.
- Regularly check all connections and anchors for stability, especially during use.
- Keep all flame and heat sources away from the tent fabric.
- Ensure adequate ventilation if using heating or cooking appliances near the tent.
- Adult assembly is required. Keep children away during assembly.

Package Contents

Before beginning assembly, verify that all parts listed below are present and undamaged.

- Canopy Fabric (1)
- Frame Poles (various lengths, labeled)
- Connectors (various types, labeled)
- Removable Sidewalls (8)
- Ground Stakes (set)
- Ropes (set)
- Assembly Manual (this document)

If any parts are missing or damaged, please contact customer support.

Setup Instructions

Recommended installation for 2-3 people. No additional tools required.

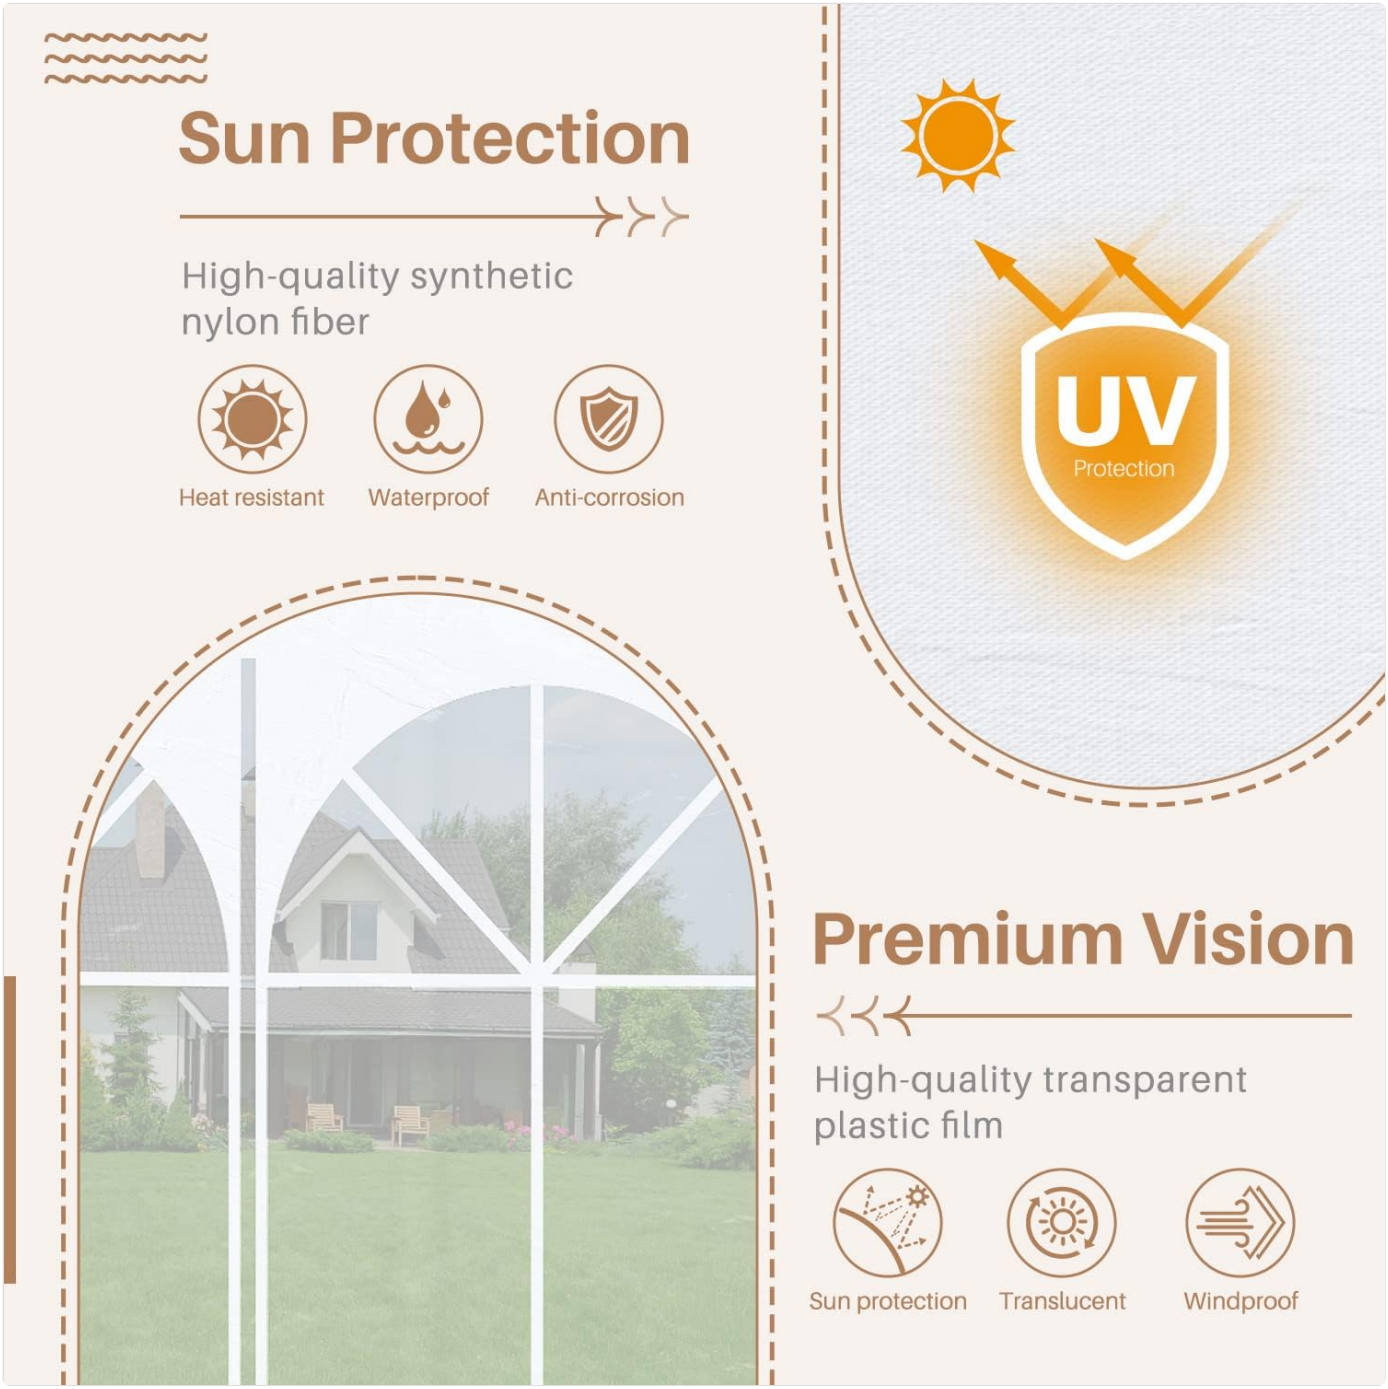


Image: A diagram illustrating the overall dimensions of the Greesum 10x30 canopy tent (10ft width, 30ft length, 8.5ft height) and indicating a recommended assembly time of 45 minutes for 2-3 people.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clear, flat area. Identify and sort the poles and connectors according to their labels.
2. **Assemble the Roof Frame:** Begin by connecting the shorter roof poles and connectors to form the top rectangular frame. Ensure all snap designs are securely engaged for better stability.
3. **Attach Legs:** Insert the longer leg poles into the roof frame connectors. Do not fully extend or secure them into the ground yet.
4. **Drape Canopy Fabric:** Carefully drape the canopy fabric over the assembled frame. Align the corners and edges of the canopy with the frame structure.
5. **Secure Canopy:** Attach the canopy to the frame using the double-sided Velcro straps provided. Ensure the canopy is taut and evenly distributed.
6. **Raise the Tent:** With assistance, carefully lift the tent frame to its full height.
7. **Anchor the Frame:** Securely anchor each leg of the tent to the ground.
    - *For Soft Ground (Grass/Soil):* Insert ground stakes into marked holes at the base of each leg. Tighten ropes at a 45-degree angle to the ground, securing them to additional stakes.
    - *For Hard Ground (Concrete/Tile):* Ground stakes are not usable. Place at least 20 lbs of weight (sandbags, blocks, etc.) on each tent leg. Ensure the tent does not move or shake.
8. **Install Sidewalls:** Attach the removable sidewalls using the integrated fasteners (zippers and Velcro). You can customize the configuration based on your needs.
9. **Final Check:** Verify all ropes, fasteners, and connections are secure before use.



Image: Detailed view of the tent's simple snap design for secure pole connections and double-sided Velcro straps for easy canopy attachment and disassembly.

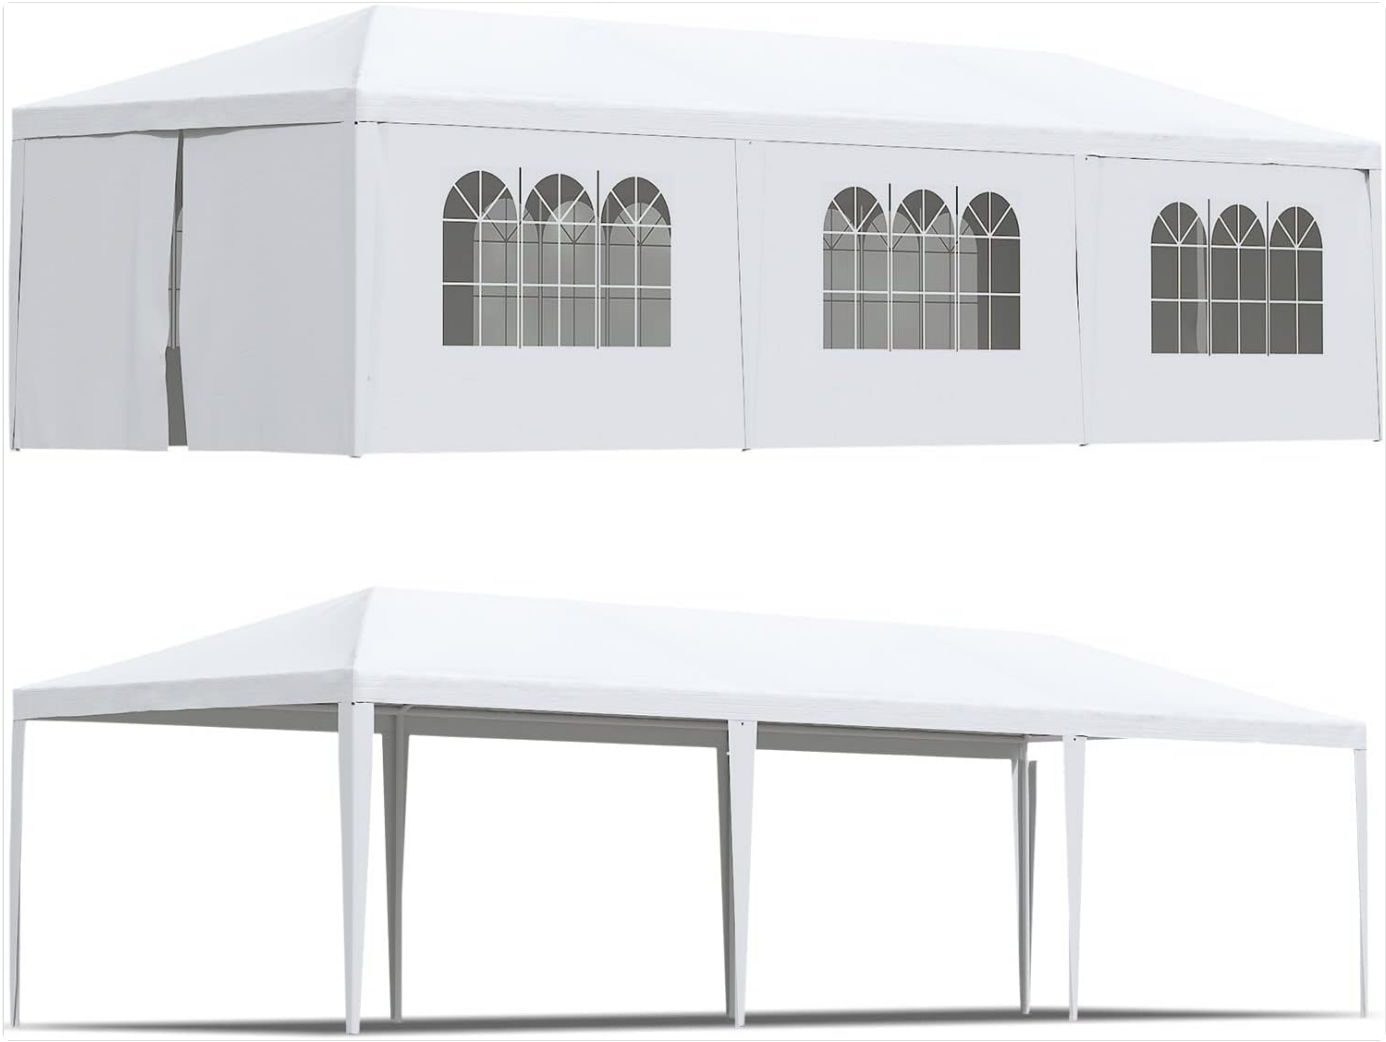


Image: Illustration of the extra ground spikes and tow ropes provided to enhance the tent's stability and provide double protection against wind.

Operating Instructions

Your Greesum canopy tent is designed for flexible use in various outdoor settings.

Sidewall Management

The tent features 8 removable sidewalls, including two zippered doors. These can be attached or removed to customize airflow, sunlight, and protection:

- **Open Configuration:** Remove all sidewalls for an open-air canopy.
- **Partial Enclosure:** Attach specific sidewalls to block sun or wind from certain directions.
- **Full Enclosure:** Attach all sidewalls for maximum protection from elements or privacy. Utilize the zippered doors for entry and exit.



Image: A visual representation showing the Greesum tent frame without sidewalls and then fully enclosed with all 8 removable sidewalls attached, highlighting their zippered, bright, and ventilated features.

Weather Considerations

While the canopy is waterproof and UV-resistant, it is intended for temporary use in fair weather. Always monitor weather conditions and disassemble the tent if strong winds, heavy rain, or other severe weather is anticipated.



Image: An infographic detailing the tent's sun protection features (heat resistant, waterproof, anti-corrosion, UV protection) and premium vision through high-quality transparent plastic film in the windows (sun protection, translucent, windproof).

Maintenance

Cleaning

- **Canopy and Sidewalls:** Clean with mild soap and water. Do not use harsh detergents or abrasive cleaners, as these can damage the fabric's waterproof and UV-resistant coating. Rinse thoroughly and allow to air dry completely before storage.
- **Frame:** Wipe down metal poles with a damp cloth. If any rust appears, clean it off and apply a rust-inhibiting paint or coating.

Storage

- Ensure all components (canopy, sidewalls, poles) are completely dry before packing away to prevent mold, mildew, and corrosion.
- Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures.

- Keep original packaging or use a suitable storage bag to protect components from damage and loss.

Inspection

Before each use, inspect all parts for wear, tear, or damage. Pay close attention to fabric integrity, pole connections, and anchor points. Replace any damaged parts immediately.

Troubleshooting

Problem	Possible Cause	Solution
Tent is unstable or sways	Insufficient anchoring; loose connections; strong winds.	Ensure all ground stakes and ropes are properly secured. For hard ground, add more weight to legs. Check all pole connections are tight. Disassemble in strong winds.
Water pooling on canopy	Canopy not taut enough; heavy rain.	Adjust canopy straps to ensure it is stretched tightly over the frame. Ensure proper drainage. Disassemble in very heavy rain.
Poles do not fit together	Incorrect pole matching; debris in connection points; bent pole.	Refer to assembly diagram to ensure correct poles are used. Clear any debris. If a pole is bent, contact customer support for replacement.
Sidewalls do not attach properly	Misalignment; damaged zippers/Velcro.	Ensure sidewalls are correctly oriented and aligned with the frame. Check zippers and Velcro for damage.

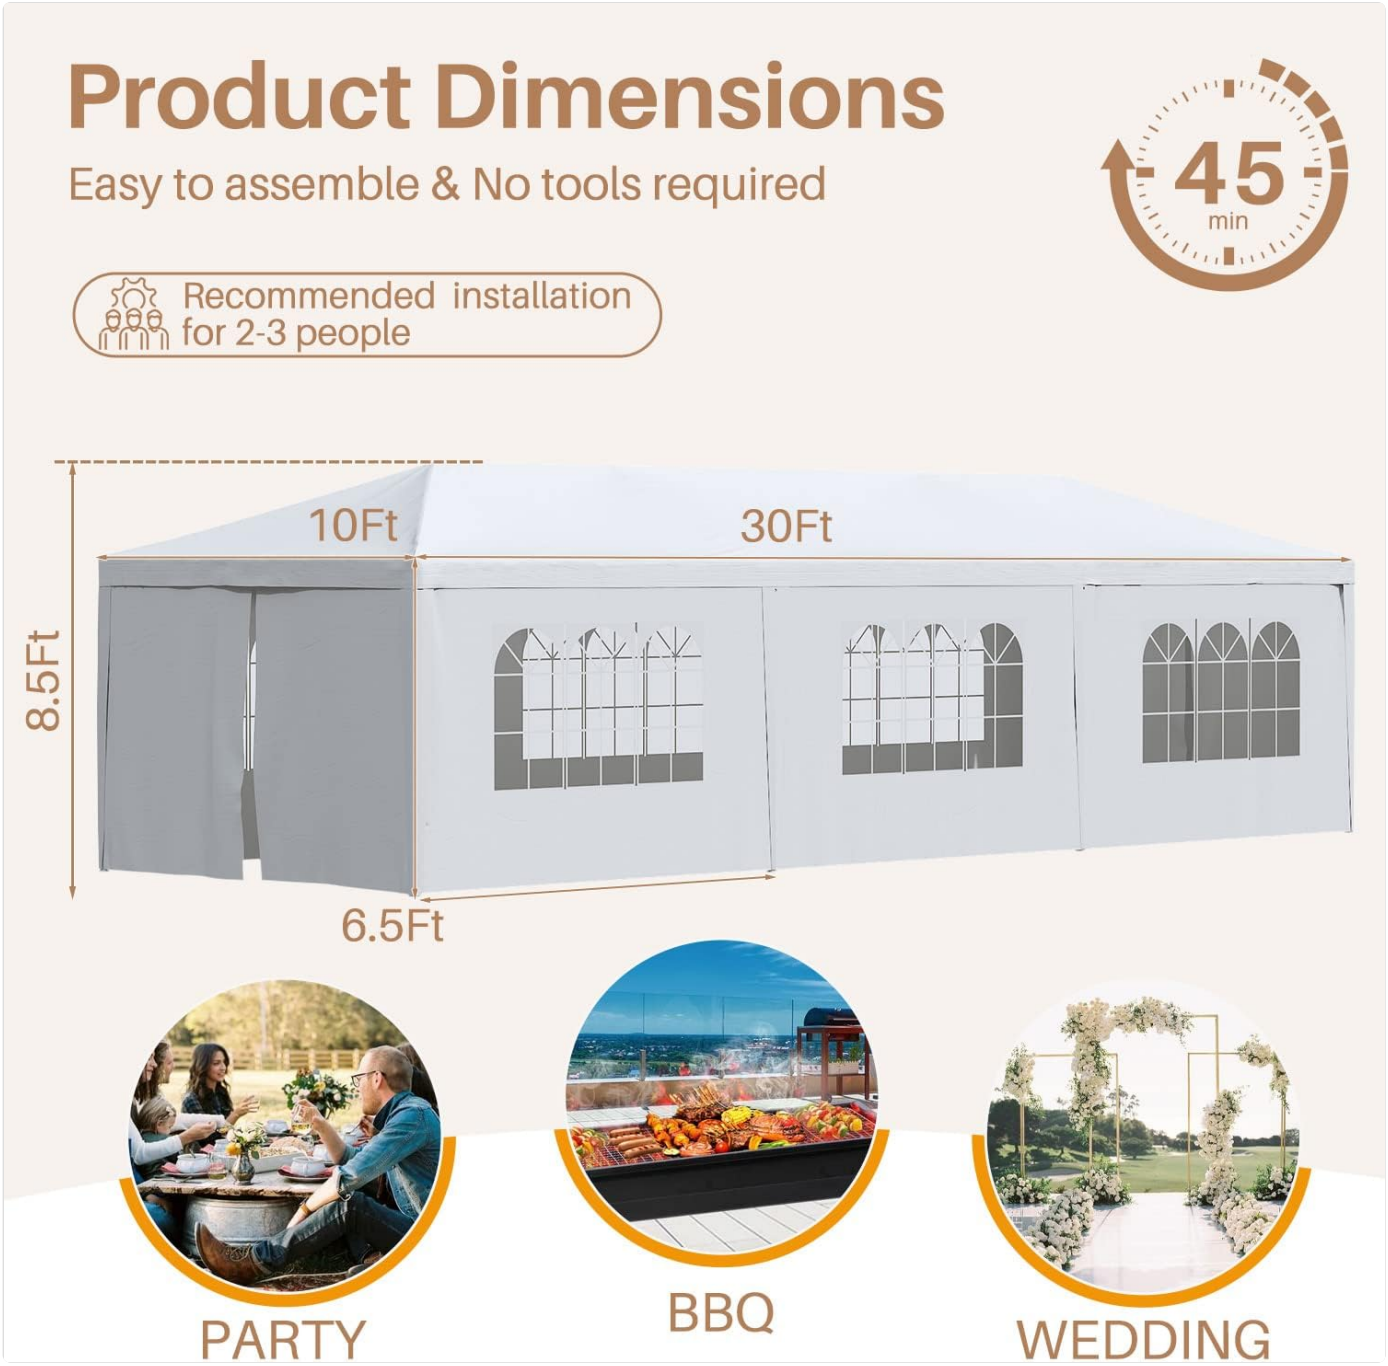


Image: An important reminder on tent wind resistance, detailing proper fixing methods for hard ground (using weights) and soft ground (using stakes and ropes at a 45-degree angle), along with additional safety reminders.

Specifications

- **Model Number:** GS-83-0416
- **Dimensions (L x W x H):** 360" x 120" x 102" (30 ft x 10 ft x 8.5 ft)
- **Material:** Alloy Steel (frame), Polyethylene (canopy, sidewalls)
- **Color:** White
- **Item Weight:** 50.5 pounds
- **Water Resistance Level:** Water Resistant
- **UV Protection:** Yes
- **Occupancy:** 40-50 People
- **UPC:** 760606835245

Warranty Information

Greesum products are manufactured to high-quality standards. For specific warranty details regarding your Greesum 10x30 Outdoor Canopy Tent, please refer to the warranty card included with your purchase or contact Greesum customer support directly. Please retain your proof of purchase for any warranty claims.

Customer Support

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Greesum customer support:

Email: greesumcs@163.com

Please provide your model number (GS-83-0416) and purchase details when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F53X1TSD

More documents and user manuals: **https://manuals.plus/**