ALLIMITY N2QAYB000378

ALLIMITY N2QAYB000378 Replacement Remote Control User Manual

For Panasonic Blu-ray Disc Player Models: DMP-BD35, DMP-BD60, DMP-BD80, DMP-BD601, DMP-BD605, DMP-BD80K, DMP-BD605K, DMP-BD601K

1. Introduction

This manual provides instructions for the ALLIMITY N2QAYB000378 replacement infrared remote control. This remote is designed to operate various Panasonic Blu-ray Disc Player models, offering a direct replacement for your original remote.

Please read these instructions carefully to ensure proper setup and operation of your new remote control.

2. Compatibility

The ALLIMITY N2QAYB000378 replacement remote control is compatible with the following Panasonic Blu-ray Disc Player models:

- DMP-BD35
- DMP-BD60
- DMP-BD80
- DMP-BD601
- DMP-BD605
- DMP-BD80K
- DMP-BD605K
- DMP-BD601K

If your specific model is not listed, please contact customer support for assistance before purchasing.

3. Setup

To begin using your replacement remote control, follow these steps for battery installation:

1. **Open the Battery Compartment:** Locate the battery cover on the back of the remote control. Slide the cover downwards or press the latch and lift to open.

2. **Insert Batteries:** Insert two (2) new AAA alkaline batteries (not included) into the compartment. Ensure the positive (+) and negative (-) terminals of the batteries match the polarity indicators inside the compartment.
3. **Close the Battery Compartment:** Replace the battery cover by sliding it back into position until it clicks securely.





Image 3.1: Battery compartment with batteries. This image shows the open battery compartment of the remote control, illustrating where to insert two AAA batteries and indicating the correct positive and negative polarity.

The remote control is an infrared (IR) device and does not require pairing. Once batteries are installed, it is ready for use.

4. Operating Instructions

To operate your Panasonic Blu-ray Disc Player using the ALLIMITY N2QAYB000378 remote control, follow these general guidelines:

- **Aiming the Remote:** Point the remote control directly towards the infrared sensor on your Panasonic Blu-ray Disc Player. Ensure there are no obstructions between the remote and the player.
- **Button Functions:** The remote features standard buttons for power, input selection, volume control, channel navigation, playback controls (Play, Pause, Stop, Skip), menu navigation (Pop-Up Menu, Top Menu, OK, directional arrows), and specific functions like Setup, PIP, VIERA CAST, and Drive Select.





Image 4.1: Remote control layout. This image displays the full layout of the remote control, detailing the position and labels of all functional buttons, including power, volume, channel, playback, and menu navigation.

Refer to your Panasonic Blu-ray Disc Player's original manual for specific functions of each button if you require detailed information beyond basic operation.

5. Maintenance

To ensure the longevity and proper functioning of your remote control, consider the following maintenance tips:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases. Always use new alkaline batteries and dispose of old batteries responsibly.
- **Storage:** Store the remote in a dry place, away from direct sunlight, extreme temperatures, and high humidity.

- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

6. Troubleshooting

If you experience issues with your remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
  - Ensure new batteries are correctly installed with the proper polarity.
  - Check if the batteries are depleted and replace them if necessary.
  - Verify that there are no obstructions between the remote and the Blu-ray player's IR sensor.
  - Confirm you are pointing the remote directly at the player's sensor.
- **Intermittent Operation:**
  - This may indicate low battery power. Replace the batteries.
  - Ensure the remote's IR emitter is clean and free from dust or debris.
- **Specific Buttons Not Working:**
  - Check for any physical damage to the button.
  - Ensure the remote is compatible with your specific Blu-ray player model. Some advanced functions might vary.

If these steps do not resolve the issue, please contact customer support for further assistance.

7. Specifications

Model Number	ZCM-N2QAYB000378
Replacement For	Panasonic N2QAYB000378
Compatibility	Panasonic Blu-ray Disc Players (DMP-BD35, DMP-BD60, DMP-BD80, DMP-BD601, DMP-BD605, DMP-BD80K, DMP-BD605K, DMP-BD601K)
Technology	Infrared (IR)
Power Source	2 x AAA Alkaline Batteries (not included)
Dimensions	5 x 2 x 0.6 inches (12.7 x 5.08 x 1.52 cm)
Item Weight	1 ounce (28.35 grams)
Color	Black
Special Feature	Ergonomic design

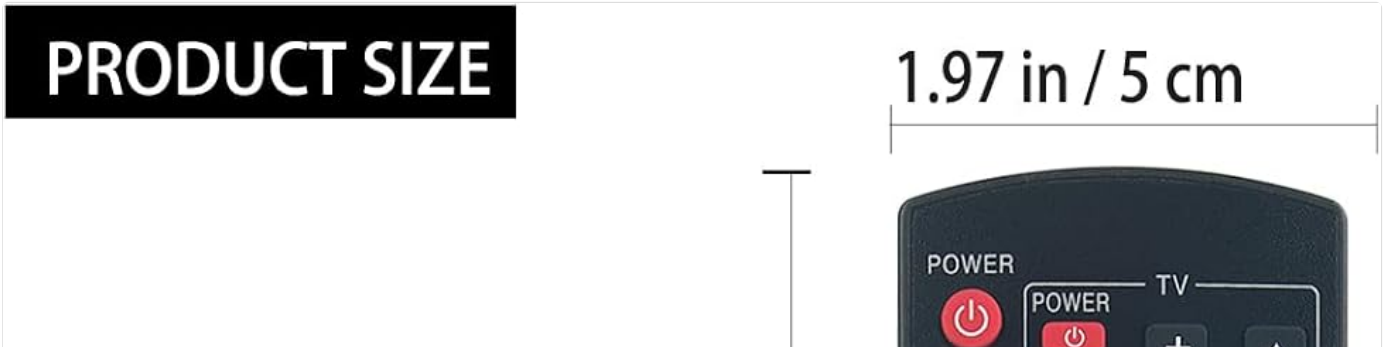




Image 7.1: Product dimensions. This image illustrates the physical dimensions of the remote control, showing its length as 8.46 inches (21.5 cm) and width as 1.97 inches (5 cm).

8. Warranty and Support

This product is typically covered by a standard manufacturer's warranty. For specific warranty details, please refer to the product packaging or contact the seller directly.

If you encounter any issues or have questions regarding your ALLIMITY N2QAYB000378 replacement remote control, please contact the seller or manufacturer's customer support. Provide your purchase details and the model number (ZCM-N2QAYB000378) for efficient assistance.
For general inquiries or if your device model is not listed as compatible, it is recommended to contact the seller before making a purchase to confirm compatibility.

© 2025 ALLIMITY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question