Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Akureo WGX-301

Akureo 3L Low Carb Rice Cooker WGX-301 Instruction Manual

Model: WGX-301 | Brand: Akureo

1. Introduction

Thank you for choosing the Akureo 3L Low Carb Rice Cooker. This appliance is designed to simplify your cooking experience while offering versatile functions for various dishes. Please read this manual thoroughly before use to ensure safe and optimal operation. Keep this manual for future reference.

2. Product Overview

2.1 Key Features

- **Intelligent Sugar Control Technology:** Reduces indigestible starch and sugar content in rice by up to 35%.
- **Multi-Function Cooking:** Supports low-sugar rice, regular rice, quick rice, porridge, and soup.
- **Automatic Warming Mode:** Keeps food at optimal serving temperature after cooking.
- **Safe Materials:** Ceramic glazed non-stick inner pot, food-grade stainless steel filter basket, and food-grade outer shell.
- **Smart Reservation:** Preset cooking time up to 24 hours in advance.

2.2 Included Components

- Akureo 3L Low Carb Rice Cooker Unit
- Inner Pot (Ceramic Glazed Non-Stick)
- Stainless Steel Filter Basket
- Measuring Cup
- Rice Paddle
- Power Cord

2.3 Product Diagram



Figure 1: Front view of the Akureo 3L Low Carb Rice Cooker.



Figure 2: Digital display highlighting the Low Carb Rice function.



Figure 3: Internal view showing the dual temperature sensors for optimized cooking.

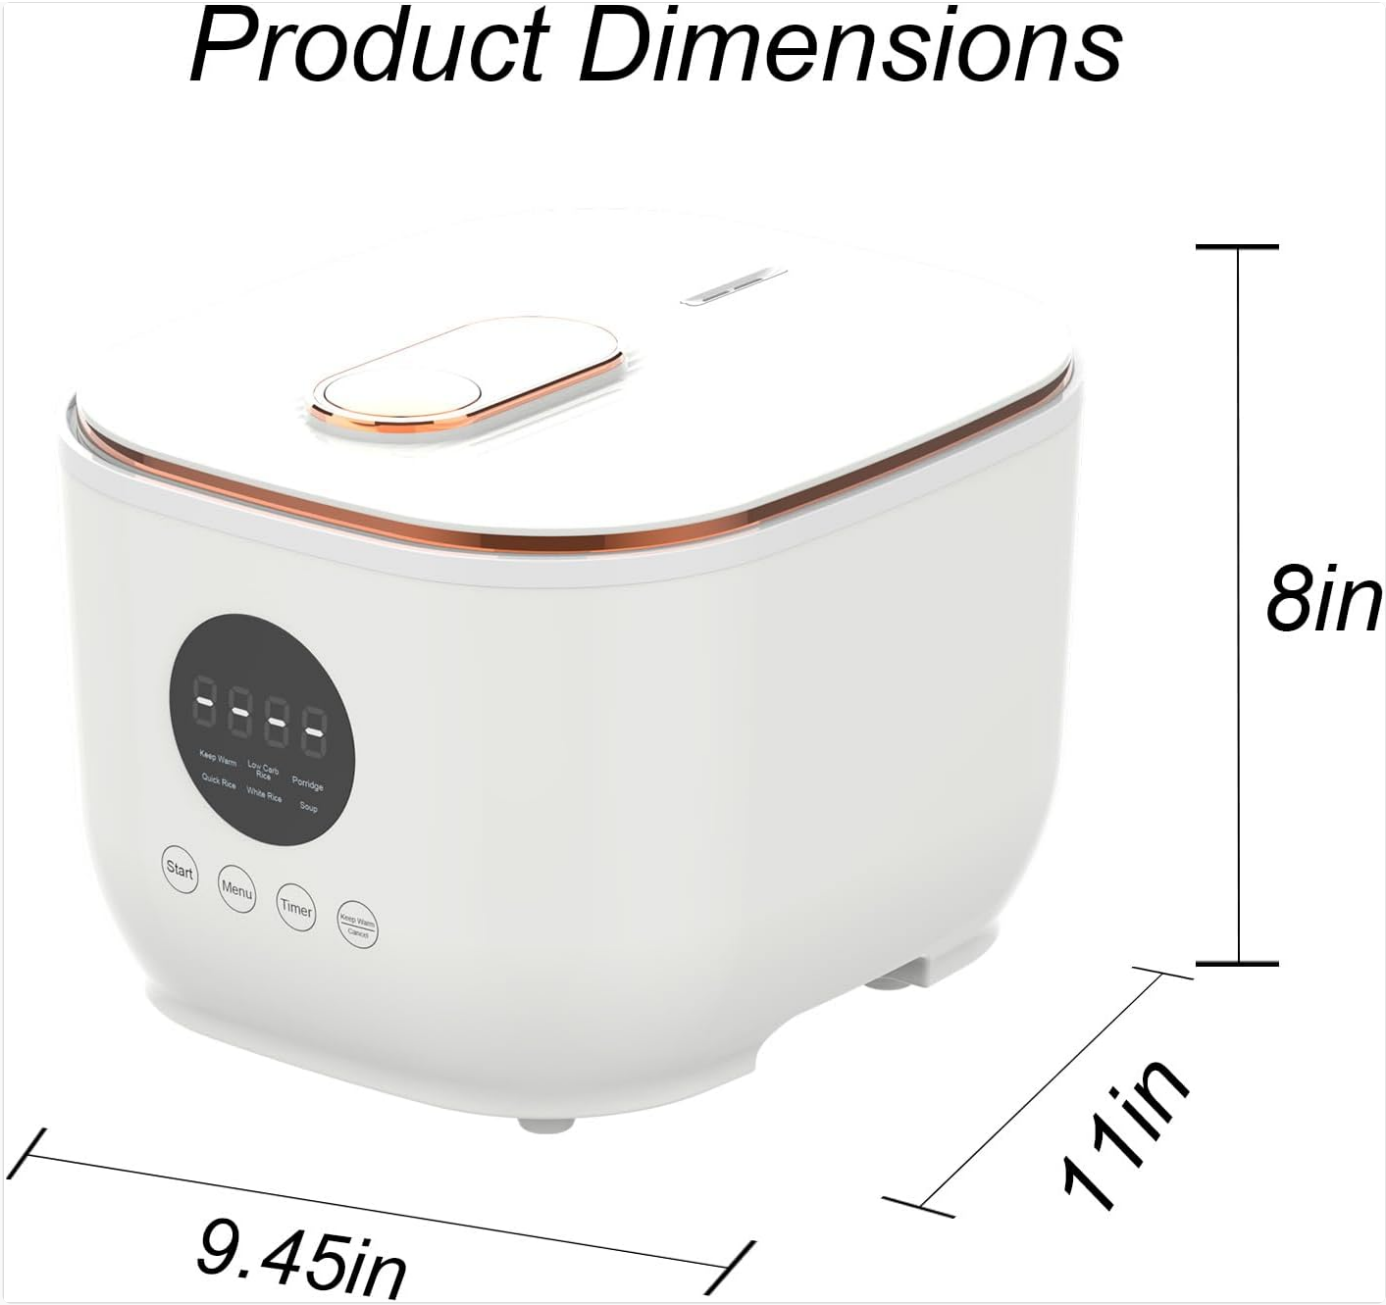


Figure 4: Product dimensions for placement reference.

3. Safety Instructions

- Always ensure the power cord is securely plugged into a grounded outlet.
- Do not immerse the main unit in water or other liquids.
- Keep out of reach of children.
- Do not operate the appliance if the power cord or plug is damaged.
- Avoid touching hot surfaces during and immediately after operation. Use oven mitts if necessary.
- Ensure the steam vent is clear and unobstructed during cooking.
- Use only accessories recommended by the manufacturer.

4. Setup

1. **Unpacking:** Carefully remove all packaging materials and accessories from the box.
2. **Initial Cleaning:** Before first use, wash the inner pot, stainless steel filter basket, measuring cup, and rice paddle with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the main unit with a damp cloth.

3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.
4. **Power Connection:** Connect the power cord to the rice cooker and then plug it into a standard electrical outlet. The display will illuminate.

5. Operating Instructions

5.1 Control Panel Functions

- **Start:** Initiates the selected cooking program.
- **Menu:** Cycles through available cooking functions (Keep Warm, Low Sugar Rice, Porridge, Quick Rice, White Rice, Soup).
- **Pre-set (Timer):** Sets the delayed start time for cooking.
- **Keep Warm/Cancel:** Activates or deactivates the Keep Warm function, or cancels the current operation.

5.2 Cooking Low-Sugar Rice

The intelligent sugar control technology reduces the sugar content in rice by up to 35%.

1. **Step 1: Rinse Rice**
   Rinse the desired amount of rice thoroughly under running water. Place the rinsed rice into the stainless steel filter basket.




Rinse rice thoroughly and pour it into a stainless steel strainer.

2. **Step 2: Place in Inner Pot**
   After rinsing, place the stainless steel filter basket containing the rice into the ceramic non-stick inner pot.



After rinsing the rice, put it into the inner pot of the electric rice cooker.

3. **Step 3: Add Water**
   Refer to the water level markings on the inner pot for the correct water-to-rice ratio for low-sugar rice. Add water until it reaches the appropriate level above the rice.

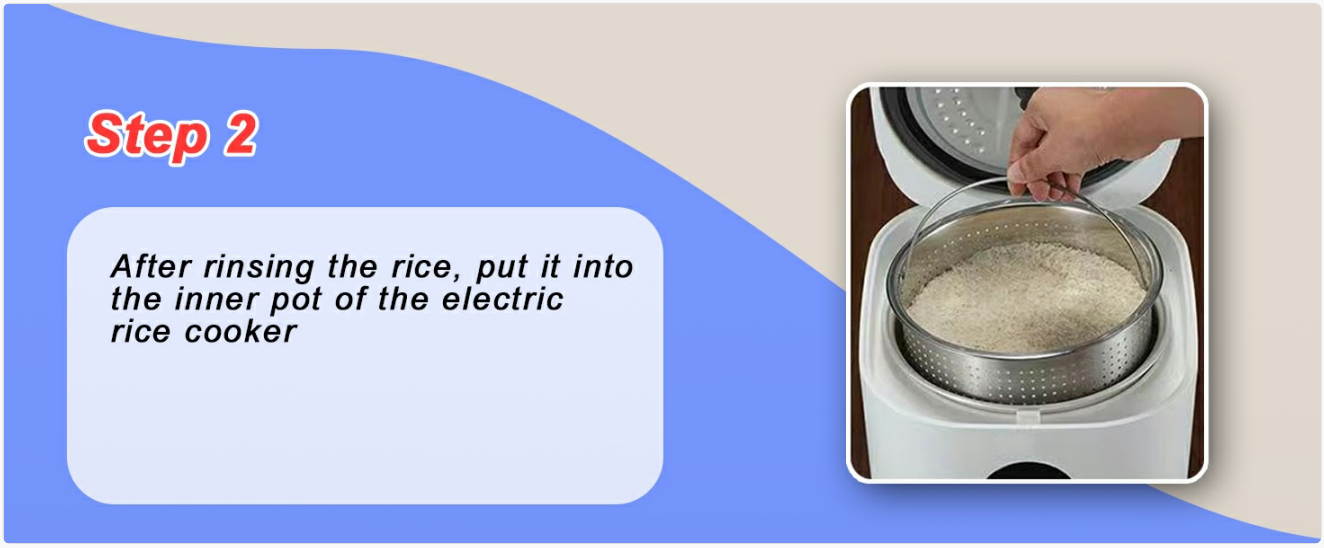

Refer to the user manual for the correct water level, and add water until it reaches the appropriate level above the rice.

4. **Step 4: Select Program and Start**
   Close the lid. Press the 'Menu' button repeatedly until 'Low Sugar Rice' is selected on the digital display. Press 'Start' to begin the cooking process. The cooker will automatically switch to 'Keep Warm' mode once cooking is complete.



Press the 'Menu' button, select the low-sugar rice setting, and wait for the cooking process to complete. You will then have delicious

low-sugar rice.

5. **How it Works:** The process involves boiling the rice, rinsing away excess starch, and then separating the cooked rice from the starchy broth.



Boil over high heat, with a vigorous and rolling boil. Rinse away the starch to achieve a low-sugar content. Separate the rice from the broth.

5.3 Other Cooking Functions

For other functions like Regular Rice, Quick Rice, Porridge, and Soup, follow the general steps of adding ingredients and water to the inner pot (without the filter basket for most, unless steaming). Select the desired function using the 'Menu' button and press 'Start'.



Figure 5: The rice cooker's versatility for different rice types and soup.

5.4 Using the Timer (Pre-set)

To use the 24-hour timer function:

1. Prepare your ingredients in the inner pot.
2. Press the 'Menu' button to select your desired cooking function.
3. Press the 'Pre-set' button. Use the 'Menu' button to adjust the delay time in hours.
4. Press 'Start' to confirm. The cooker will begin cooking after the set delay time.

6. Maintenance and Cleaning

Regular cleaning ensures the longevity and performance of your rice cooker.

1. **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Inner Pot and Filter Basket:** The ceramic glazed non-stick inner pot and stainless steel filter basket are easy to

clean. Wash them with warm, soapy water using a soft sponge. Avoid abrasive cleaners or metal scouring pads to prevent damage to the non-stick coating. Rinse thoroughly and dry completely.

3. **Lid:** The inner lid can be detached for thorough cleaning. Wash with warm, soapy water, rinse, and dry. Ensure it is properly reattached before next use.
4. **Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not use harsh chemicals or immerse the unit in water.
5. **Steam Vent:** Periodically check and clean the steam vent to ensure it is free from food debris.



Figure 6: Non-stick ceramic glaze inner pot for easy cleaning.

7. Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Rice is too hard/undercooked	Insufficient water; lid not properly closed; power interruption.	Ensure correct water ratio; check lid seal; verify power supply.
Rice is too soft/soggy	Too much water.	Reduce water slightly for next use.
Display shows error code or unusual text (e.g., "Meun")	Minor software anomaly or display issue.	Unplug the unit for 1-2 minutes, then plug it back in to reset. If the issue persists, contact customer support.
Steam/water spitting out	Overfilling; steam vent blocked.	Do not exceed maximum fill line; ensure steam vent is clear.
Food not keeping warm	Keep Warm function not activated or unit unplugged.	Ensure Keep Warm is selected; verify power connection.

8. Specifications

- **Brand:** Akureo
- **Model Name:** WGX-301
- **Capacity:** 3 Liters
- **Product Dimensions:** 12"D x 9"W x 11"H
- **Power Source:** Corded Electric
- **Wattage:** 500 watts
- **Voltage:** 110 Volts
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Lid Material:** Plastic
- **Item Weight:** 4.7 Pounds
- **Special Feature:** Low Carb Function, White Rice, Porridge, Soup

9. Warranty and Support

Akureo provides a comprehensive one-year warranty service for this product. This warranty covers manufacturing defects and technical support needs under normal use conditions.

For warranty claims, technical assistance, or any questions regarding your Akureo 3L Low Carb Rice Cooker, please contact Akureo customer support through the retailer where you purchased the product or visit the official Akureo website for contact information.

Please retain your proof of purchase for warranty validation.

© 2025 Akureo. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F544L8WM

More documents and user manuals: **https://manuals.plus/**