Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

PPOIUYTRE 636296

PPOIUYTRE Car Dome Light Reading Lamp 636296 User Manual

Model: 636296

Brand: PPOIUYTRE

1. Introduction

This manual provides instructions for the installation, operation, and maintenance of your PPOIUYTRE Car Dome Light Reading Lamp, model 636296. This product is designed to replace or upgrade your vehicle's interior lighting, enhancing visibility and comfort. Please read this manual thoroughly before installation and use.

2. Compatibility

This Car Dome Light Reading Lamp is compatible with the following vehicle models:

- Citroen AX
- Citroen ZX
- Citroen BX
- Peugeot 106

Ensure your vehicle's existing dome light matches the form factor and electrical connections of this product before proceeding with installation.

3. Package Contents

The package typically includes:

- 1 x Car Dome Light Reading Lamp (Model 636296)

4. Safety Information

- Always disconnect the vehicle's battery before performing any electrical work to prevent electrical shock or damage to the vehicle's electrical system.
- Wear appropriate personal protective equipment, such as safety glasses and gloves.
- Ensure all connections are secure and properly insulated to prevent short circuits.
- If you are unsure about any step of the installation process, consult a qualified automotive technician.
- Do not modify the product in any way. Unauthorized modifications may void the warranty and pose safety risks.

5. Setup and Installation

Installation of the Car Dome Light Reading Lamp requires basic automotive knowledge. If you are unsure, consult a qualified technician.

1. **Prepare the Vehicle:** Park the vehicle on a level surface and engage the parking brake. Turn off the ignition and remove the key. Disconnect the negative terminal of the vehicle's battery to prevent electrical hazards.
2. **Locate Existing Dome Light:** Identify the current dome light assembly in your vehicle's interior. This is typically located in the headliner.
3. **Remove Old Dome Light:** Carefully pry off the existing dome light cover using a plastic trim removal tool to avoid damaging the headliner. Disconnect any electrical connectors and unclip or unscrew the old dome light assembly from its housing.
4. **Connect New Dome Light:** Connect the electrical wiring from your vehicle to the new PPOIUYTRE Car Dome Light Reading Lamp. Ensure the polarity is correct if applicable.
5. **Secure New Dome Light:** Insert the new dome light assembly into the opening in the headliner. Ensure it clicks securely into place or is fastened with any provided screws. Reattach the light cover.
6. **Test Functionality:** Reconnect the negative terminal of the vehicle's battery. Turn on the ignition and test the new dome light. Verify that it illuminates correctly when doors are opened or when manually switched on.

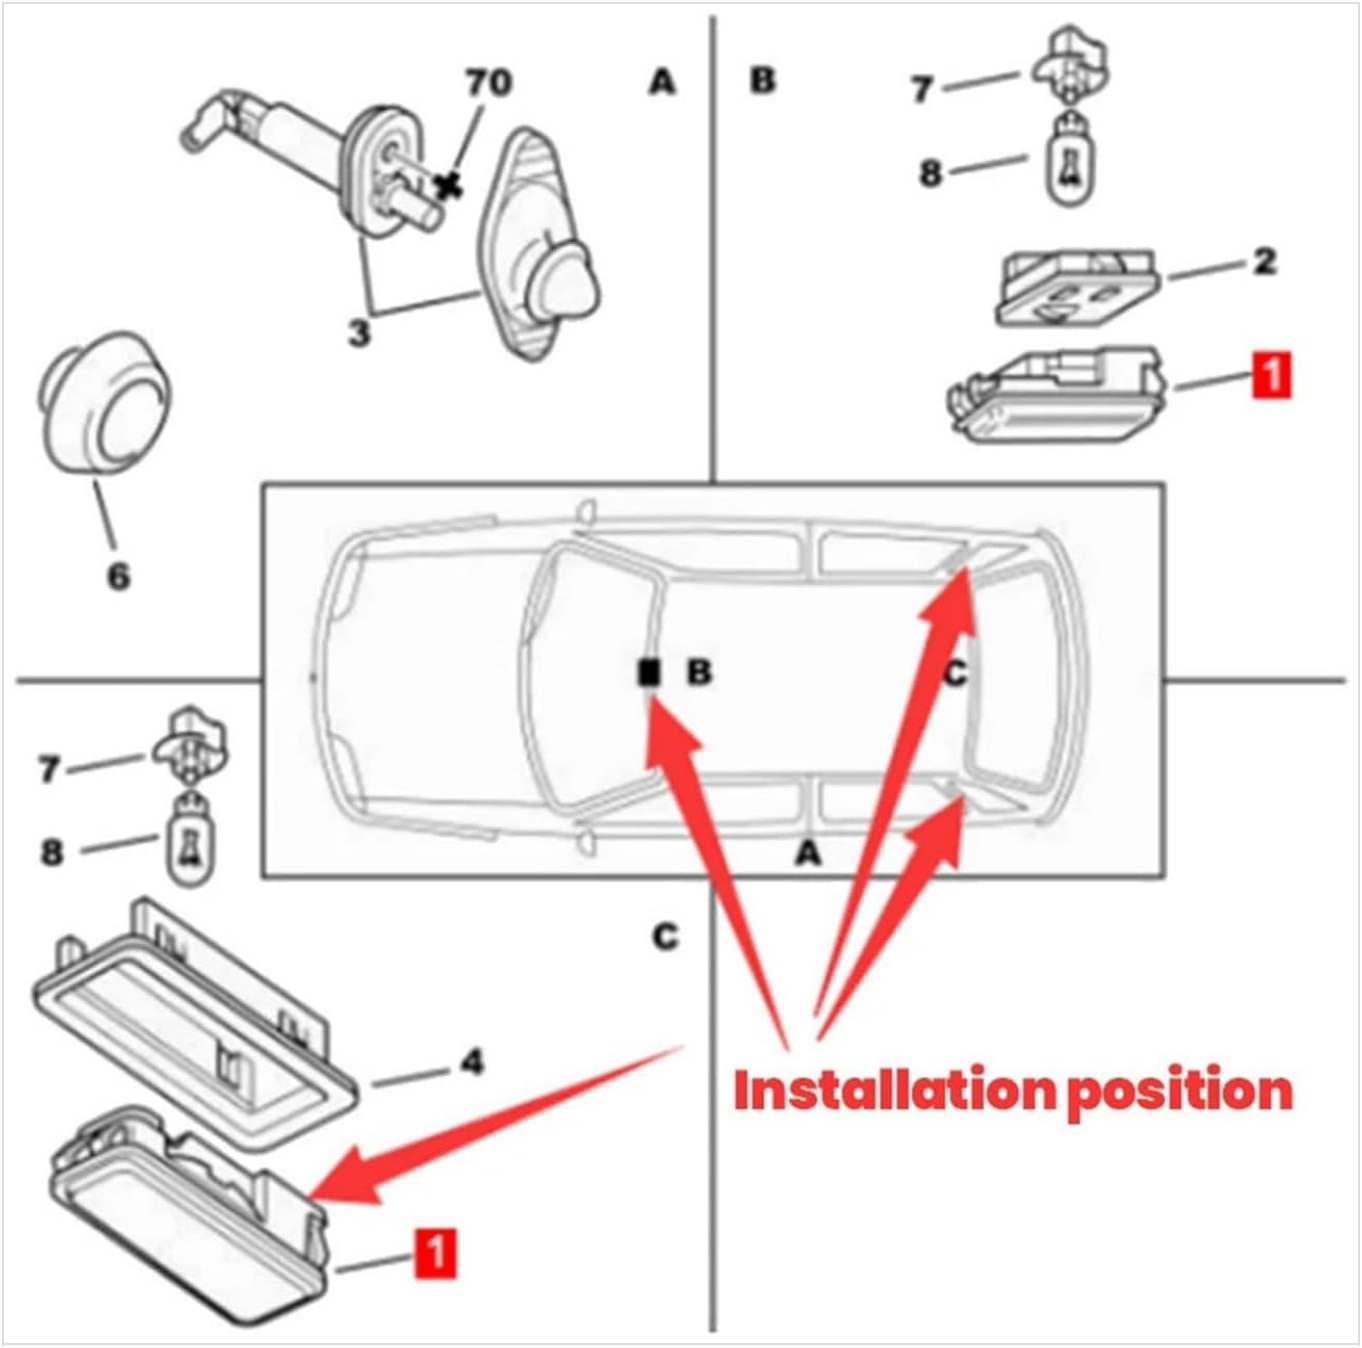


Figure 1: Installation position diagram. This diagram illustrates the typical installation positions for the dome light within the vehicle's interior. Refer to your vehicle's service manual for exact location and removal procedures.



Figure 2: Front view of the PPOIUYTRE Car Dome Light Reading Lamp, showing the clear lens and light-diffusing pattern.



Figure 3: Side view of the lamp, highlighting its profile and mounting tabs.



Figure 4: Rear view of the lamp, showing the electrical contacts and mounting mechanism.

6. Operating Instructions

The Car Dome Light Reading Lamp operates in conjunction with your vehicle's existing interior lighting controls. Typically, it will illuminate when a door is opened, or when manually switched on via the vehicle's interior light switch. Refer to your vehicle's owner's manual for specific instructions on operating interior lights.

7. Maintenance

- **Cleaning:** Clean the lamp's lens and housing with a soft, damp cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the plastic.

- **Bulb Replacement:** This unit is typically a sealed LED assembly and does not require bulb replacement. If the light fails, replacement of the entire unit is usually required.
- **Inspection:** Periodically inspect the lamp for any signs of damage or loose connections.

8. Troubleshooting

- **Light does not turn on:**
  - Check the vehicle's fuse box for a blown fuse related to interior lighting. Replace if necessary.
  - Ensure all electrical connections to the lamp are secure and properly seated.
  - Verify that the vehicle's interior light switch is in the 'ON' position or that a door is open.
  - Confirm compatibility with your vehicle's electrical system.
- **Light flickers or is dim:**
  - Check for loose electrical connections at the lamp or within the vehicle's wiring harness.
  - Ensure a stable power supply from the vehicle's electrical system.
  - If the issue persists, the unit may be faulty and require replacement.

9. Specifications

Feature	Specification
Brand	PPOIUYTRE
Model Number	636296
Item Weight	1.76 ounces
Package Dimensions	0.39 x 0.39 x 0.39 inches
Color	One Color
Fit Type	Universal Fit (for specified compatible models)
Manufacturer	PPOIUYTRE

10. Warranty and Support

For warranty information or technical support regarding your PPOIUYTRE Car Dome Light Reading Lamp, please contact your retailer or the manufacturer directly. Keep your purchase receipt as proof of purchase for any warranty claims. Do not attempt to repair the unit yourself, as this may void the warranty.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F5M6JLQB

More documents and user manuals: **https://manuals.plus/**