Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

oneisall PC15

oneisall Dog Clippers 4-in-1 Grooming Kit (Model PC15) Instruction Manual

Brand: oneisall

1. Introduction

This manual provides essential instructions for the safe and effective use of your oneisall PC15 4-in-1 Dog Grooming Kit. Please read thoroughly before first use and retain for future reference. This kit is designed for grooming various pet coat types, including thick and heavy coats, and includes tools for body trimming, detail work, and nail care.

2. Safety Information

- Keep away from water sources when charging or in use.
- Ensure the device is switched off before attaching or detaching any blades or combs.
- Always use the appropriate guard comb to prevent injury to your pet.
- Do not attempt to disassemble or repair the device yourself. Contact customer support if issues arise.
- Store the kit in a dry, safe place away from children and pets.

3. Product Components

The oneisall PC15 4-in-1 Dog Grooming Kit includes the following:

- Main Dog Clippers (Model 676)
- Detail Trimmer/Nail Grinder Unit (Model 677)
- Detachable Blade Heads for Detail Trimmer (Carving Head, Nail Grinder Head, Detail Head)
- 9 Size Guide Combs (3mm, 6mm, 10mm, 13mm, 16mm, 19mm, 22mm, 25mm)

- USB Charging Cables (2)
- Cleaning Brush
- Lubricating Oil



Image 1: Overview of the oneisall 4-in-1 Dog Grooming Kit, showing the main clippers, detail trimmer, various blade heads, and guide combs.

4. Setup

4.1 Charging the Devices

Both the main clippers and the detail trimmer are cordless and rechargeable. Use the provided USB charging cables to charge them before first use.

- The main clippers (2000mAh battery) provide approximately 240 minutes of runtime on a full charge.
- The detail trimmer (1200mAh battery) provides approximately 150 minutes of runtime on a full charge.
- An LED display on each device indicates the remaining power level.

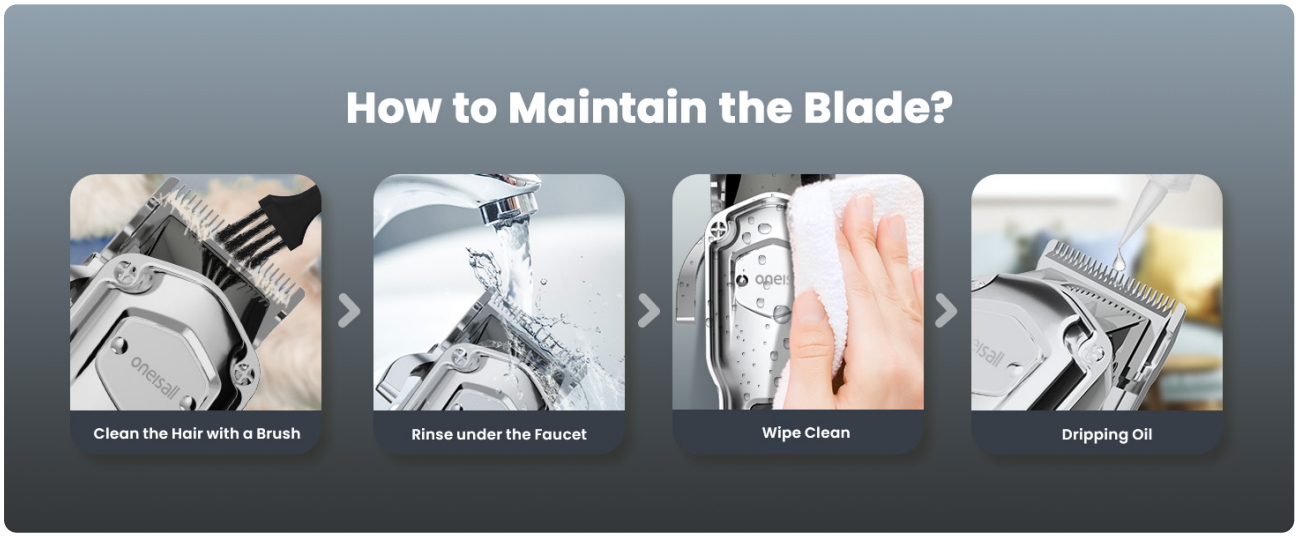


Image 2: The main clippers and detail trimmer connected to their respective USB charging cables, illustrating their battery life.

4.2 Attaching and Detaching Blades/Combs

Ensure the device is OFF before changing attachments.

- **For Main Clippers:** Select the desired guide comb (3-25mm) and slide it onto the clipper blade until it clicks securely into place. To remove, gently lift the comb from the base of the blade.
- **For Detail Trimmer:** The detail trimmer unit comes with interchangeable blade heads (Carving Head, Nail Grinder Head, Detail Head). To change, twist the current head counter-clockwise to remove, then align the new head and twist clockwise until secure.

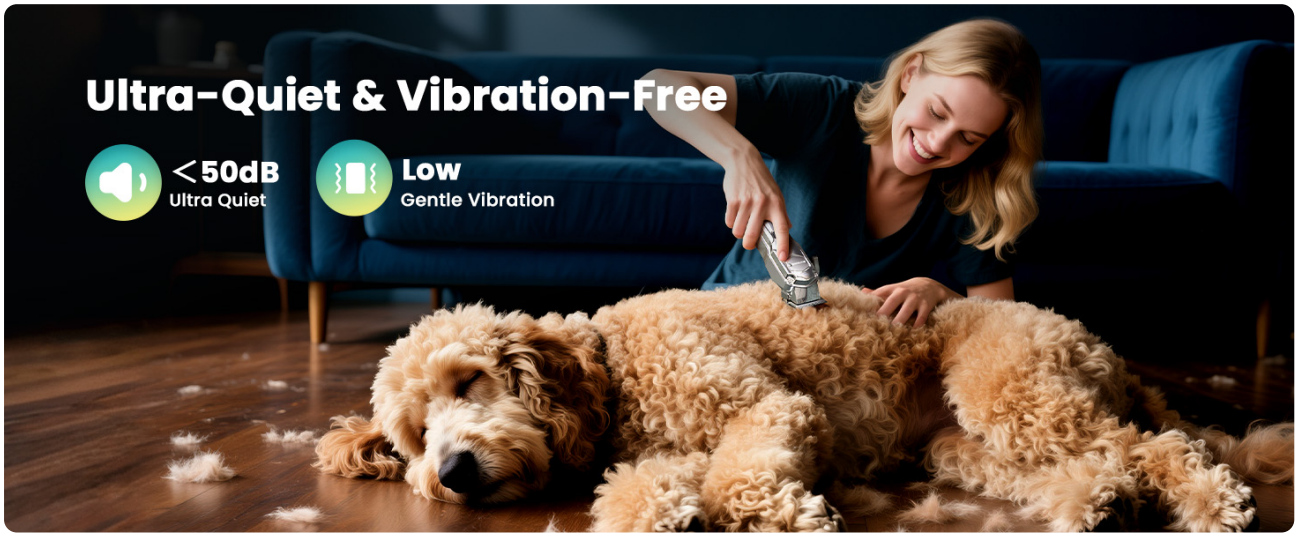


Image 3: Illustration of the detachable blade heads for the detail trimmer, showing how they twist on and off.

5. Operating Instructions

The oneisall grooming kit operates with low noise (below 50dB) and gentle vibration to keep pets calm during grooming.



Image 4: A dog calmly resting while being groomed, highlighting the ultra-quiet and vibration-free operation of the clippers.

5.1 Body Grooming with Main Clippers

- Attach the desired guide comb to the main clippers.
- Turn on the clippers using the power button. The main clippers feature a powerful 6800 RPM motor for efficient cutting.

- Gently guide the clippers through your pet's fur in the direction of hair growth.
- The stainless steel blades are designed to cut through thick and matted fur smoothly without pulling.

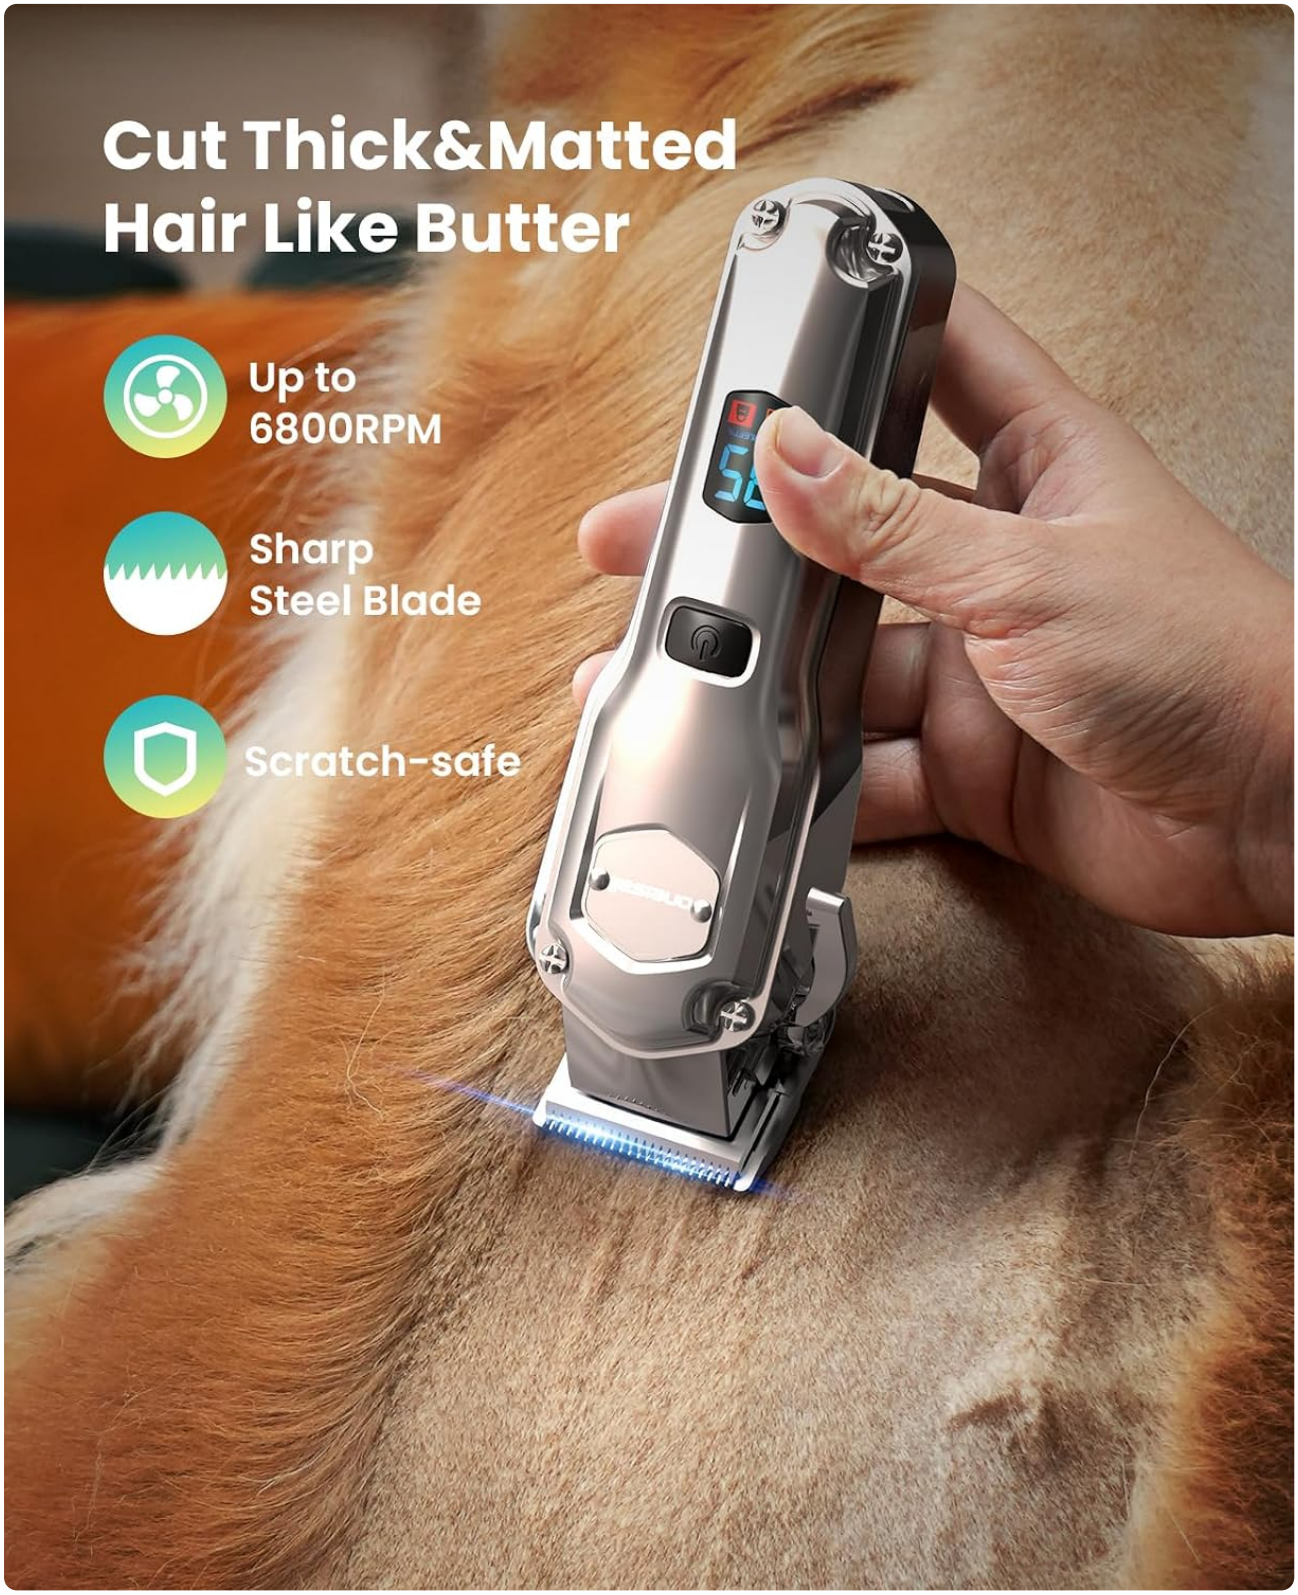


Image 5: Close-up of the main clippers in action, demonstrating their ability to cut through thick fur effectively.

5.2 Detail Trimming (Face, Paws, Ears)

- Attach the appropriate detail blade head (Carving Head or Detail Head) to the trimmer unit.
- Turn on the trimmer. The detail trimmer offers 3 speeds: 6000/6500/7000 RPM. Adjust speed using the +/- buttons.
- Carefully trim around sensitive areas such as the face, paw pads, and ears.



Image 6: A visual representation of the 4-in-1 kit's versatility, showing trimming of the face, paw pads, and nail grinding.

5.3 Nail Grinding

- Attach the Nail Grinder Head to the trimmer unit.
- Turn on the trimmer.
- Gently introduce your pet's nail to the grinding surface. Grind nails gradually to avoid overheating or causing discomfort.

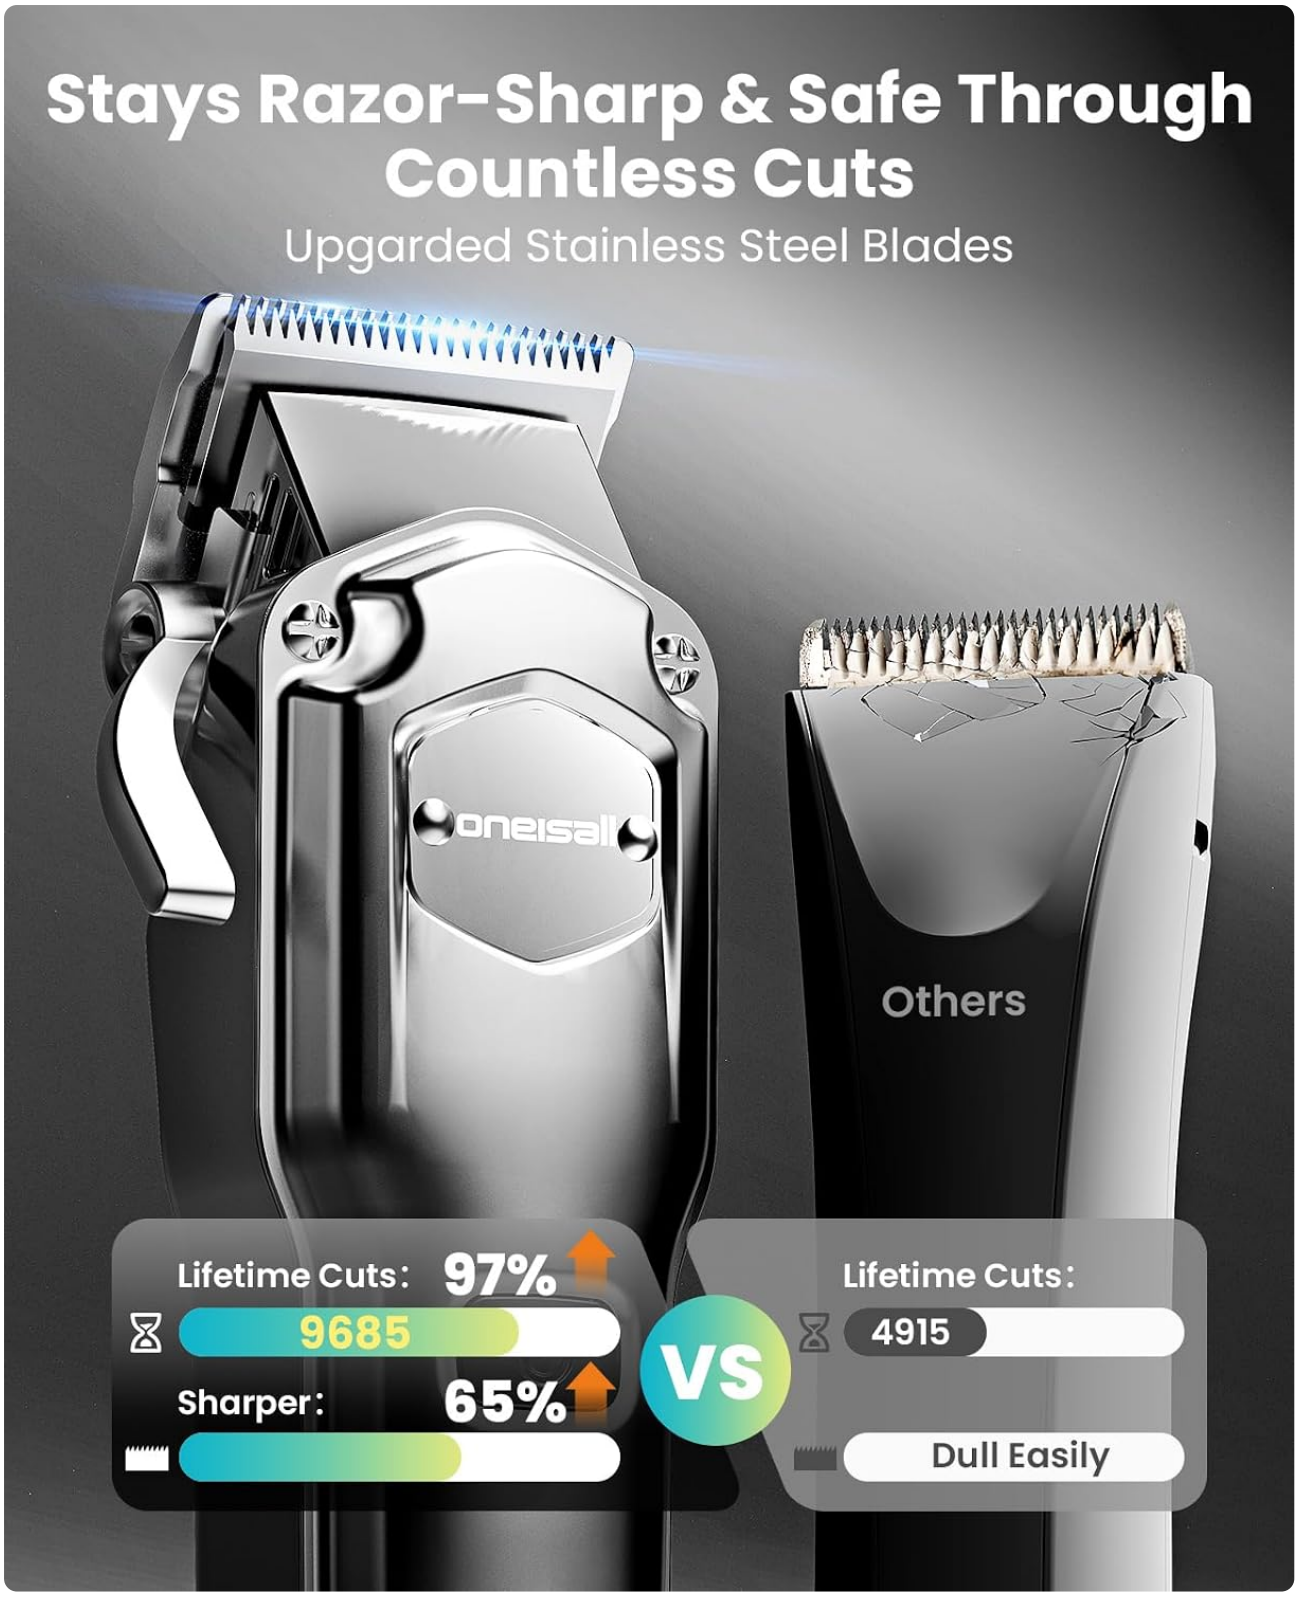


Image 7: A close-up of the nail grinder being used on a dog's paw, illustrating the ease of use for nail care.

5.4 Official Product Video

Video 1: Official oneisall demonstration of the Dog Clippers Kit for Grooming Thick Hair Coats, showcasing various features and usage.

6. Maintenance

6.1 Cleaning the Blades

The grooming kit features IPX6 waterproof protection, allowing for easy cleaning.

- After each use, remove any accumulated hair from the blades using the provided cleaning brush.
- The detachable blade heads can be rinsed directly under running water. Ensure the main unit is not submerged if it's not explicitly stated as fully submersible.
- Wipe the blades dry with a soft cloth.

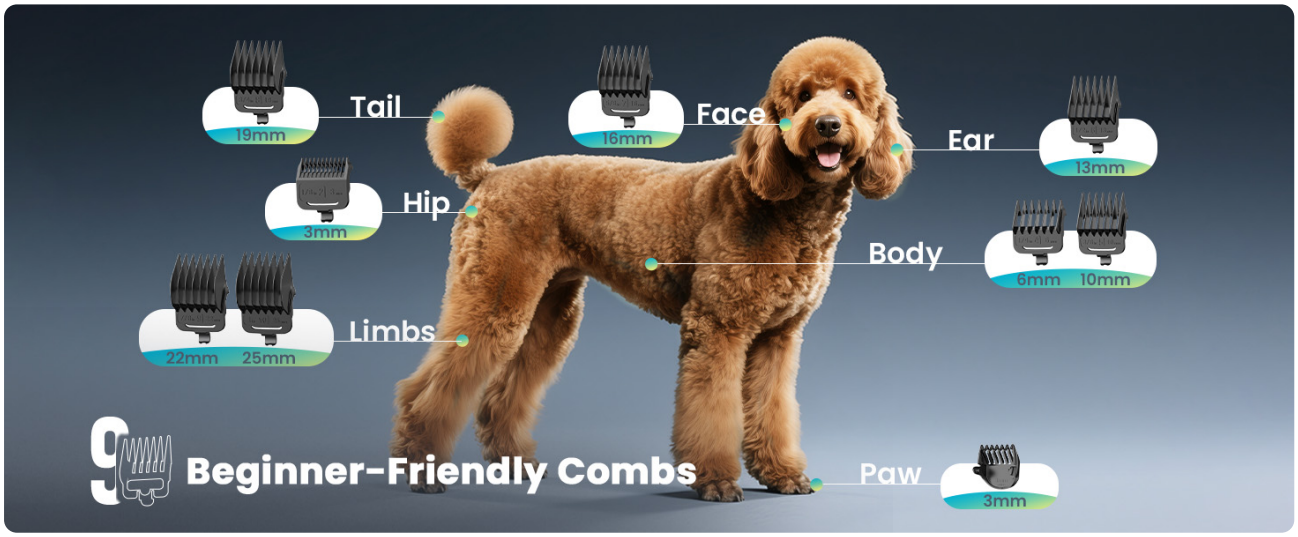


Image 8: The clippers being rinsed under a faucet, demonstrating their IPX6 waterproof feature for easy cleaning.

6.2 Oiling the Blades

Regular oiling ensures optimal performance and longevity of the blades.

- Apply a few drops of the provided lubricating oil to the blades after cleaning and drying.
- Run the clippers for a few seconds to distribute the oil evenly.

7. Specifications

- **Product Dimensions:** 6.69 x 2.28 x 8.66 inches; 1.85 Pounds
- **Item Model Number:** PC15
- **Batteries:** 1 A battery required (included)
- **Manufacturer:** oneisall
- **Power Source:** Battery Powered
- **Waterproof Rating:** IPX6 (Whole Body Washable)
- **Main Clippers Motor Speed:** 6800 RPM
- **Detail Trimmer Motor Speeds:** 6000/6500/7000 RPM (3 Speeds)
- **Noise Level:** Below 50dB

8. Warranty and Support

oneisall stands by its products. If your grooming kit stops working within 1001 days of purchase, please contact customer support for a FREE replacement.

For further assistance or expert grooming tips, please refer to the contact information provided in your product packaging or visit the official oneisall website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F62NXF4Z

More documents and user manuals: **https://manuals.plus/**