Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

artfone G6

artfone G6 Pro 4G Flip Phone User Manual

Model: G6

1. Introduction

The artfone G6 Pro is a 4G flip phone designed for ease of use, particularly for seniors. It features a dual-screen display, large backlit keys, an SOS emergency button, and a convenient charging dock. This manual provides detailed instructions for setting up, operating, and maintaining your device.

2. Package Contents

Please verify that all items are present in your product package:

- artfone G6 Pro 4G Flip Phone
- User Manual
- USB Charging Cable
- Power Adapter
- Charging Dock
- 1300mAh Lithium-ion Battery

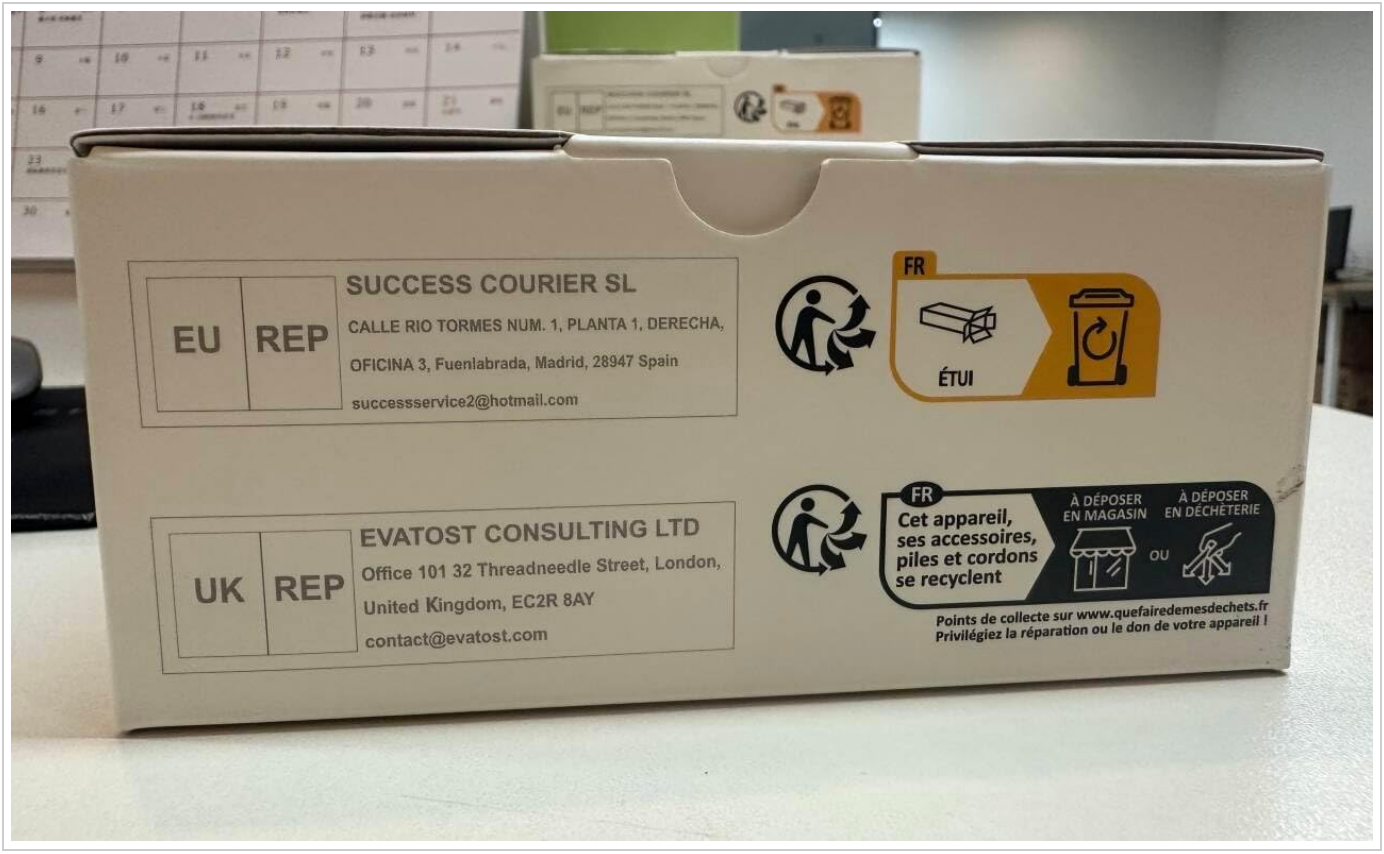


Image: The artfone G6 Pro phone, user manual, USB cable, power adapter, 1300mAh battery, and charging dock are included in the package.

3. Phone Overview

3.1 Physical Features



Image: The artfone G6 Pro flip phone shown both open and closed in its charging dock.

The artfone G6 Pro features a classic flip design with a robust build. Key components include:

- **Dual Screens:** A large 2.4-inch internal display and a 1.8-inch external display for time and notifications.
- **Large Backlit Keypad:** Designed for easy dialing and navigation.
- **SOS Button:** Located on the back for emergency calls.
- **Side Buttons:** For volume control and flashlight activation.
- **Camera:** Integrated for capturing photos.

3.2 Dual Display Functionality



Image: The artfone G6 Pro displays its external screen with a clock and battery indicator, and its internal screen showing the main interface.

The external 1.8-inch screen displays the current time and incoming call information without needing to open the phone. The internal 2.4-inch screen provides the main user interface for all phone functions.

3.3 Keypad and Navigation



Image: A detailed view of the artfone G6 Pro's large, clearly labeled, and backlit keypad.

The keypad features large, well-spaced, and backlit buttons for easy visibility and tactile feedback. Dedicated quick-dial buttons (M1, M2, *, #2-9) can be programmed for frequently called contacts.

4. Setup

4.1 Installing SIM Card and MicroSD Card

The artfone G6 Pro supports Nano SIM cards and MicroSD cards up to 64GB.

1. Carefully remove the back cover of the phone.
2. Locate the SIM card slot and MicroSD card slot.
3. Insert the Nano SIM card into the designated slot with the gold contacts facing down.
4. Insert the MicroSD card into its slot, ensuring it is correctly oriented.
5. Replace the back cover securely.



Image: The internal compartment of the artfone G6 Pro, illustrating the slots for the Nano SIM card, MicroSD card, and the battery.

4.2 Battery Installation and Charging

The phone comes with a 1300mAh Lithium-ion battery.

1. After inserting the SIM/MicroSD cards, place the battery into the battery compartment, aligning the gold contacts.
2. Replace the back cover.
3. To charge, connect the USB-C cable directly to the phone or place the phone in the charging dock.
4. Connect the power adapter to a wall outlet. The charging indicator will illuminate.
5. Allow the phone to charge fully before first use.



Image: The artfone G6 Pro demonstrating two charging methods: direct USB-C cable connection and placement in the charging dock.

5. Operating Instructions

5.1 Power On/Off

- **To Power On:** Press and hold the red 'End Call' button until the screen illuminates.
- **To Power Off:** Press and hold the red 'End Call' button, then confirm 'Power Off' on the screen.

5.2 Making and Receiving Calls

- **Making a Call:** Dial the number using the keypad and press the green 'Call' button.
- **Receiving a Call:** Open the flip to automatically answer, or press the green 'Call' button when the phone is open.
- **Ending a Call:** Close the flip or press the red 'End Call' button.

5.3 SOS Emergency Function



Image: The rear view of the artfone G6 Pro, highlighting the prominent SOS emergency button and side controls.

The SOS button is located on the back of the phone. In an emergency:

1. Press and hold the SOS button for 3 seconds.
2. The phone will automatically call up to 5 pre-programmed emergency contacts in sequence until one answers.
3. An emergency SMS message will also be sent to these contacts.

To set up SOS contacts: Go to **Menu > SOS Settings > SOS Numbers** and add up to 5 contacts.

5.4 Time Announcement



Image: A hand pressing the dedicated time announcement button on the artfone G6 Pro, with visual cues indicating a voice output of the time.

Press the dedicated 'Time Announcement' button (often marked with a clock icon) on the keypad to hear the current time spoken aloud. This feature is beneficial for users with visual impairments.

5.5 Contacts and Quick Dial



Image: The artfone G6 Pro's screen showing an incoming call with a contact photo, illustrating the picture contact feature.

The phonebook allows you to save contacts with associated pictures, which will display during incoming calls. You can also assign quick dial numbers (M1, M2, *, #2-9) to important contacts for one-touch dialing.

5.6 Multimedia Features

- **Camera:** Access the camera via the menu to take photos. Photos are saved to the MicroSD card.
- **FM Radio:** Plug in headphones (not included) to use as an antenna, then access the FM Radio from the menu.
- **Flashlight:** Activate the built-in flashlight using the dedicated side button.



Image: The artfone G6 Pro's screen showing a camera preview of an elderly couple, demonstrating its photo-taking capability.



Image: Visual representation of the artfone G6 Pro's flashlight, FM radio, and 3.5mm headphone jack features.

5.7 User Interface Navigation



Image: The artfone G6 Pro's main screen showing a grid of large, clear icons for easy navigation through Contacts, Tools, Messages, SOS, Calendar, Settings, Internet, Multimedia, and Call Logs.

The phone features an intuitive menu system with clear icons. Use the navigation keys to scroll through options and the 'OK' button to select. The 'Back' button returns to the previous screen.

6. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the phone's exterior. Avoid liquid cleaners.
- **Battery Care:** To prolong battery life, avoid extreme temperatures. Do not leave the phone fully discharged for extended periods.
- **Storage:** Store the phone in a cool, dry place when not in use.

7. Troubleshooting

Issue	Possible Solution
Phone does not power on	Ensure the battery is correctly installed and fully charged. Connect to the charger and try again.
Cannot make or receive calls	Check if the SIM card is properly inserted and activated. Verify network signal strength.
Poor battery life	Ensure the phone is fully charged. Reduce screen brightness. Close unused applications. If the issue persists, the battery may need replacement.
Keys are unresponsive	Restart the phone. Ensure no debris is obstructing the keys.

Issue	Possible Solution
No sound during calls	Check the volume settings. Ensure the speaker is not blocked.

8. Specifications

Feature	Detail
Model Name	G6
Brand	artfone
Operating System	artfone Mocor RTOS
Cellular Technology	4G, 3G, 2G (VoLTE support)
Main Screen Size	2.4 Inches
External Screen Size	1.8 Inches
Battery Capacity	1300 mAh Lithium-ion
Memory Storage Capacity	128 MB
Expandable Storage	MicroSD up to 64GB
Connectivity	USB Type-C
Special Features	SOS Button, Dual Screen, Large Keys, FM Radio, Flashlight, Quick Dial

9. Warranty and Support

For warranty information and technical support, please contact artfone customer service:

- **Website:** www.artfone.com.cn
- **Email:** info@artfone.com.cn
- **EU Representative Email:** successservice2@hotmail.com
- **UK Representative Email:** contact@evatost.com

For additional product information and the artfone store, visit: artfone Store on Amazon

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F6MP31TH

More documents and user manuals: **https://manuals.plus/**