Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Atlodas LK-007

Atlodas LK-007 4K Foldable Screen Digital Camera User Manual

Model: LK-007

1. Introduction

This manual provides detailed instructions for the proper use and maintenance of your Atlodas LK-007 4K Foldable Screen Digital Camera. Please read this manual thoroughly before operating the camera to ensure optimal performance and longevity. This camera is designed for capturing high-definition photos and videos with ease, featuring a 48MP sensor, 4K video recording, 8X digital zoom, and a convenient flip screen.

2. Product Overview

Familiarize yourself with the camera's components and controls.

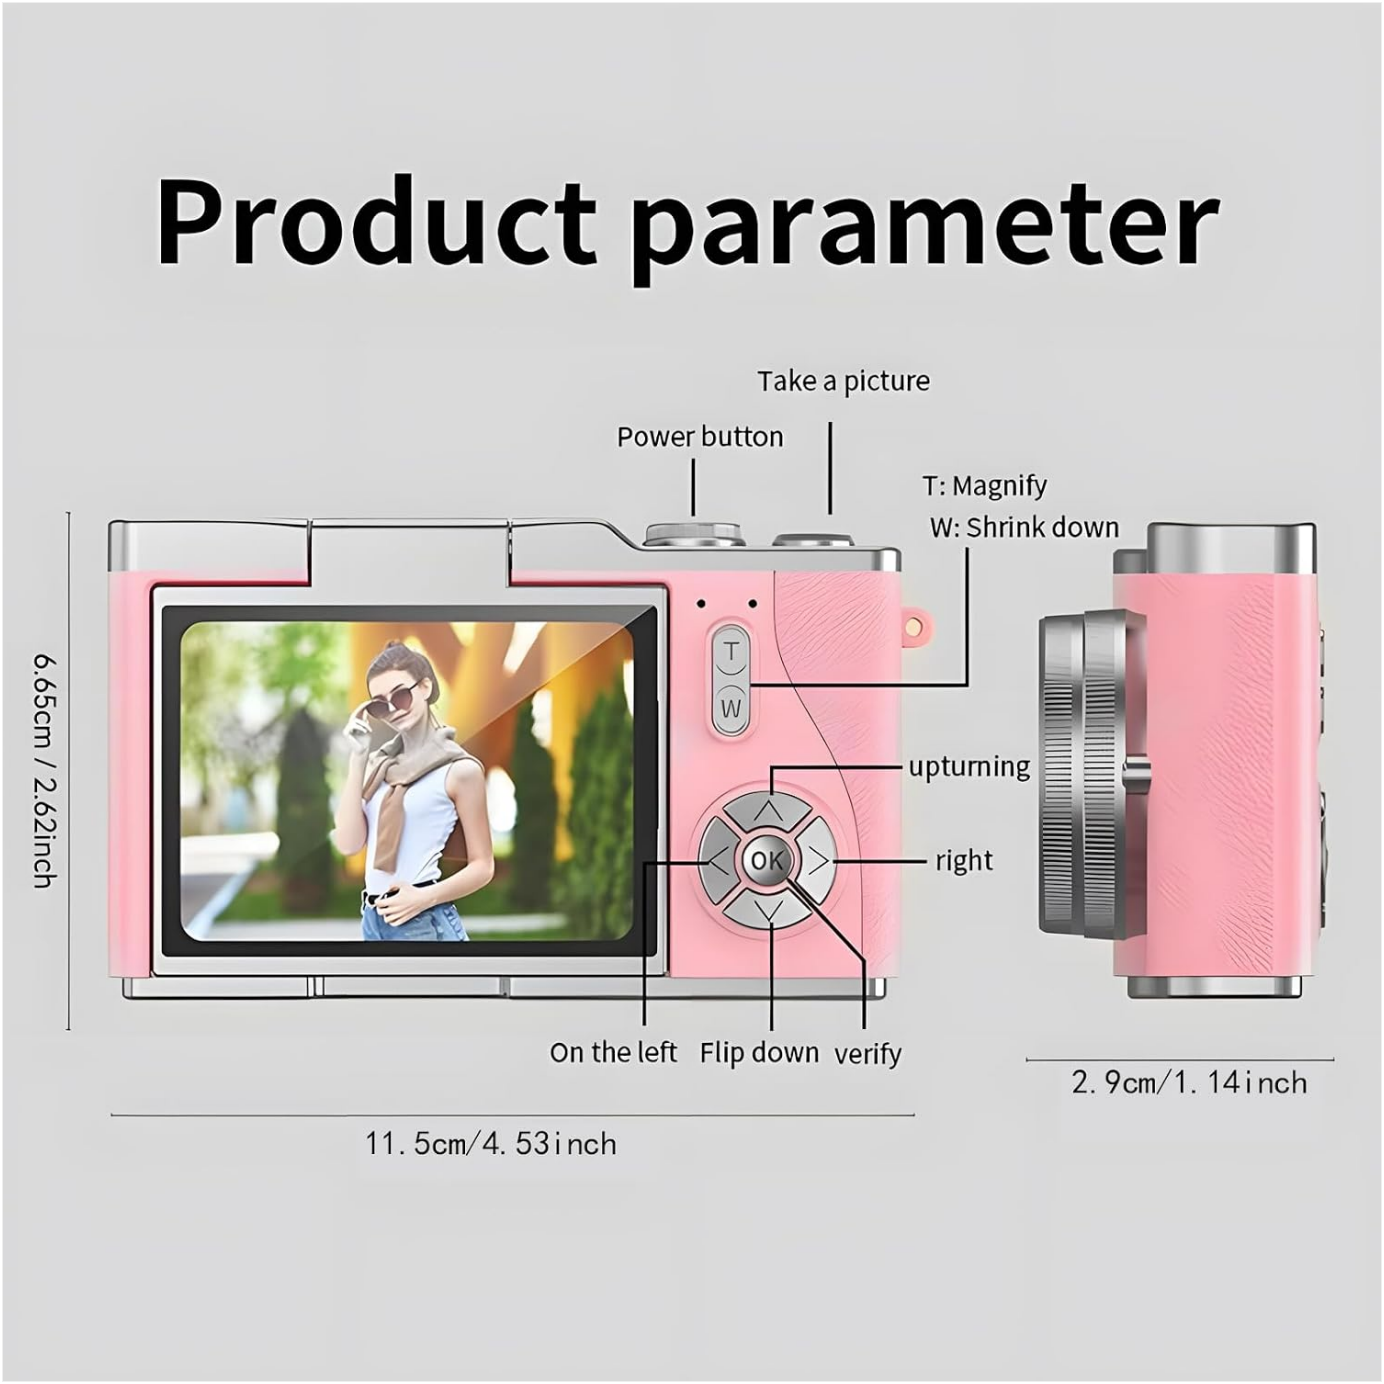


Figure 2.1: Camera Components and Dimensions. This image illustrates the camera's physical layout, including the power button, shutter button, zoom controls (T/W), and navigation buttons (OK, up, down, left, right). Dimensions are provided as 11.7cm x 6.4cm x 2.9cm (4.61 x 2.52 x 1.14 inches).

2.1 Camera Controls

- **Power Button:** Turns the camera on or off.
- **Shutter Button (Take a picture):** Press to capture a photo.
- **Zoom Controls (T/W):** 'T' to magnify (zoom in), 'W' to shrink down (zoom out).
- **OK Button (Verify):** Confirms selections in menus.
- **Navigation Buttons (Upturning, Flip down, On the left, Right):**Used for menu navigation and specific functions.
- **Flip Screen:** The 2.4-inch LCD screen can be flipped upwards 180 degrees for selfie mode or vlogging.

3. Setup

3.1 Battery Installation and Charging

The camera uses a Lithium Ion battery. Ensure the battery is fully charged before first use.

1. Locate the battery compartment cover on the bottom of the camera.
2. Open the cover and insert the battery according to the polarity indicators.
3. Close the battery compartment cover securely.
4. Connect the camera to a power source using the provided USB-C cable for charging. The charging indicator will show the charging status.

3.2 Memory Card Installation

A microSD card (up to 32GB recommended) is required to store photos and videos.

1. Locate the memory card slot on the side of the camera.
2. Insert the microSD card with the metal contacts facing down until it clicks into place.
3. To remove, gently push the card until it springs out.

4. Operating Instructions

4.1 Powering On/Off

Press and hold the Power Button to turn the camera on or off.

4.2 Taking Photos

The camera supports 48MP HD photos.

1. Ensure the camera is in Photo mode (select from the main menu if necessary).
2. Frame your shot using the LCD screen.
3. Use the 'T' and 'W' buttons for 8X digital zoom if needed.
4. Press the Shutter Button to capture the image. The camera features digital image stabilization to reduce blur.



Figure 4.1: 4K Ultra HD Recording. This image illustrates the camera's capability for high-definition photo and video capture, highlighting its stunning picture quality.



Figure 4.2: 8X Zoom Function. This image illustrates the camera's 8X digital zoom, allowing users to capture distant details effectively.

4.3 Recording Videos

The camera supports FHD 4K video recording at 30 FPS.

1. Switch to Video mode from the main menu.
2. Press the Shutter Button to start recording. A recording indicator will appear on the screen.
3. Press the Shutter Button again to stop recording.

4.4 Using the Flip Screen

The 2.4-inch LCD screen can be flipped up 180 degrees, making it ideal for self-portraits and vlogging.



Figure 4.3: Flip Screen and Multifunction Buttons. This image highlights the camera's 2.4-inch flip screen, which can be rotated for various shooting angles, and the multifunction buttons for easy operation.



Figure 4.4: Electronic Anti-Shake. This image demonstrates the camera's electronic anti-shake feature, which helps to produce clear images even with movement.

4.5 Additional Features

The camera includes various functions accessible through its user-friendly interface:

- **Filters:** Apply various filters to your photos.
- **Games:** Enjoy built-in games.
- **Music:** Play music files.
- **Album:** View your captured photos and videos.
- **Settings:** Adjust camera parameters such as exposure, white balance, and date/time.

Your browser does not support the video tag.

Video 4.1: Handheld Digital Camera for Kids with Flip Selfie Screen. This video demonstrates the camera's features, including the flip screen for selfies, its compact design, and the various modes like photo, video, games, and music. It also shows the USB-C charging port and memory card slot.

5. Maintenance

5.1 Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens and screen, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- Ensure the camera is powered off before cleaning.

5.2 Battery Care

- Avoid exposing the battery to extreme temperatures.
- Charge the battery regularly, even if not in frequent use, to maintain its lifespan.

5.3 Storage

Store the camera in a cool, dry place away from direct sunlight and moisture when not in use. Remove the battery if storing for extended periods.

6. Troubleshooting

Problem	Possible Cause	Solution
Camera does not power on.	Low battery; battery incorrectly installed.	Charge the battery; ensure battery is inserted with correct polarity.
Cannot take photos/record videos.	Memory card full or not inserted; incorrect mode.	Insert/replace memory card; ensure sufficient space; switch to Photo/Video mode.
Images are blurry.	Camera shake; dirty lens; subject too close/far.	Hold camera steady; clean lens; ensure subject is within focus range.
Screen is blank or frozen.	System error.	Power off and restart the camera. If issue persists, reset to factory settings (refer to settings menu).

7. Specifications

Feature	Detail
Model Name	LK-007
Maximum Webcam Image Resolution	48 MP
Video Resolution	4K (FHD), 1080p at 30 FPS
Optical Zoom	8 x (Digital Zoom)
Image Stabilization	Digital
Screen Size	2.4 Inches (LCD, Flip Screen)
Photo Sensor Technology	CCD
Supported File Format	JPEG (photos), MP4 (videos)

Feature	Detail
Memory Storage Capacity	32 GB (microSD card, not included)
Connectivity Technology	USB (USB-C)
Battery Type	Lithium Ion
Exposure Control	Automatic, Manual
Focus Type	Auto and Manual Focus (Contrast Detection AF)
Shooting Modes	Automatic, Timer

8. Warranty and Support

The manufacturer states that there is no explicit warranty description provided for this product. For any product-related inquiries, technical support, or assistance, please contact the seller or refer to the official Atlodas support channels if available.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F6N4DGCC

More documents and user manuals: **https://manuals.plus/**