COMHOMA DF-H7134-BLK-N1

COMHOMA Recliner Chair User Manual

Model: DF-H7134-BLK-N1

Introduction

This manual provides essential instructions for the assembly, operation, and maintenance of your COMHOMA Recliner Chair. Please read this manual thoroughly before use to ensure proper function and safety.



Image: The COMHOMA Recliner Chair, showcasing its design and integrated features like massage and heat.

Safety Information

WARNING:

- Always follow the assembly instructions carefully to avoid injury.
- This chair is designed to withstand up to 250 lbs (113 kg) for optimal safety and comfort. Do not exceed this weight limit.
- Keep hands and feet clear of the reclining mechanism when operating the chair.
- Ensure the power cord is not pinched or damaged.
- Do not allow children to play on or around the recliner unsupervised.

Product Features

- **360° Swivel Function:** Allows for full rotation without moving the chair base.
- **Reclining Mechanism:** Manual recline for adjustable comfort.
- **Massage Function:** Integrated massage with multiple modes and intensity levels.

- **Heat Function:** Lumbar heating for added relaxation.
- **Convenient Storage:** Includes side pockets and cup holders.
- **Durable Construction:** Strong and sturdy design for long-term use.

Setup and Assembly

The COMHOMA Recliner Chair requires assembly. Clear and concise instructions are provided with the product to ensure a smooth assembly process. It is recommended to have two people for assembly.

Assembly Steps:

1. Unpack all components and verify against the parts list.
2. Attach the backrest to the seat base.
3. Secure the armrests to the main frame.
4. Connect any electrical components for massage and heat functions.
5. Ensure all connections are secure before use.



Image: Illustration of the manual reclining mechanism, demonstrating various positions from upright to fully reclined.

Operating Instructions

Reclining Function:

To recline, push back gently on the backrest while simultaneously pushing forward on the armrests. To return to an upright position, lean forward and push the footrest down with your legs until it locks into place.



Image: A user demonstrating the reclined position of the chair.

Swivel Function:

The chair base allows for a full 360-degree swivel. Simply rotate the chair in your desired direction while seated.



Image: The chair's 360-degree swivel capability, allowing for easy rotation.

Massage and Heat Functions:

Use the wired remote control to operate the massage and heat features. The remote allows you to select from 5 massage modes, target 4 massage points (back, lumbar, thighs, legs), adjust intensity, and activate lumbar heating. A timer function is also available.



Image: Visual representation of the massage and heat features, including control options.

Convenience Features:

The chair is equipped with two cup holders on the armrests and side pockets for storing small items like remote controls or magazines.

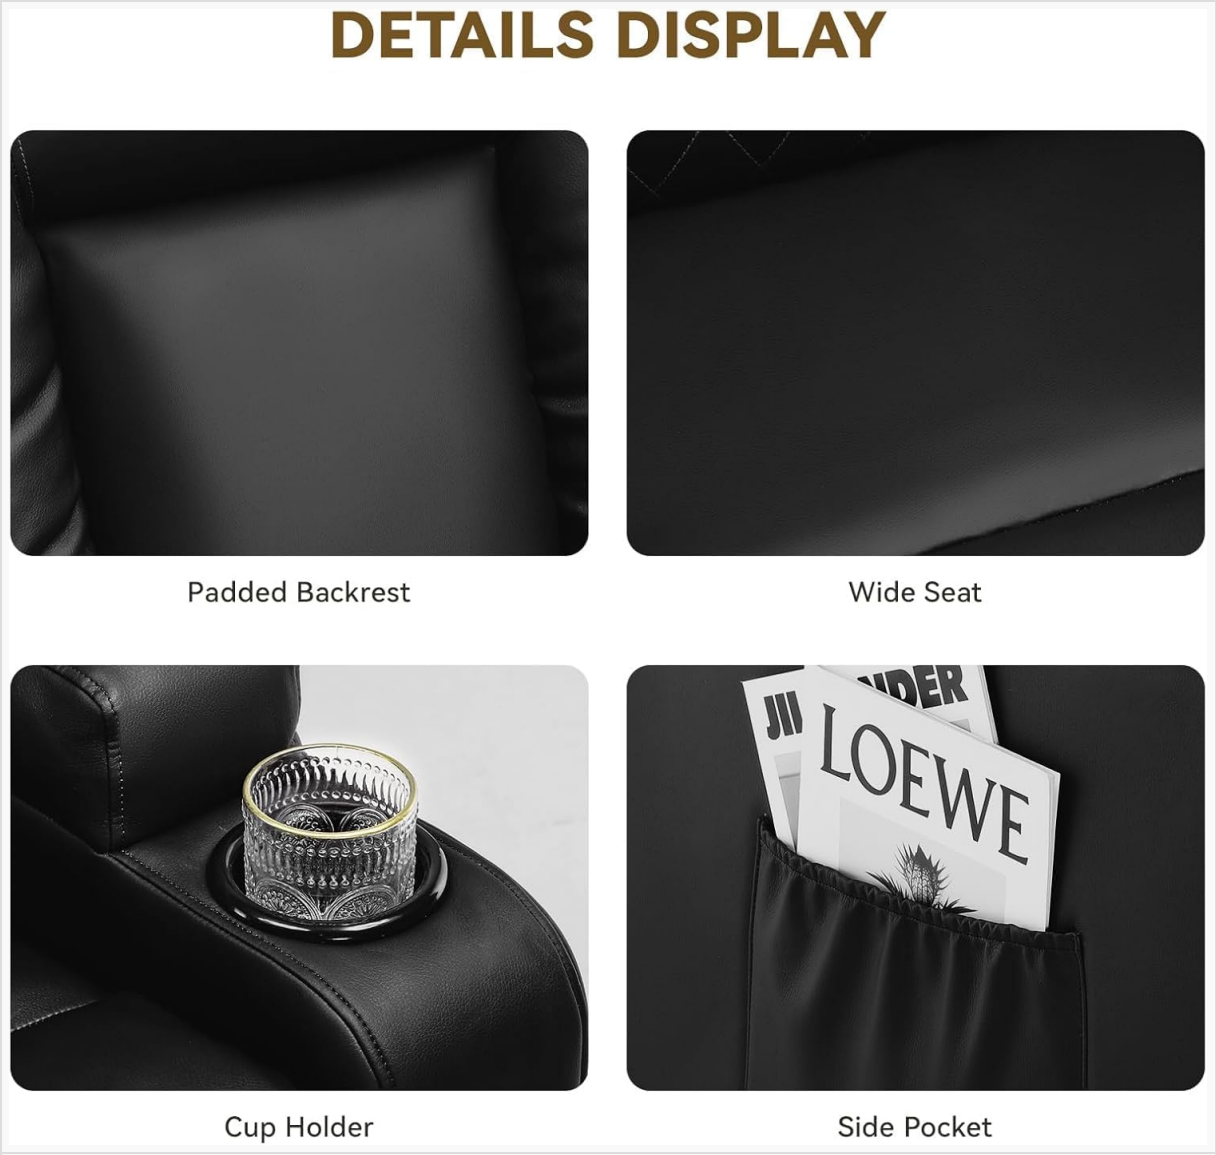


Image: Detailed view of the chair's convenience features: padded backrest, wide seat, cup holders, and side pockets.

Maintenance

- **Cleaning:** Wipe the chair's surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Spills:** Blot spills immediately with a clean, dry cloth.
- **Mechanism:** Periodically check all bolts and screws to ensure they are tight. Lubricate moving parts of the reclining mechanism if necessary, using a silicone-based lubricant.
- **Electrical Components:** Keep electrical components dry and free from dust. Disconnect power before cleaning.

Troubleshooting

Problem	Possible Cause	Solution
Chair does not recline smoothly.	Mechanism obstruction or lack of lubrication.	Check for obstructions. Apply silicone lubricant to moving parts.

Problem	Possible Cause	Solution
Massage/Heat function not working.	Power cord disconnected, remote control issue, or internal wiring.	Ensure power cord is securely plugged in. Check remote control batteries (if applicable) or connection. Contact customer support if issue persists.
Chair feels unstable or wobbly.	Loose assembly bolts.	Inspect and tighten all assembly bolts and screws.

Specifications



Image: Detailed dimensions of the recliner chair.

Brand: COMHOMA

Model Name: Recliner Chair

Item Model Number: DF-H7134-BLK-N1

Color: Black

Product Dimensions (Upright): 37.4"D x 35.8"W x 40.94"H

Seat Depth: 20.07 inches

Item Weight: 91.5 pounds

Material: Foam (Fill Material)

Special Features: Adjustable Backrest, Cup Holders, Reclining, Side Pocket, Massage, Heat

Reclining Position Count: 1

UPC: 810170306143

Assembly Required: Yes

Warranty and Support

For warranty information or technical support, please refer to the documentation included with your purchase or contact COMHOMA customer service directly. You can often find support contact details on the manufacturer's official website or through your retailer.

Customer Support: For assistance, please visit the COMHOMA Store on Amazon or contact your point of purchase.