Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Gizoon AP58-R

Gizoon Kitchen Storage Cabinet with Adjustable Shelf

MODEL: AP58-R

Introduction

Thank you for choosing the Gizoon Kitchen Storage Cabinet. This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your new cabinet. Please read this manual thoroughly before beginning assembly or use to ensure proper installation and safe operation. Keep this manual for future reference.

Safety Information

Please observe the following safety precautions to prevent injury or damage to the product:

- **Packaging Warning:** The packaging may contain fiberglass. Wear gloves and a mask when opening the package, and consider opening it outdoors to minimize exposure. Clean up any fibers thoroughly.
- Always assemble the cabinet on a clean, flat, and soft surface to prevent scratches.
- Ensure all parts are securely fastened before use. Do not overtighten screws.
- Install the provided anti-tipping device to secure the cabinet to a wall, especially in households with children or pets, to prevent accidental tipping.
- Do not exceed the maximum weight limit of 80 pounds for the cabinet.
- Keep small parts and packaging materials away from children.

Package Contents

Your Gizoon Kitchen Storage Cabinet package includes all necessary components and hardware for assembly. Please verify that all parts are present and undamaged before beginning assembly. Refer to the included parts list in your physical manual for specific component identification.



Image: Product Dimensions. This diagram illustrates the overall dimensions of the cabinet (30" W x 15.6" D x 33.3" H) and internal measurements for the drawer and adjustable shelf compartments.

Assembly Instructions

Before You Begin

- **Recommended Personnel:** 1-2 people.
- **Estimated Assembly Time:** 1-2 hours (time may vary based on experience).
- **Tools Required:** A screwdriver (included). An electric screwdriver can be used for efficiency (not included).
- **Preparation:** Lay out all components and hardware. Take inventory to ensure all parts are present.
- **Safety:** Wear gloves to prevent injury during assembly.

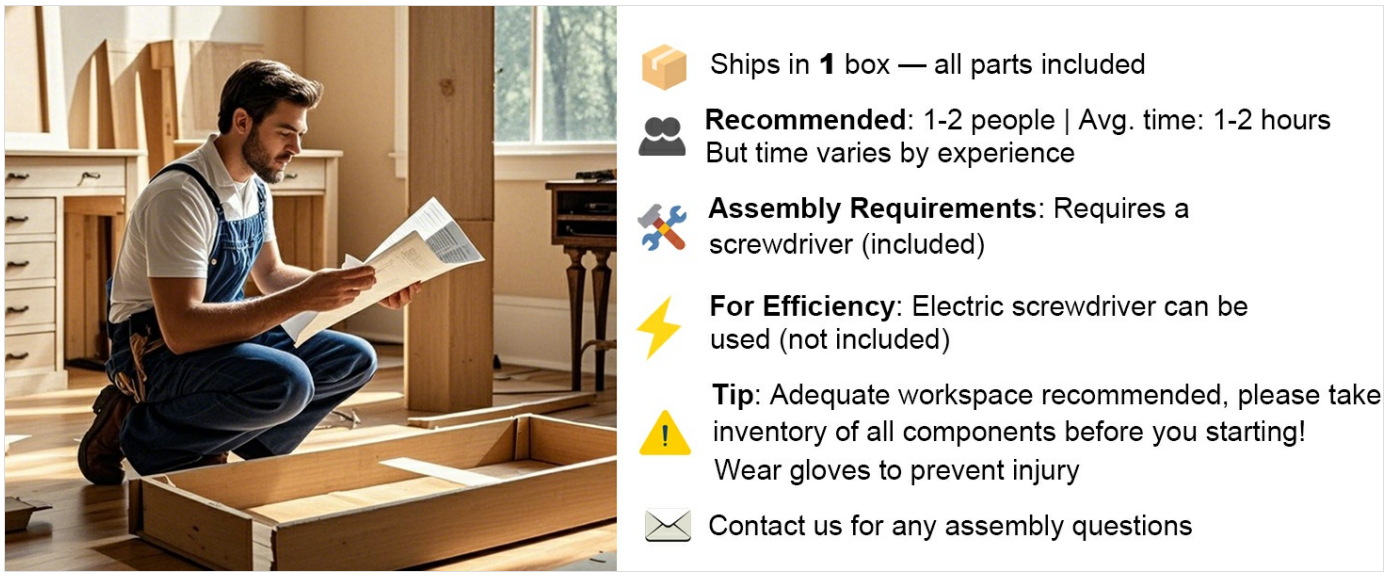


Image: Assembly Preparation. This image shows a person reviewing assembly instructions, highlighting the need for adequate workspace and checking components.

Step-by-Step Assembly

Follow the numbered steps in your physical instruction manual for precise assembly. The general sequence is as follows:

1. **Assemble the Base:** Attach the legs and bottom panel according to the diagrams.
2. **Attach Side Panels:** Secure the side panels to the base.
3. **Install Back Panel:** Fasten the back panel to the frame.
4. **Assemble the Drawer:** Construct the drawer box and install the smooth sliding rails. Insert the drawer into its designated slot.
5. **Install Doors:** Attach the doors using the provided hinges. Ensure the flexible magnetic door catches are installed for secure closure. Attach the stable metal handles.
6. **Insert Adjustable Shelf:** Place the adjustable shelf at your desired height within the cabinet.
7. **Install Anti-Tipping Device:** Secure the cabinet to the wall using the safety anti-tipping device. This is a critical safety step.



Image: Key Features. This image details the stable metal handles, flexible magnetic door catches, smooth sliding drawer rails, and the safety anti-tipping device.



Image: Adjustable Shelf. This diagram shows the flexibility of the internal shelf, allowing for customization of storage space.

Operating Instructions

Your Gizoon Kitchen Storage Cabinet is designed for versatile storage in various rooms.

- **Drawer Usage:** The large drawer operates on smooth sliding rails, ideal for storing smaller items like cutlery, napkins, or coffee pods.
- **Cabinet Storage:** The two-door cabinet features an adjustable shelf. You can reposition the shelf to accommodate items of different heights, such as small appliances, dishes, or pantry staples.
- **Top Surface:** The wide tabletop provides a stable surface for appliances like microwaves, toasters, coffee makers, or for displaying decorative items.



Image: Cabinet Interior. This image shows the cabinet with its doors open, demonstrating the adjustable shelf and potential storage arrangements for kitchen items.



Image: Drawer Storage. This close-up shows the spacious drawer organized with various kitchen essentials.

Care and Maintenance

Proper care will extend the life and appearance of your cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using abrasive cleaners, harsh chemicals, or solvents, as these can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining, especially on the wood grain tabletop.
- **Dusting:** Regularly dust with a dry, soft cloth.
- **Inspection:** Periodically check all hardware and connections to ensure they remain tight. Retighten if necessary.

Troubleshooting

If you encounter any issues during assembly or use, refer to the following common solutions:

Issue	Solution
Missing or Damaged Parts	Contact Gizoon customer support immediately with your purchase details and a description of the missing/damaged part.
Difficulty Assembling / Parts Don't Fit	Review the instruction manual carefully, paying close attention to part orientation. Some parts (e.g., 16 and 17) may require specific alignment. Ensure you are using the correct hardware for each step. Do not force parts together.
Drawer Does Not Slide Smoothly	Check that the drawer rails are installed correctly and are free of obstructions. Ensure all screws on the rails are tightened.
Cabinet Doors Do Not Align or Close Properly	Adjust the hinges on the doors. Most hinges allow for minor adjustments to align the doors. Ensure the magnetic catches are properly installed and aligned.
Cabinet Feels Unstable	Ensure all assembly screws are tightened. Verify that the cabinet is placed on a level surface. Install the anti-tipping device securely to a wall.

Product Specifications

Feature	Detail
Brand	Gizoon
Model Name	Storage cabinet (AP58-R)
Color	Retro
Product Dimensions	15.6"D x 30"W x 33.3"H
Item Weight	57.2 Pounds
Material	Wood
Weight Limit	80 Pounds
Number of Shelves	1 (Adjustable)
Included Components	Drawer, Shelves
Mounting Type	Floor Mount (with anti-tip device for wall attachment)
Assembly Required	Yes

Warranty and Customer Support

Gizoon is committed to providing quality products and service. If you have any problems during installation, use, or if you require assistance with missing or damaged parts, please do not hesitate to contact us. We aim to resolve any issues promptly.
For support, please contact Gizoon Direct through your purchase platform or refer to the contact information provided in

your product packaging.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F6YQT4ZR

More documents and user manuals: **https://manuals.plus/**