Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Bellemave FST00218-XL-AK1

Bellemave Twin XL Over Twin XL Metal Bunk Bed Instruction Manual

Model: FST00218-XL-AK1 | Brand: Bellemave

Introduction

This instruction manual provides essential information for the safe assembly, operation, and maintenance of your Bellemave Twin XL Over Twin XL Metal Bunk Bed. Please read this manual thoroughly before assembly and retain it for future reference. Ensure all components are present and undamaged before beginning assembly.

Safety Information

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always use the guardrails on the upper bunk to prevent falls.
- Ensure the ladder is securely attached and stable before use.
- The top bunk is not suitable for children under 6 years of age.
- Periodically check and ensure that all connectors are tight.
- Do not allow more than one person on the upper bunk at any time.
- Use only mattresses that are 74-75 inches long and 37.5-38.5 inches wide for Twin XL beds. The maximum mattress thickness for the upper bunk should not exceed 6 inches to ensure adequate guardrail height.
- Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hooks, belts, or jump ropes.
- Keep these instructions for future reference.

Original Safety Information: Always use the guardrails and be cautious when using the top bunk to prevent falls.

Product Features

- **Durable Metal Construction:** Made from strong, heavy-duty metal with an electrostatic powder coating for durability, environmental protection, and resistance to fading.
- **Noise-Free Design:** Features plastic stoppers that firmly fix the slats, preventing noise from moving slats and ensuring a quiet sleep environment.
- **Under-Bed Storage:** Provides approximately 9.8 inches of height space under the bottom bed, allowing for efficient use of space and tidier room organization.
- **Enhanced Safety:** Equipped with 40 metal slats for strong support and guardrails around the upper bed to enhance safety and prevent accidental falls. The bottom bed includes thicker legs for reinforcement.

- **Easy Assembly:** Comes with detailed instructions and numbered parts for convenient step-by-step assembly. The product is shipped in one box.

Specifications

Attribute	Detail
Brand	Bellemave
Model Number	FST00218-XL-AK1
Size	Twin XL over Twin XL
Product Dimensions	82.7"L x 41.7"W x 64.6"H
Color	White Bunk
Finish Type	Lacquered
Included Components	Guardrails, Ladders, Slat
Compatible Mattress Size	Twin XL
Assembly Required	Yes
Storage Options	Under Bed Storage
Item Weight	37 pounds
UPC	197793825030

Setup and Assembly

Your Bellemave bunk bed is designed for straightforward assembly. It comes with all necessary parts and detailed, numbered instructions. Please follow the steps carefully to ensure proper and safe construction.

1. **Unpack and Identify Parts:** Carefully unpack all components and lay them out. Refer to the included parts list to identify each piece and ensure nothing is missing or damaged.
2. **Review Instructions:** Read the entire assembly manual provided in the box before starting. Pay close attention to diagrams and safety warnings.
3. **Assemble Base Frames:** Begin by assembling the base frames for both the upper and lower bunks according to the instructions. Ensure all bolts are finger-tightened initially.
4. **Attach Support Slats:** Secure the metal slats to both bed frames. The plastic stoppers should be used to fix the slats firmly, as described in the instructions, to prevent noise.
5. **Connect Bunk Sections:** Carefully lift and connect the upper bunk frame to the lower bunk frame using the designated connectors. It is recommended to have at least two adults for this step.
6. **Install Guardrails and Ladder:** Attach the guardrails to the upper bunk and secure the ladder in its designated position. Ensure all connections are firm.
7. **Final Tightening:** Once all parts are assembled, go back and securely tighten all bolts and screws using the provided tools. Do not overtighten.



Image: The Bellemave Twin XL Over Twin XL Metal Bunk Bed frame, showcasing its robust metal construction and integrated ladder. This image provides a clear view of the bed's structural components before mattresses are added.

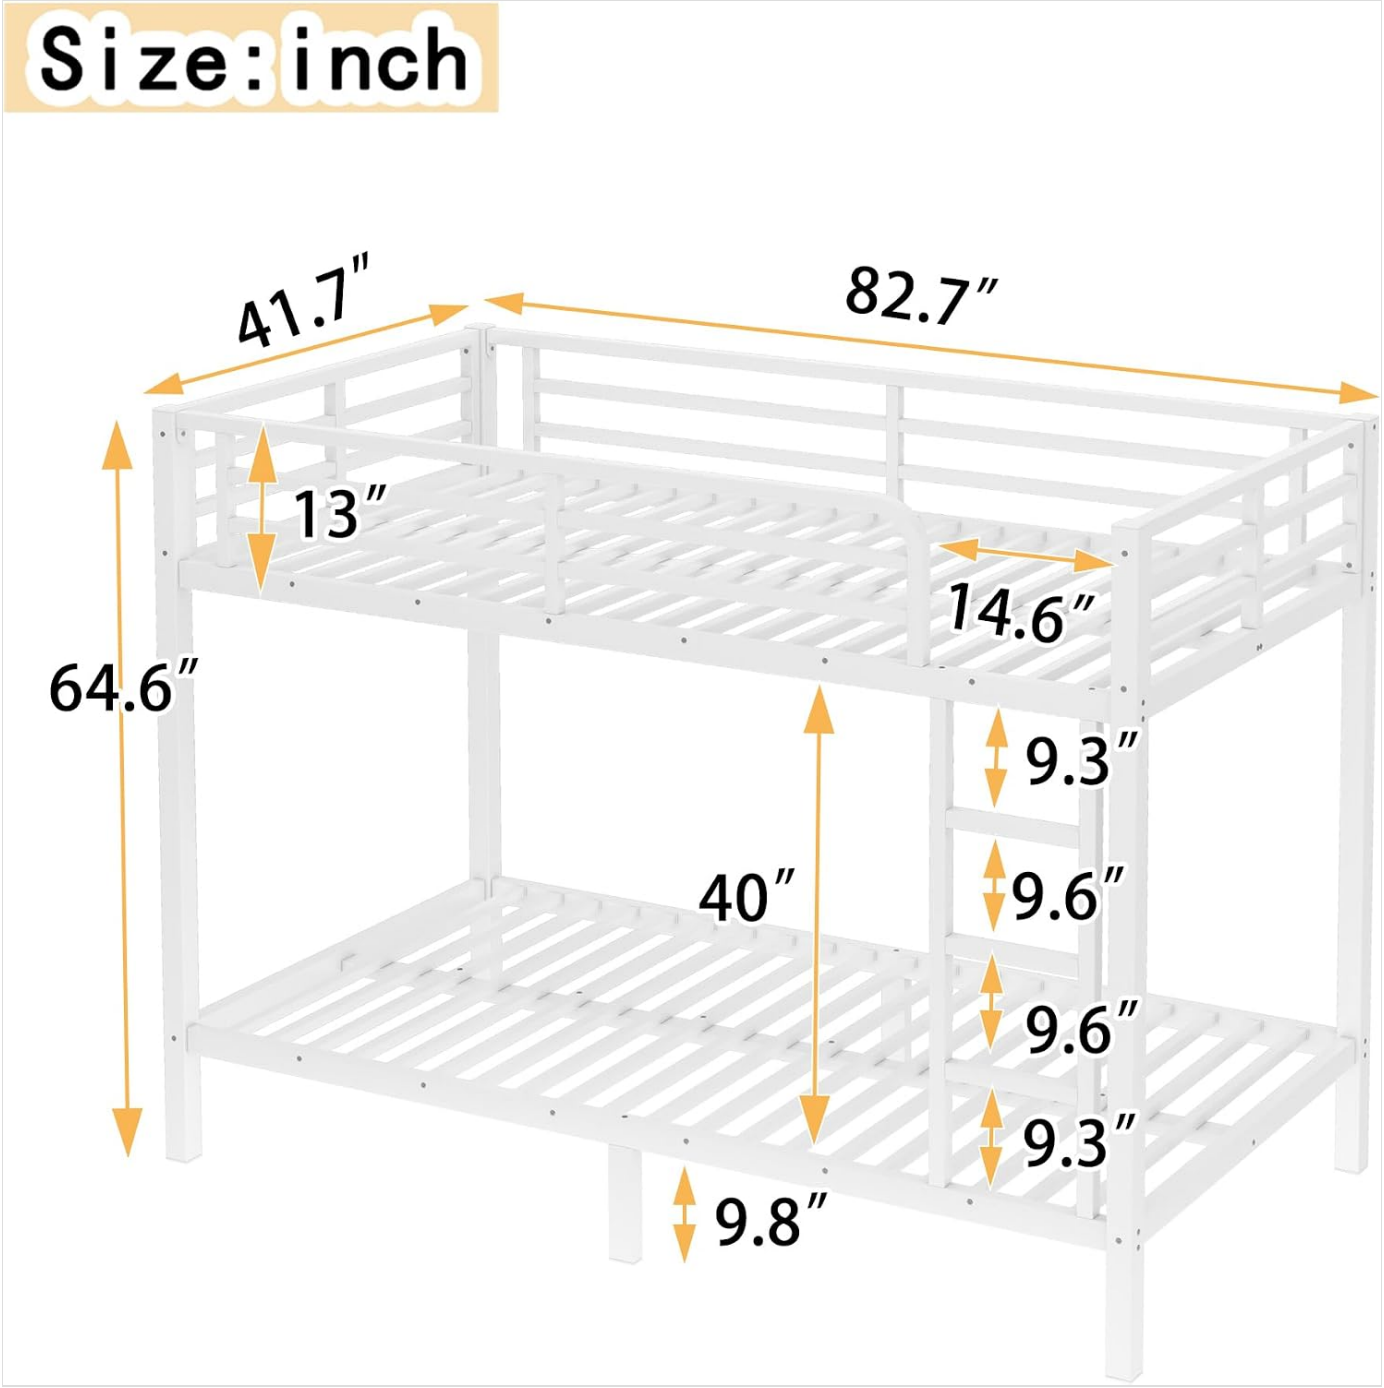


Image: Detailed dimensions of the Bellemave Twin XL Over Twin XL Metal Bunk Bed, including overall length, width, height, and spacing between bunks. This diagram is crucial for planning room placement and mattress selection.



Image: A close-up view of the integrated ladder and guardrails on the Bellemave Twin XL Over Twin XL Metal Bunk Bed. This highlights the safety features designed to prevent falls from the upper bunk.

Operating Instructions

Once assembled, your Bellemave bunk bed is ready for use. Observe the following guidelines for safe operation:

- **Mattress Placement:** Place Twin XL mattresses on both the upper and lower bunks. Ensure the mattress on the upper bunk does not exceed the recommended thickness to maintain adequate guardrail height.
- **Ladder Use:** Always use the provided ladder for accessing the upper bunk. Face the ladder when climbing up or down.
- **Weight Capacity:** Adhere to the maximum weight capacity for each bunk as specified in the assembly instructions (not provided in JSON, so general advice). Overloading can compromise structural integrity and safety.
- **Under-Bed Storage:** Utilize the space beneath the lower bunk for storage. Ensure items stored do not obstruct airflow or create a tripping hazard.

Maintenance

Regular maintenance will help prolong the life and ensure the safety of your Bellemave bunk bed.

- **Cleaning:** The metal frame is designed to be easy to clean. Wipe surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners that could damage the lacquered finish.
- **Hardware Check:** Periodically (e.g., every 3-6 months) inspect all bolts, screws, and connections. Tighten any that have become loose. Do not overtighten.
- **Slat Inspection:** Ensure all metal slats are securely in place and not bent or damaged. The plastic stoppers should remain functional to prevent noise.

Troubleshooting

If you encounter any issues with your bunk bed, consider the following common solutions:

- **Squeaking or Noise:**
  - Check all bolts and screws and tighten any loose connections.
  - Ensure the plastic stoppers are correctly installed and holding the slats firmly.
  - Verify that the mattress is properly seated on the slats.
- **Instability:**
  - Confirm that all structural components are correctly assembled and all hardware is fully tightened.
  - Ensure the bed is placed on a flat, level surface.
- **Missing or Damaged Parts:** If you find any parts missing or damaged upon unpacking, do not proceed with assembly. Contact customer support immediately.

Warranty and Support

For any questions, concerns, or to report missing/damaged parts, please contact Bellemave customer support. Refer to your purchase documentation for specific warranty details. Keep your proof of purchase for warranty claims.
While protection plans are available from third-party providers, direct product support for manufacturing defects or issues related to the bed itself should be directed to the manufacturer, Bellemave.
You can often find contact information on the Bellemave store page on Amazon or through the documentation included with your product.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F7HDQWTP

More documents and user manuals: **https://manuals.plus/**