Conciseer CS5008-MBK

Conciseer Outdoor Ceiling Fan with Light (Model CS5008-MBK) Instruction Manual

1. Introduction

Thank you for choosing the Conciseer Outdoor Ceiling Fan with Light, Model CS5008-MBK. This manual provides essential information for the safe installation, operation, and maintenance of your new fan. Please read these instructions thoroughly before use and retain them for future reference.

Important Safety Information

- Always disconnect power before installation, cleaning, or maintenance.
- Ensure the mounting structure can support the fan's weight.
- This fan is designed for outdoor use in covered areas (IP55 rated). Do not expose directly to heavy rain or standing water.
- Keep hands, hair, and clothing clear of moving fan blades.
- Use only the provided remote control or compatible smartphone application for operation.

2. Product Overview

The Conciseer Outdoor Ceiling Fan with Light is a 20-inch, all-weather, plug-in hanging fan designed for patios, gazebos, pergolas, and porches. It features smart APP and remote control, 3 CCT dimmable LED lighting, and a durable caged design.

Key Features:

- **All-Weather Durability:** IP55 waterproof rating and rust-resistant ABS blades for outdoor use.
- **Smart Dual Control:** Operate via included remote or smartphone APP (2.4GHz Wi-Fi required).
- **Customizable Ambiance:** Integrated 18W LED light with 3 color temperatures (3000K-6000K) and dimmable brightness.
- **Plug-in Setup:** No hardwiring needed; plugs into a standard outlet.
- **Safe & Stylish Design:** Protective metal cage and enclosed motor.
- **Reversible DC Motor:** Allows for both summer (downward airflow) and winter (upward airflow) modes.

Components:

Familiarize yourself with the fan's main components:

- Fan Motor Assembly with Integrated LED Light
- Fan Blades (7 ABS blades)
- Protective Metal Cage
- Downrod (available in 7.8 inch and 13 inch lengths)
- Reinforced Steel Hook
- Power Cord with Plug (up to 59 inches adjustable length)
- Remote Control

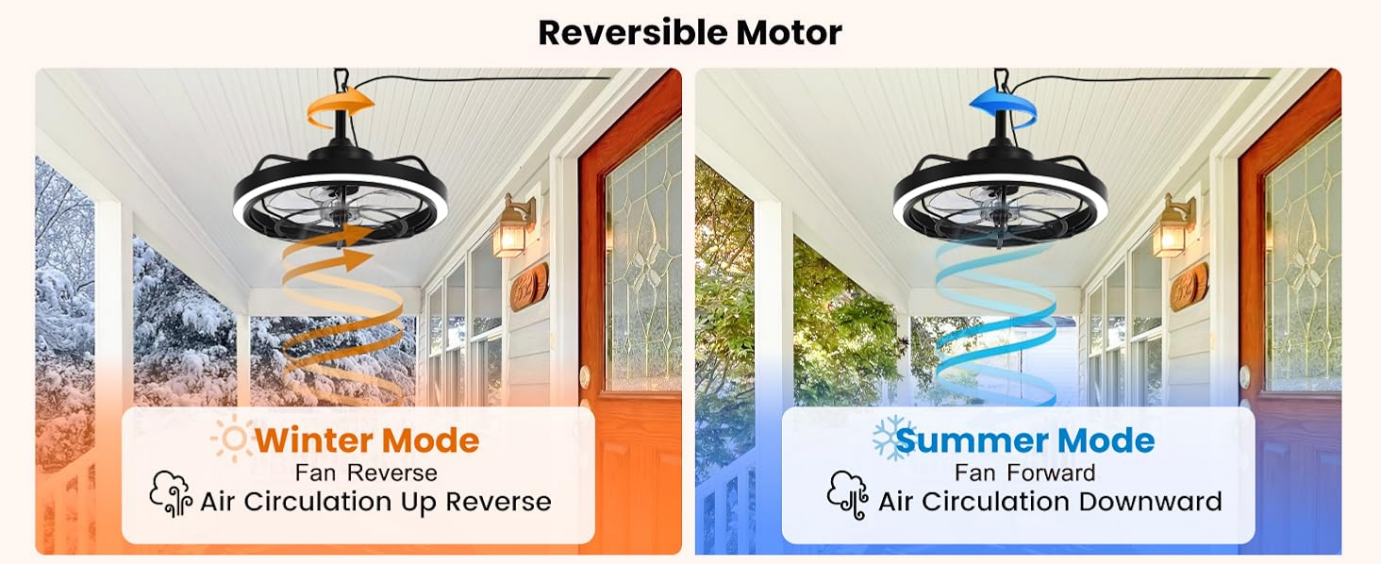


Image: Overview of the fan's dimensions and key features, including remote control, 6 wind speeds, stepless dimmable light, reversible motor, waterproof rating, timing function, 3 color temperatures, and ABS blades.

3. Specifications

Feature	Specification
Brand	Conciseer
Model Number	CS5008-MBK
Color	Outdoor Black
Product Dimensions	22.5"D x 22.5"W x 11.6"H
Item Weight	5.56 kg
Power Source	Corded Electric
Wattage	18 watts (LED Light)
Number of Speeds	3 (Remote/APP offers 6 levels)
Control Method	Remote-Controlled, Smart APP
Indoor/Outdoor Usage	Outdoor (IP55 Waterproof)
Material	Acrylonitrile Butadiene Styrene (ABS Blades)
Downrod Length	59 inches (adjustable cord length)

Light Color Temperature	3000K-6000K (3 CCT)

4. Setup and Installation

This fan is designed for easy plug-in installation. Follow these steps carefully:

Installation Steps:

1. **Prepare Mounting Surface:** For wood roofs, use the provided screw to drive into the ceiling. For cement roofs, install the coupling cover onto the downrod.
2. **Install Downrod:** Install the downrod pin and tighten the screws on the yoke.
3. **Loosen Motor Screws:** Loosen the two screws on the motor assembly.
4. **Secure Yoke Cover:** The yoke cover passes through the downrod, and the cross pin and clamp pin are fixed to the boom with the screw tightened.
5. **Attach Hook:** Attach the hook on the motor assembly's downrod to the installation disk.
6. **Route Power Cord:** Feed the power cord through the cable-hook and positively latch the cable-hook onto the downrod.
7. **Connect Power:** As illustrated, insert the power cord of the motor assembly into an electrical socket.



Image: Step-by-step visual guide for installing the ceiling fan on both wood and cement roofs, detailing how to secure the downrod and connect the power.

Installation Video:

Your browser does not support the video tag.

Video: Official installation guide for the CS5008 Ceiling Fan, demonstrating the assembly and mounting process.

5. Operating Instructions

Your Conciseer ceiling fan can be operated using the included remote control or a compatible smartphone application.

Remote Control Operation:

The remote control allows for full functionality of the fan and light. Ensure batteries are correctly inserted.



Image: Detailed layout of the remote control with labels for each button's function, including fan on/off, light on/off, speed control, dimmer, temperature color adjustment, timer, and mute.

- **ALL OFF:** Turns off both fan and light.
- **Fan ON/OFF:** Toggles the fan power.
- **Speed Control (+/-):** Adjusts fan speed through 6 levels.
- **Light ON/OFF (Matching Code):** Toggles the light power. May require pairing if not responsive.
- **Dimmer Control (+/-):** Adjusts light brightness (stepless dimmable from 10% to 100%).
- **Temperature Color Upwards/Downwards:** Cycles through 3 color temperatures (3000K Warm White, 4000K Natural Light, 6000K Cold White Light).
- **Fan Forward (Summer Mode):** Sets fan to circulate air downwards for cooling.
- **Fan Reverse (Winter Mode):** Sets fan to circulate air upwards for warmth distribution.
- **Timer (2H/4H/6H):** Sets the fan/light to turn off automatically after 2, 4, or 6 hours.
- **MUTE:** Silences remote beeps (if applicable).

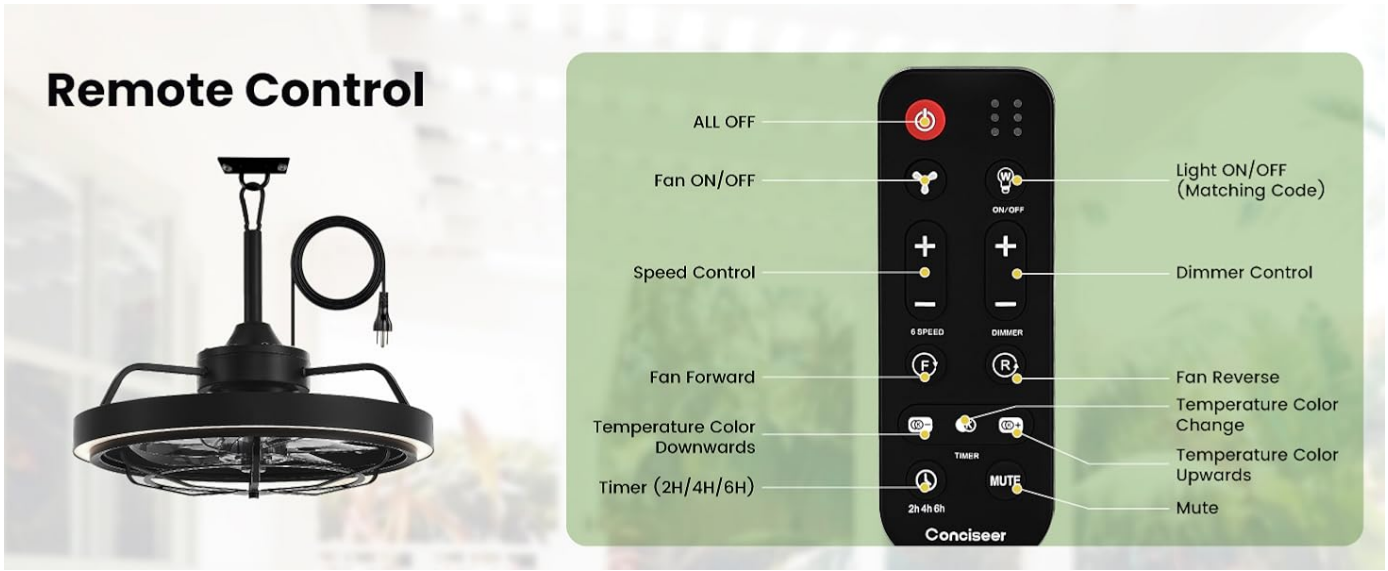


Image: Visual explanation of the reversible DC motor, showing downward airflow for 'Summer Mode' and upward airflow for 'Winter Mode' to optimize air circulation.

Smart APP Control:

For smartphone control, download the compatible APP (refer to product packaging or manufacturer website for specific APP name). Ensure your smartphone is connected to a 2.4GHz Wi-Fi network during setup. The APP provides similar control over fan speeds, light settings, and timing functions as the remote.

6. Maintenance

Regular maintenance ensures optimal performance and longevity of your Conciseer Outdoor Ceiling Fan.

- **Cleaning:** Wipe the fan and light with a soft, damp cloth. Do not use abrasive cleaners or solvents that could damage the finish or electrical components. Ensure the fan is unplugged before cleaning.
- **Blade Inspection:** Periodically check fan blades for any signs of damage or imbalance.
- **Electrical Connections:** Ensure the power cord and plug remain in good condition and are securely connected.
- **Seasonal Storage:** If storing the fan for extended periods, clean it thoroughly and store in a dry, protected area.

7. Troubleshooting

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power, remote control issues.	Check if the fan is plugged in securely. Ensure the power outlet is functional. Replace remote control batteries. Re-pair the remote control if necessary (refer to remote instructions).
Light does not turn on or is dim.	Light setting, power issue.	Check light settings on remote/APP. Ensure the dimmer is not set to minimum. Verify power connection.
Remote control not working.	Dead batteries, remote not paired.	Replace batteries. Follow the remote control pairing instructions (usually involves pressing a specific button combination within a short time after powering on the fan).
Fan wobbles or makes unusual noise.	Loose mounting, unbalanced blades.	Ensure all mounting screws are tight. Check if blades are securely attached and undamaged.
APP control not connecting.	Wi-Fi issues, incorrect setup.	Ensure your Wi-Fi is 2.4GHz. Restart your router and the fan. Re-attempt APP pairing process.

If problems persist after attempting these solutions, please contact customer support.

8. Warranty and Support

Conciseer products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your product or visit the official Conciseer website. If you require technical assistance, have questions about installation, or need to report a defect, please contact Conciseer customer support through the contact information provided on the product packaging or the official brand website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What is the voltage requirement (110V or 220V) for the Conciseer CS5008-MBK Outdoor Ceiling Fan?

The provided manual for the Conciseer CS5008-MBK Outdoor Ceiling Fan states that it has a "Plug-in Setup: No hardwiring needed; plugs into a standard outlet." While it doesn't explicitly specify 110V or 220V, the...

Read full answer