tectake 406158

tectake Taija Outdoor Vertical Awning

Model: 406158

Instruction Manual

1. Introduction

The tectake Taija outdoor vertical awning is designed to provide sun protection and privacy for balconies, terraces, or gardens. Its robust construction and user-friendly features ensure a comfortable outdoor experience. This manual provides essential information for the safe assembly, operation, and maintenance of your awning.



Image 1: The tectake Taija awning installed on a balcony, offering privacy and shade. It highlights optimal protection against wind, sun, and noise, individual length adjustment, quick assembly via clamping mechanism, robust water-repellent polyester with UV 50+ protection, a crank drive system for easy operation, and 100% stability from non-slip plastic caps.

2. Safety Information

Please read all safety warnings and instructions carefully before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- This product requires assembly. Exercise caution when handling components, as some parts may have sharp edges.
- The awning fabric extends and retracts. Operate the crank handle carefully to avoid pinching or sudden movements.
- This awning is designed for outdoor use. It may be exposed to wind. Ensure the awning is properly secured according to the assembly instructions to prevent it from falling or causing damage, especially in windy conditions.
- Do not hang heavy objects on the awning structure.
- Keep children and pets away from the awning during assembly and operation.
- Retract the awning during strong winds, heavy rain, or snow to prevent damage.

3. Package Contents

Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- 1 x Awning with crank handle
- Mounting hardware
- Assembly instructions

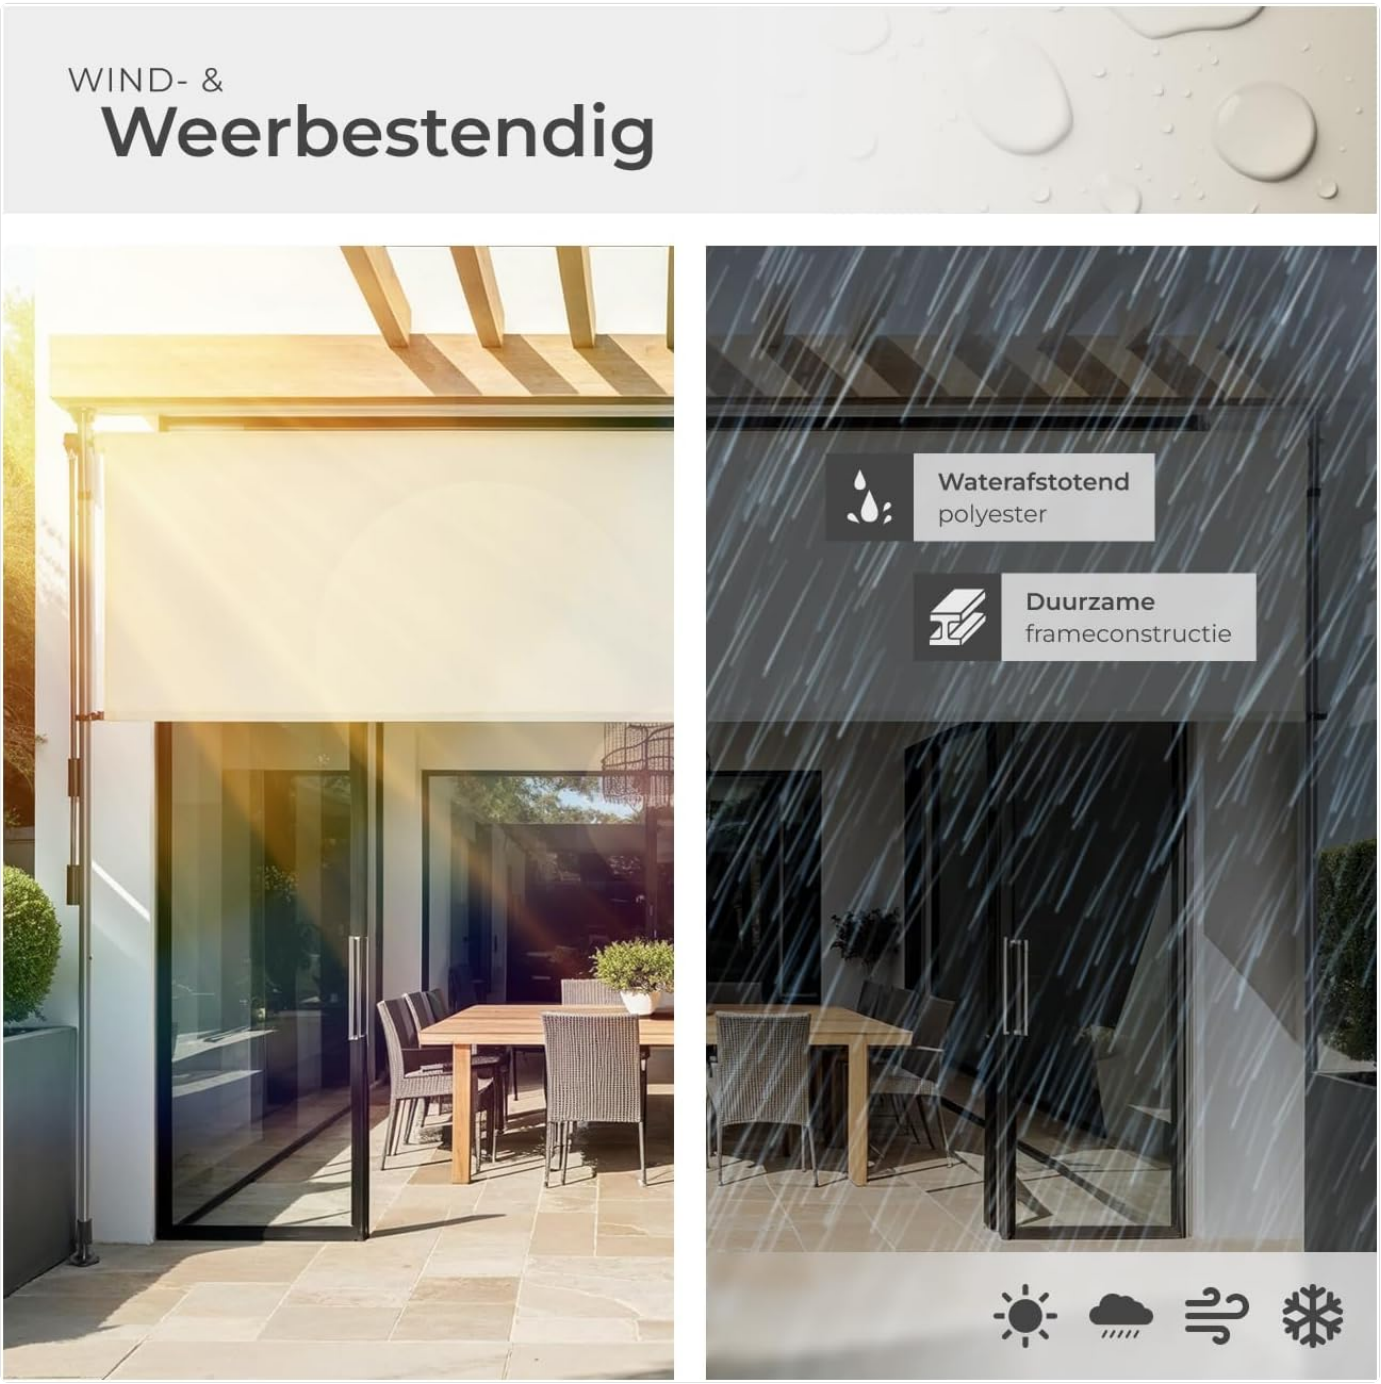


Image 2: Product information diagram detailing the dimensions of the awning, including total dimensions (208 x 7 x 216-310 cm), awning fabric (192.5 x 10-275 cm), and crank length (113 cm). It also lists technical details like UV protection 50+, weight (approx. 7 kg), and materials (powder-coated steel, 100% polyester, aluminum, polypropylene), along with the package contents.

4. Setup Instructions

The tectake Taija awning features a practical clamping system for quick and drill-free installation. Follow these steps for assembly:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out. Check against the package contents list.
2. **Assemble Frame:** Connect the aluminum and steel elements of the frame as indicated in the detailed assembly guide provided in the package. Ensure all connections are secure.
3. **Attach Awning Fabric:** Secure the awning fabric to the roller mechanism and the bottom bar according to the instructions.
4. **Position the Awning:** Place the assembled awning in the desired location. The telescopic rods allow for height adjustment.
5. **Adjust Telescopic Rods:** Extend the telescopic rods to fit snugly between the floor and ceiling (or balcony railing and ceiling). Use the fine adjustment on the plastic screw feet to achieve an absolutely secure and stable stand. Ensure the awning is level.
6. **Install Crank Handle:** Attach the crank handle to the designated mechanism for operation.



Image 3: This image demonstrates the variable use of the awning. It shows the awning extending downwards and highlights the materials

used: aluminum and powder-coated steel elements for the frame, and PA-coated polyester fabric for the awning itself.

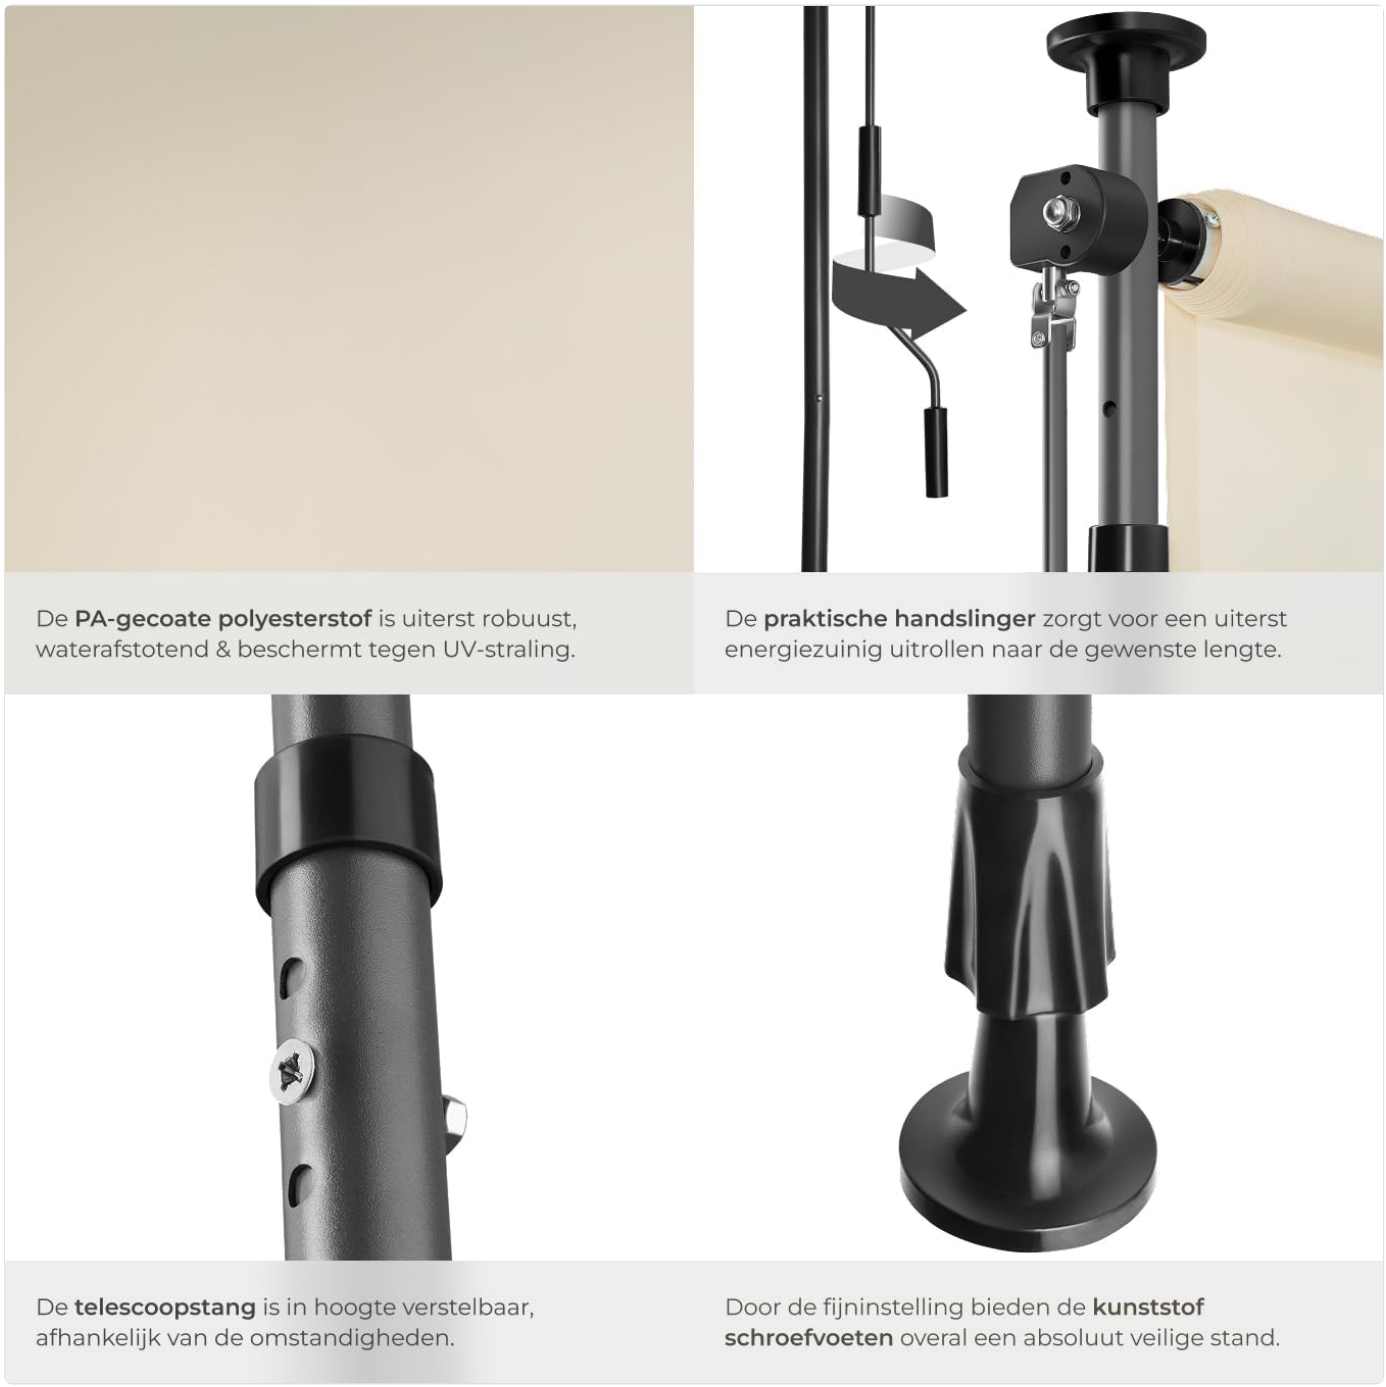


Image 4: Detailed views of the awning's features. It shows the robust, water-repellent, and UV-protective PA-coated polyester fabric. The practical hand crank is shown, ensuring easy extension. The height-adjustable telescopic rod is visible, allowing for flexible positioning. Finally, the plastic screw feet are highlighted for their fine adjustment capability, providing a secure stand.

5. Operating Instructions

The Taija awning is operated manually using the integrated crank handle.

- **To Extend the Awning:** Turn the crank handle clockwise. The awning fabric will unroll from the top, extending downwards.
- **To Retract the Awning:** Turn the crank handle counter-clockwise. The awning fabric will roll up, retracting upwards.
- Adjust the awning to your desired length for optimal sun protection or privacy.

6. Maintenance

Regular maintenance will prolong the life and appearance of your tectake Taija awning.

- **Cleaning the Fabric:** The polyester fabric is water-repellent and easy to clean. Use a soft brush or cloth with mild soap and water to remove dirt. Rinse thoroughly with clean water and allow to air dry completely before retracting the awning for storage. Do not use harsh chemicals or abrasive cleaners.
- **Frame Care:** The powder-coated steel frame is durable. Wipe down the frame with a damp cloth periodically to remove dust and debris.
- **Inspection:** Periodically check all screws, bolts, and connections to ensure they are tight and secure. Inspect the fabric for any signs of wear or damage.
- **Storage:** If storing the awning for an extended period, ensure it is clean and completely dry. Retract the awning fully and store it in a dry, protected area to prevent mildew and damage.

tectake garden

Productinformatie

AFMETINGEN

Totale afmetingen
208 x 7 x 216 - 310 cm

Luifeldoek
192,5 x 275 cm

Lengte handslinger
113 cm

Afmetingen zijn bij benadering

TECHNISCHE DETAILS

UV-bescherming 50+
Gewicht ca. 7 kg
Materiaal gepoedercoat aluminium, staal, 100% polyester met polyamidecoating, polypropyleen

INHOUD

Zonnescherm met handslinger
Montagemateriaal
Montagehandleiding

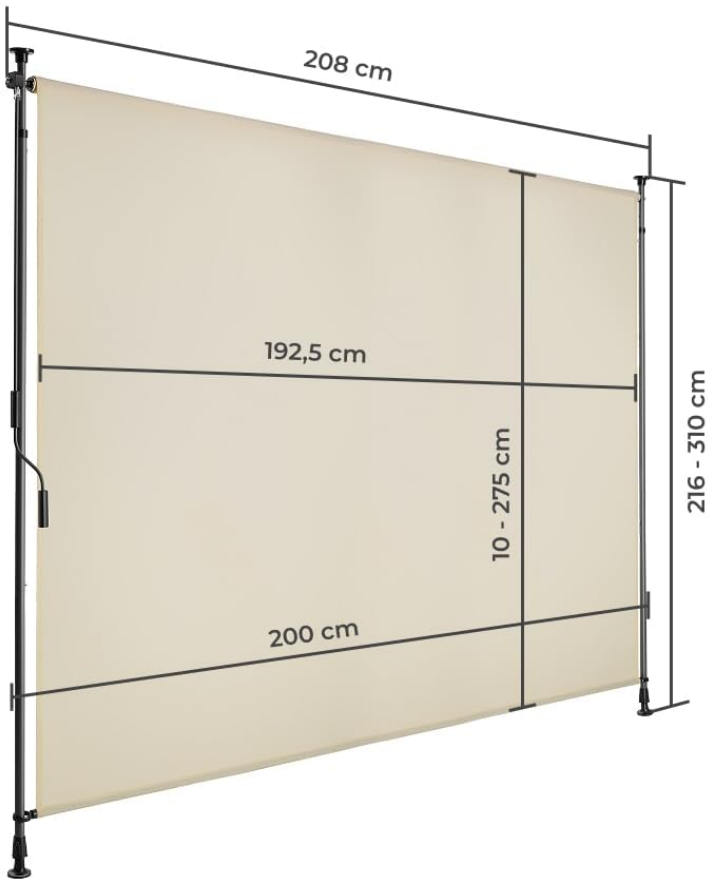


Image 5: This image highlights the awning's wind and weather resistance. One panel shows the awning providing shade on a sunny day, while the other depicts it during rain, emphasizing its water-repellent polyester fabric and durable frame construction.

7. Troubleshooting

If you encounter issues with your awning, refer to the following common problems and solutions:

- **Awning does not extend/retract smoothly:**
  - Check for any obstructions in the path of the fabric or the crank mechanism.
  - Ensure the crank handle is properly engaged.
  - Inspect the fabric for wrinkles or folds that might be catching.
- **Awning feels unstable:**
  - Verify that the telescopic rods are fully extended and securely clamped.
  - Ensure the plastic screw feet are tightly adjusted to create tension between the floor and ceiling.
  - Check that the mounting surface is flat and stable.
- **Fabric appears dirty or stained:**
  - Refer to the "Maintenance" section for cleaning instructions.

If problems persist, contact tectake customer support for assistance.

8. Specifications

Model Number	406158
Total Dimensions (LxDxH)	Approx. 208 x 7 x 216 - 310 cm
Awning Fabric Dimensions (LxH)	Approx. 192.5 x 10 - 275 cm
UV Protection	50+
Crank Length	Approx. 113 cm
Weight	Approx. 7 kg
Materials	Powder-coated steel, 100% polyester, aluminum, polypropylene
Operation Mode	Manual
Color	Beige

© 2026 tectake. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question