PAXA Clipbuds703

PAXA Clip On Earbuds User Manual

Model: Clipbuds703

Brand: PAXA

Introduction

The PAXA Clipbuds7 are open-ear wireless Bluetooth 5.4 earbuds designed for comfort and high-fidelity audio. Featuring an ultra-lightweight design, dual LED battery display, and touch controls, they are suitable for sports, fitness, and daily use. This manual provides detailed instructions for setup, operation, and maintenance of your Clipbuds7 earbuds.



Image: PAXA Clipbuds7 earbuds shown in their charging case, displaying battery levels on the LED screen.

What's in the Box

- Clip on Earbuds (1 pair)
- Wireless Charging Case (1)
- Charging Cable (1)
- User Manual (1)

Setup

Charging the Earbuds and Case

Before first use, fully charge the PAXA Clipbuds7 and their charging case. The case features a dual LED display to show the battery level of each earbud and the case itself.

1. Connect the provided charging cable to the Type-C port on the charging case and to a USB power source.
2. The LED display on the case will show the charging progress.
3. Once fully charged, the display will indicate 100%.

A full charge provides up to 8 hours of music playback, with an additional 36 hours from the charging case, totaling 44

hours. A quick 10-minute charge can provide up to 3 hours of playtime.

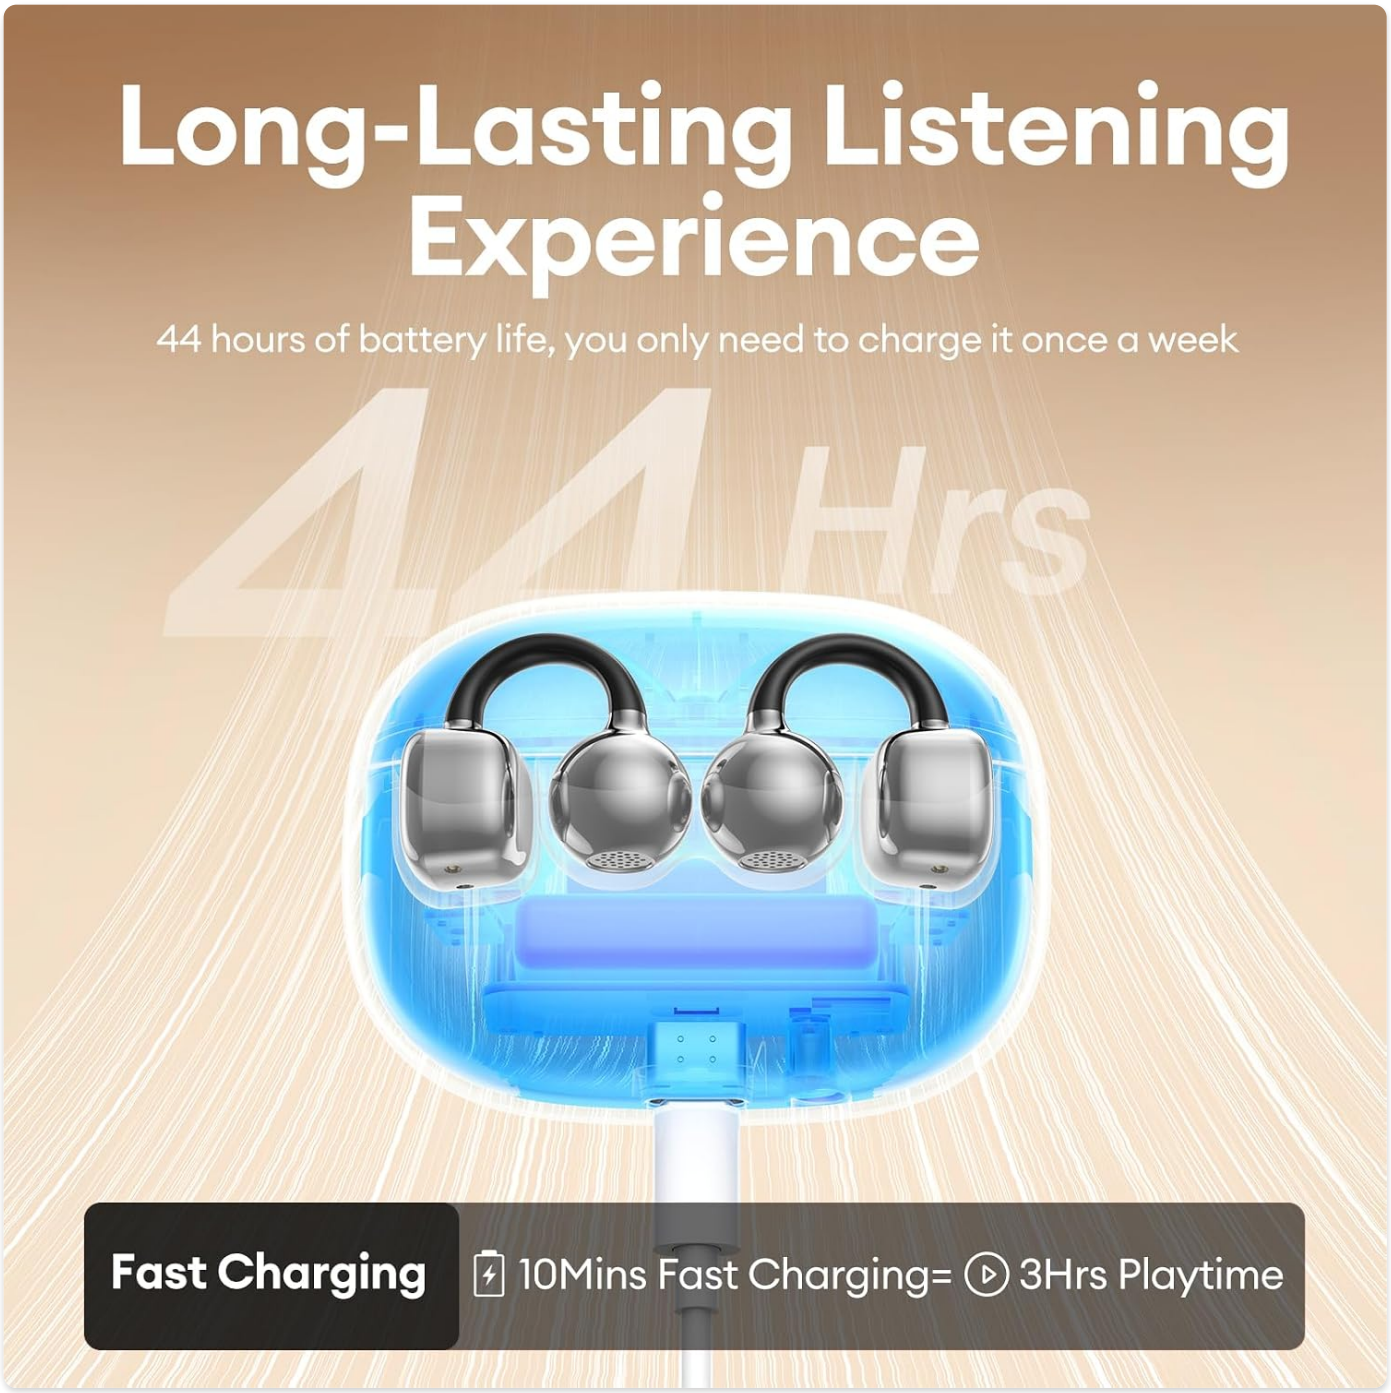


Image: Illustration of the PAXA Clipbuds7 charging case highlighting its 44-hour total battery life and fast charging capability.

Wearing the Earbuds

The Clipbuds7 are designed for an ultra-light and comfortable open-ear fit. Each earbud weighs approximately 4.5g.

1. Gently clip the earbuds onto the thinnest part of your ear.
2. Adjust the earbud tip to align with your ear canal for optimal sound delivery and comfort. The flexible C-bridge design adapts to different ear shapes.



Image: Visual guide demonstrating the correct way to clip and adjust the PAXA Clipbuds7 earbuds for a secure and comfortable fit.

Pairing with a Device

The Clipbuds7 utilize Bluetooth 5.4 for a stable and efficient connection.

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth.
3. Search for "Clipbuds7" in the list of available Bluetooth devices.
4. Select "Clipbuds7" to connect. A voice prompt will confirm successful pairing.
5. The earbuds feature auto L-R ear recognition for seamless use.



Image: The PAXA Clipbuds7 earbuds and charging case displayed alongside a smartphone and laptop, illustrating Bluetooth 5.4 connectivity.

Operating Instructions

The PAXA Clipbuds7 feature intuitive touch controls for managing audio playback and calls.

Touch Control Functions

Function	Action
Answer/End Call	Double-click either earbud
Reject Call	Press and hold either earbud for 2 seconds
Play/Pause	Double-click either earbud
Previous Song	Triple-click the left (L) earbud

Function	Action
Next Song	Triple-click the right (R) earbud
Volume +	Click the right (R) earbud
Volume -	Click the left (L) earbud
Voice Assistant	Hold both earbuds for 2 seconds

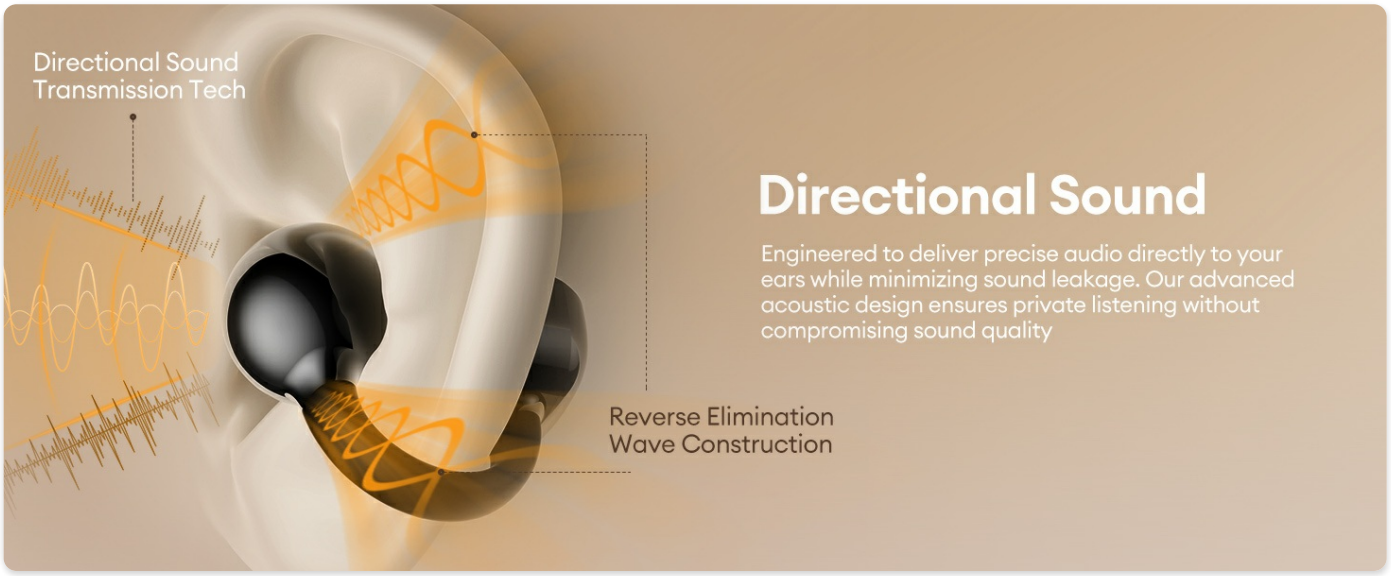


Image: Detailed illustration of the touch control functions for the left and right PAXA Clipbuds7 earbuds.

Audio Features

The Clipbuds7 deliver immersive stereo sound with enhanced clarity and a wider soundstage, thanks to PAXA's professional digital audio tuning. Advanced directional audio technology minimizes sound leakage, ensuring a private listening experience without compromising sound quality.



Image: Visual representation of the directional audio technology in PAXA Clipbuds7, showing how sound is delivered to minimize leakage and enhance clarity.

Call Quality

Equipped with ENC (Environmental Noise Cancellation) technology, the Clipbuds7's microphones effectively block up to 90% of background noise, ensuring crystal-clear calls even in noisy environments or windy conditions.

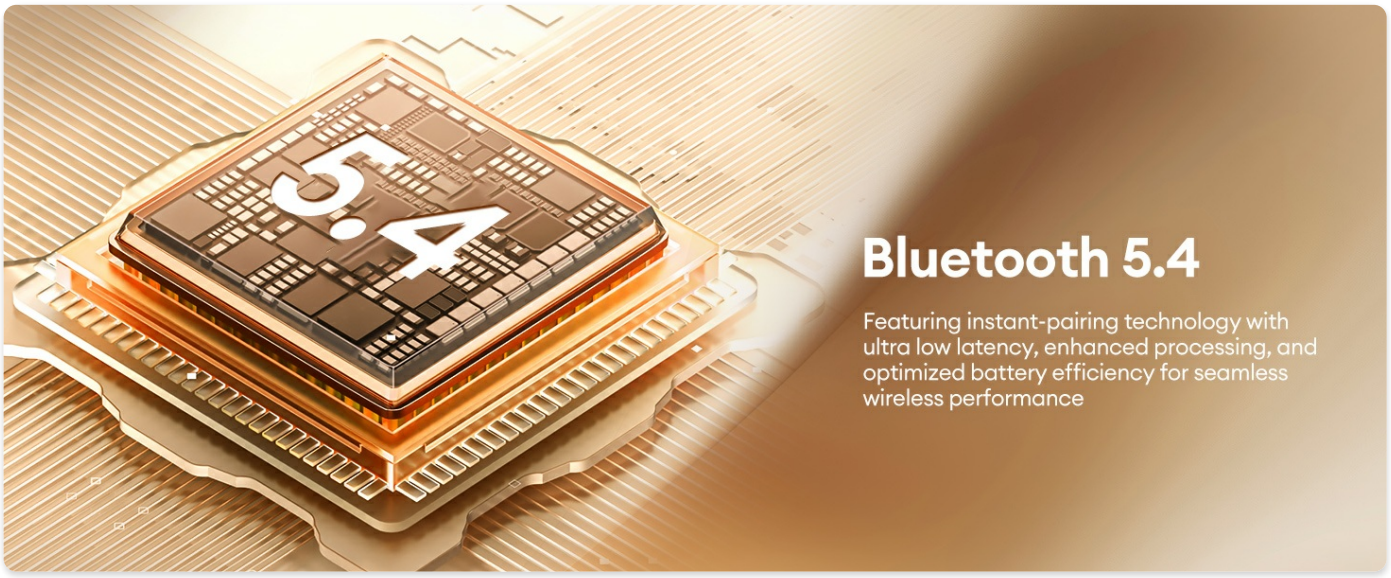


Image: A woman using PAXA Clipbuds7, illustrating the ClearCall ENC Technology for clear conversations.

Maintenance

The PAXA Clipbuds7 are IP45 rated for dust and water resistance, making them suitable for workouts and outdoor activities. To ensure longevity and optimal performance, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Water Exposure:** While IP45 rated, avoid submerging the earbuds in water. They are resistant to splashes and sweat, but not designed for swimming or showering. Dry them thoroughly if they get wet.
- **Storage:** Store the earbuds in their charging case when not in use to protect them from dust and damage. Store in a cool, dry place away from extreme temperatures.
- **Charging Port:** Keep the Type-C charging port free of dust and debris.



Image: A man wearing PAXA Clipbuds7 in light rain, demonstrating their IP45 waterproof and dustproof capabilities.

Troubleshooting

If you encounter issues with your PAXA Clipbuds7, refer to the following common solutions:

Common Issues and Solutions

Issue	Possible Solution
Earbuds not pairing	Ensure earbuds are charged. Place them back in the case, close, then reopen. Delete "Clipbuds7" from your device's Bluetooth list and try pairing again.
No sound from one earbud	Check battery level of both earbuds. Try resetting the earbuds (refer to manufacturer's specific reset instructions if available, otherwise re-pair).

Issue	Possible Solution
Low volume or poor sound quality	Adjust volume on both earbuds and connected device. Ensure earbuds are worn correctly and securely. Clean any debris from the earbud speakers.
Charging case not charging	Check the charging cable and power adapter. Ensure the Type-C port is clean and free of obstructions.
Touch controls unresponsive	Ensure earbuds are clean and dry. Restart the earbuds by placing them in the case and taking them out.

Specifications

Feature	Detail
Brand	PAXA
Model Name	Clipbuds703
Connectivity Technology	Wireless (Bluetooth 5.4)
Bluetooth Range	50 Feet
Ear Placement	Open Ear
Form Factor	Over Ear (Clip-on)
Noise Control	Hybrid Noise Cancellation (ENC for calls)
Control Type	Touch Control
Water Resistance Level	IP45 Waterproof
Item Weight (each earbud)	4.5g (Ultra-Light)
Total Playtime	Up to 44 hours (8 hours single charge + 36 hours with case)
Carrying Case Battery Capacity	250 Milliamp Hours
Carrying Case Charging Time	0.5 Hours
Material	Silicone Rubber + Plastic
Audio Driver Type	Dynamic Driver
Impedance	32 Ohm
Frequency Response	2.48 GHz

Official Product Video

Your browser does not support the video tag.

Video: An official product video showcasing the PAXA Clipbuds7 Open Ear Clip On Earbuds with LED Display, demonstrating features and usage.

Warranty and Support

For warranty information and customer support, please refer to the documentation included with your product or visit the official PAXA website. Specific warranty terms may vary by region and retailer.
For further assistance, you may contact PAXA Direct, the seller, through their Amazon store page:PAXA Store on Amazon.

© 2025 PAXA. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question