Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

GAOMON LbeylBjwl7nc7c9nhiltYQPuPds

GAOMON 66-inch Fluted TV Stand with LED Light User Manual

Model: LbeylBjwl7nc7c9nhiltYQPuPds

1. Introduction

Thank you for purchasing the GAOMON 66-inch Fluted TV Stand with LED Light. This modern entertainment center is designed to accommodate TVs up to 75 inches, featuring a faux marble top, four storage drawers, and a glass door compartment. This manual provides essential information for safe assembly, operation, maintenance, and troubleshooting to ensure optimal use of your product.



Image 1.1: The GAOMON 66-inch Fluted TV Stand with LED Light, showcasing its modern design and functionality in a living room environment.

2. Safety Information

> **WARNING:** Always follow the installation instructions step by step. Before starting, ensure you have all the parts and consider having a second person to assist. Be cautious when handling heavy items to prevent injuries. Do not exceed the load limit of 75 inches TV.

- Read all instructions carefully before assembly and use.
- Keep children and pets away from the assembly area.
- Place the TV stand on a flat, stable, and level surface.
- Do not stand or sit on the unit.
- Ensure all connections are secure before placing any items on the stand.

- Do not use power tools for assembly unless specifically instructed, as over-tightening can damage components.

3. Package Contents

Before beginning assembly, please verify that all parts and hardware are present and undamaged. Refer to the separate assembly guide included in your package for a complete, detailed list of all components, including panels, hardware, and accessories.
If any parts are missing or damaged, do not proceed with assembly. Contact GAOMON customer support for assistance.

4. Setup and Assembly

Assembly of the GAOMON TV Stand requires careful attention to detail. We recommend having two adults for the assembly process due to the size and weight of some components.

4.1 Tools Required (Not Included)

- Phillips Head Screwdriver
- Hammer (for dowels, if applicable)

4.2 Assembly Steps

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface (e.g., the cardboard packaging) to prevent scratches.
2. **Identify Parts:** Match each part to the corresponding labels in the included assembly manual.
3. **Follow Instructions:** Adhere strictly to the step-by-step instructions provided in the separate assembly guide. Pay close attention to diagrams and hardware usage for each step.
4. **Secure Connections:** Ensure all screws, cams, and dowels are properly inserted and tightened. Do not over-tighten screws.
5. **Install Drawers and Doors:** Follow the specific instructions for installing drawer slides, drawers, and door hinges to ensure smooth operation.
6. **Attach Legs:** Securely attach the aluminum alloy legs to the base of the TV stand.
7. **Final Placement:** Once fully assembled, carefully move the TV stand to its desired location.

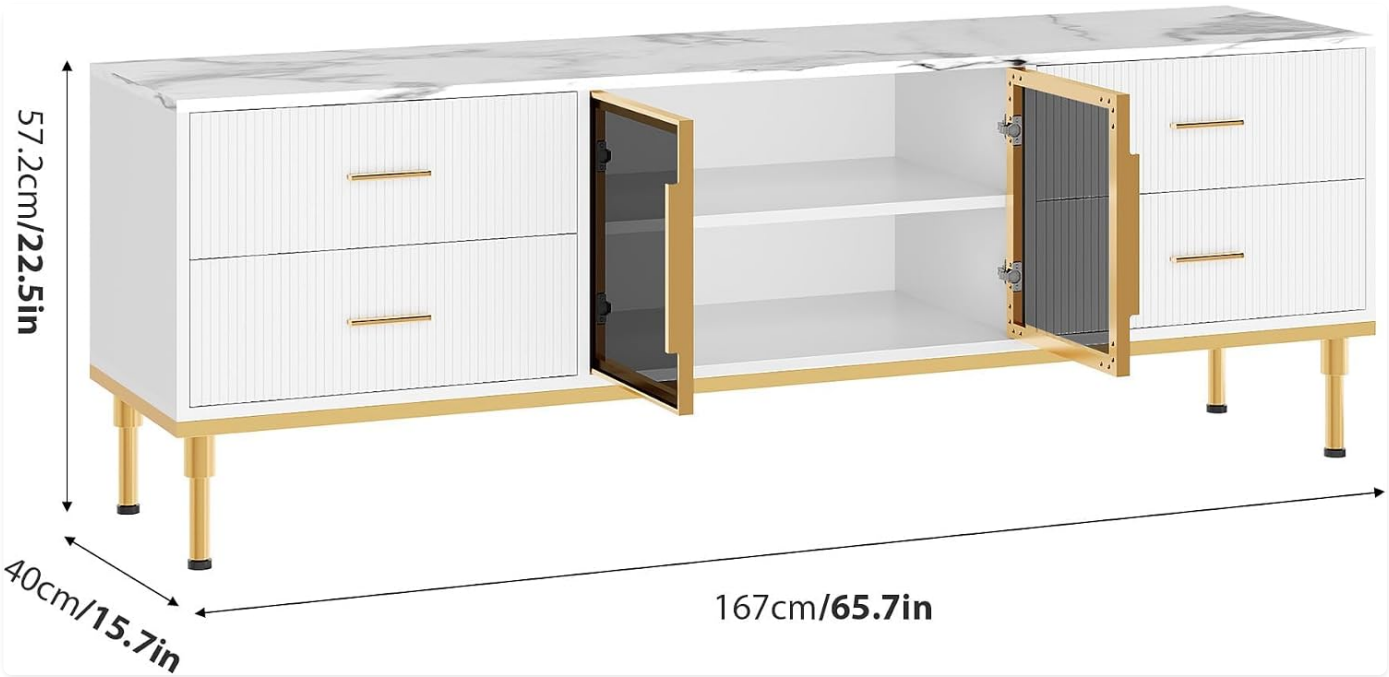


Image 4.1: Dimensional overview of the TV stand, showing its length (65.7 inches), depth (15.7 inches), and height (22.5 inches).

5. Operating Instructions

5.1 LED Light Operation

Your GAOMON TV stand features integrated LED lighting with multiple modes and colors to enhance your living space.

1. **Power On/Off:** Use the provided key control or app control to turn the LED lights on or off.
2. **Color Selection:** The LED lights offer 7 primary color hues and over 60,000 color options via app control. Select your desired color to match your mood or decor.
3. **Modes:** Explore various modes including Mic Mode (lights react to sound), Music Mode (lights sync with music), and Smart Timer for scheduled operation.
4. **App Control:** Download the dedicated app (refer to the LED light instruction sheet for QR code or app name) to unlock full customization features, including precise color selection and mode adjustments.



Image 5.1: Illustration of the LED light features, including multiple colors, mic mode, music mode, smart timer, app control, and key control.

5.2 Drawer and Door Usage

- **Drawers:** The four roomy drawers are designed for smooth operation. Pull gently to open and push firmly to close. Avoid overloading drawers to ensure longevity of the slides.
- **Glass Door:** The central compartment features a glass door. Open and close gently using the handle. The soft-close hinges prevent slamming.



Image 5.2: Overview of the storage capabilities, highlighting the stylish faux marble top, ample tabletop space, and the four spacious drawers for organization.

6. Maintenance and Care

Proper care will help maintain the appearance and longevity of your GAOMON TV stand.

- **Cleaning Surfaces:** For the engineered wood and faux marble top, wipe with a soft, damp cloth. Avoid abrasive

cleaners, harsh chemicals, or excessive moisture.

- **Glass Care:** Clean glass surfaces with a standard glass cleaner and a soft, lint-free cloth.
- **Dusting:** Regularly dust all surfaces with a dry, soft cloth.
- **Spills:** Wipe up spills immediately to prevent staining or damage.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or discoloration.
- **Check Connections:** Periodically check all screws and hardware to ensure they remain tight. Re-tighten if necessary, but do not over-tighten.

7. Troubleshooting

Problem	Possible Cause	Solution
TV stand wobbles	Uneven floor; loose connections	Ensure the stand is on a level surface. Check and tighten all assembly screws.
Drawers do not slide smoothly	Improperly installed slides; overloaded drawer	Verify drawer slides are correctly aligned and installed. Reduce weight in the drawer.
LED lights not working	Power connection issue; remote/app issue	Check if the LED power adapter is securely plugged into the wall and the LED strip. Ensure remote control batteries are functional or app is correctly paired.
Door does not close properly	Misaligned hinges	Adjust the door hinges according to the assembly guide to ensure proper alignment.

8. Specifications

Feature	Detail
Brand	GAOMON
Model Number	LbeylBjwI7nc7c9nhiItYQPuPds
Material	Engineered Wood
Top Material	Faux Marble
Color	White (with Gold Accents)
Product Dimensions (L x W x H)	65.7" x 15.75" x 22.5" (167cm x 40cm x 57.2cm)
Item Weight	103.6 pounds
Recommended TV Size	Up to 75 inches (supports 75-inch to 85-inch TVs)
Number of Drawers	4
Number of Shelves	2 (behind glass door)
LED Lighting	7 color hues, multiple modes (Mic, Music, Timer), App Control

Feature	Detail
Mounting Type	Floor Mount
Assembly Required	Yes

9. Warranty and Customer Support

GAOMON is committed to providing high-quality products. For information regarding warranty coverage, please refer to the documentation included with your purchase or visit the official GAOMON website.
If you encounter any issues with your product, require replacement parts, or have questions not covered in this manual, please contact GAOMON customer support:

- **Online:** Visit the GAOMON store on Amazon or the official GAOMON website for support resources and contact forms.
- **Email:** Refer to your purchase documentation for specific customer service email addresses.

Please have your model number (LbeylBjwI7nc7c9nhiItYQPuPds) and purchase date ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F848178H

More documents and user manuals: **https://manuals.plus/**