Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZdalaMit RC813A

ZdalaMit RC813A Voice Replacement Remote Control User Manual

For QM6K and QM7K Series QD-MINI LED QLED 4K UHD Smart TVs

Introduction

This manual provides comprehensive instructions for the ZdalaMit RC813A Voice Replacement Remote Control. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance with your compatible QM6K or QM7K Series QD-MINI LED QLED 4K UHD Smart TV.





Image: The ZdalaMit RC813A Voice Replacement Remote Control, featuring a sleek black design with clearly labeled buttons for navigation, volume, channel control, and dedicated app access.

Setup

1. Battery Installation

The RC813A remote control requires two (2) 1.5V AAA alkaline batteries. To install:

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

Note: Batteries are not included with the remote control.

2. Pairing the Remote Control

Pairing is required for the remote control to function with your TV. Follow these steps:

- **Initial Pairing:** After powering on your TV for the first time, on-screen instructions will guide you through the

pairing process. Follow these prompts.

- **Re-pairing or Manual Pairing:** If the remote control fails to pair, or if you need to re-pair it, ensure the remote is within 10 feet (approximately 3 meters) of your TV. Simultaneously press and hold the **OK** button and the **Home** button for at least 3 seconds to initiate pairing.
- **Google TV Mode Pairing:** If your TV is in Google TV mode, press and hold the **HOME** and **OK** buttons on your remote at the same time. Keep your remote within 3 feet of your TV during this process.







Image: The ZdalaMit RC813A remote control, highlighting the microphone button, which is essential for voice control functions and may be used in the pairing process.

Operating Instructions

The RC813A remote control provides intuitive access to your TV's functions. Below are the primary button functionalities:

- **Power Button:** Turns the TV on or off.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Settings Button (Gear Icon):** Accesses TV settings and options.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Navigation Pad (Circular):** Use the directional arrows to navigate menus and select items with the central OK button.
- **Back Button (Arrow):** Returns to the previous screen or menu.
- **Home Button (House Icon):** Returns to the TV's home screen or main menu.
- **Volume Buttons (VOL +/-):** Adjusts the TV's volume level.
- **Channel Buttons (CH ^/v):** Changes TV channels.
- **Voice Control Button (Microphone Icon):** Activates voice commands for searching, controlling the TV, and more. Press and hold to speak your command.
- **Quick Access Buttons:** Dedicated buttons for popular streaming services such as Netflix, Prime Video, YouTube, TV, tv+, and Disney+. Press to launch the respective application directly.

Maintenance

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

Troubleshooting

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new AAA alkaline batteries.
- Ensure there are no obstructions between the remote and the TV's sensor.
- Attempt to re-pair the remote control following the instructions in the Setup section.

- **Pairing failure:**
  - Ensure the remote is within the recommended distance (10 feet or 3 feet for Google TV mode) from the TV during pairing.
  - Confirm that the TV is powered on and functioning correctly.
  - Repeat the pairing steps carefully, holding the specified buttons for the required duration.
- **Voice control not working:**
  - Ensure the remote is successfully paired with the TV. Voice control requires a paired connection.
  - Check the TV's internet connection, as voice commands often rely on online services.
  - Speak clearly and directly into the microphone on the remote.

Specifications

Model	RC813A
Power Supply	2 x 1.5V AAA Alkaline Batteries
Dimensions (L x W x H)	7.34 x 1.71 x 0.55 inches
Item Weight	1.41 ounces
Special Feature	Voice Search
Compatible Devices	Television
Max Number of Supported Devices	1



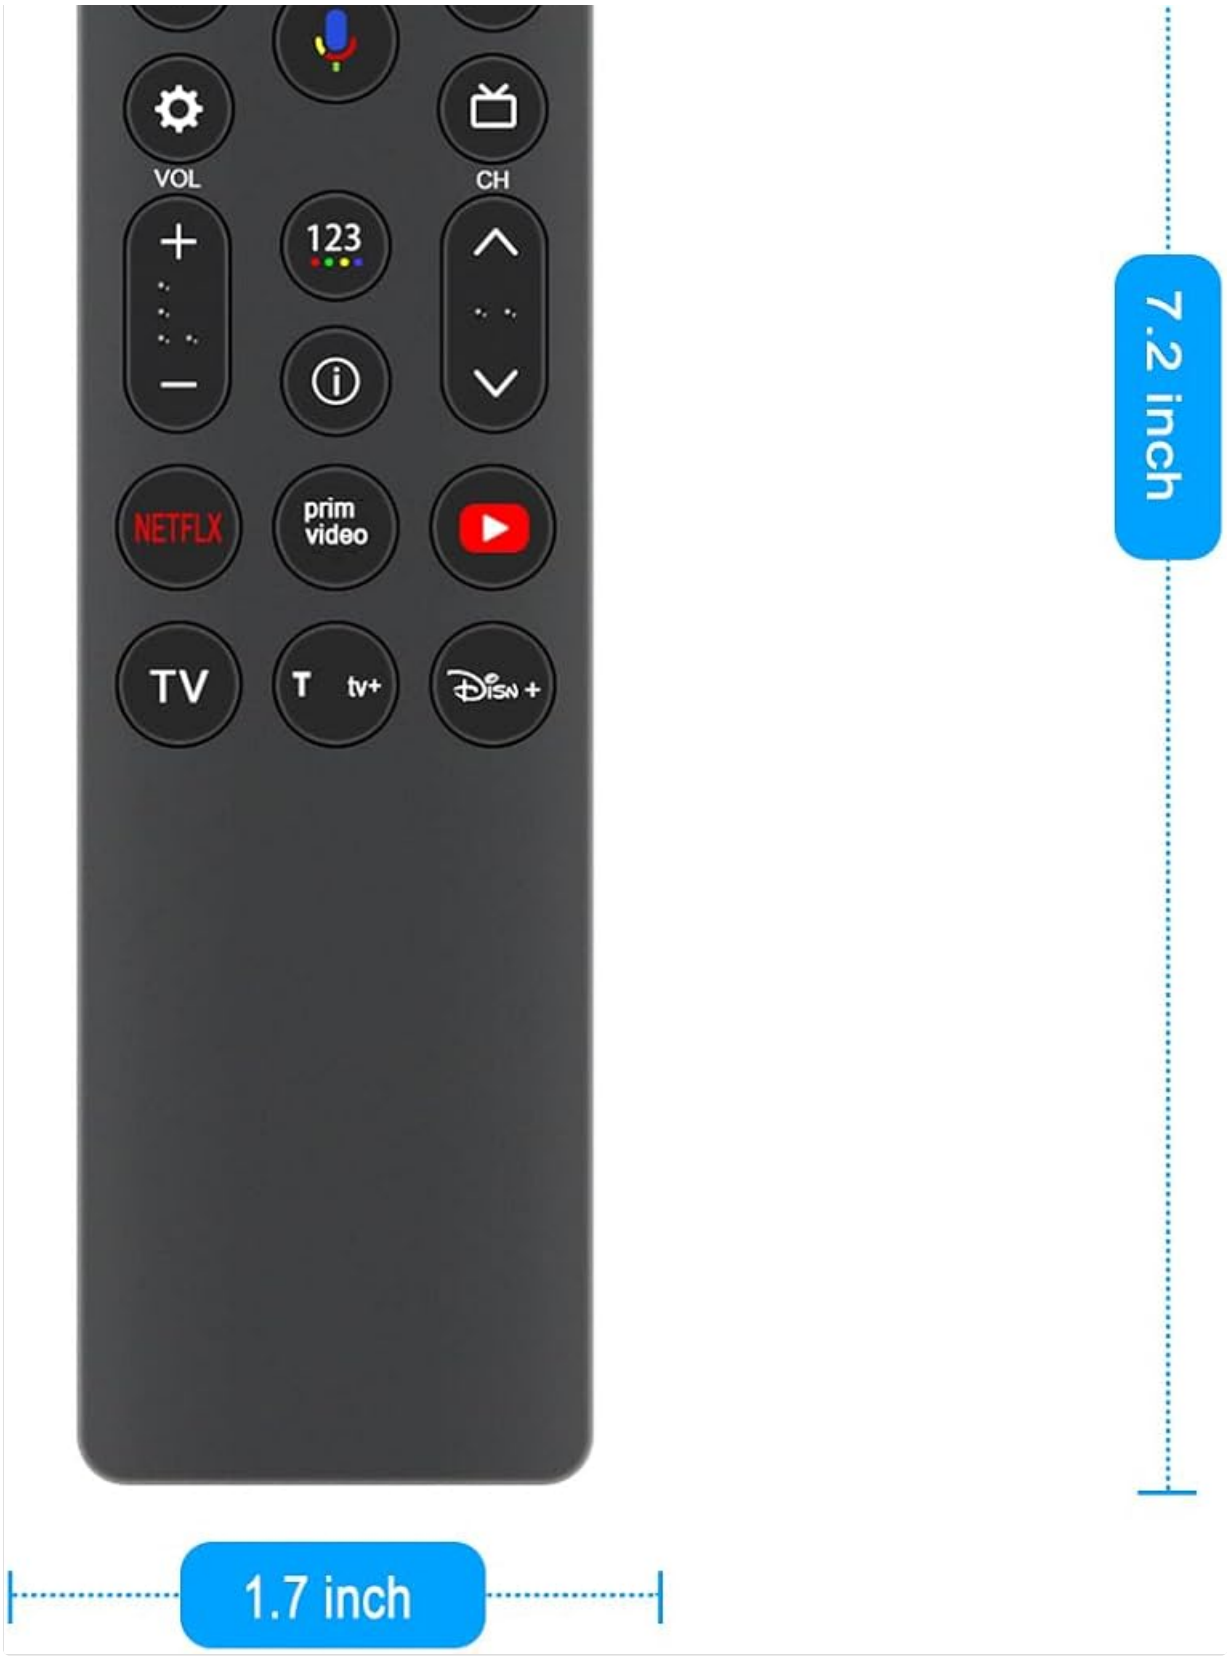


Image: The ZdalaMit RC813A remote control with its length (7.2 inches) and width (1.7 inches) clearly indicated, providing a visual reference for its physical dimensions.

Compatible TV Models

This RC813A Voice Replacement Remote Control is compatible with the following QM6K and QM7K Series QD-MINI LED QLED 4K UHD Smart TV models:

- 50QM6K
- 55QM6K

- 65QM6K
- 75QM6K
- 85QM6K
- 98QM6K
- 55QM7K
- 65QM7K
- 75QM7K
- 85QM7K
- 98QM7K

Warranty and Support

Specific warranty information for this replacement remote control may vary. Please refer to the documentation provided with your purchase or contact the seller directly for details regarding warranty coverage and support.

For further assistance with your ZdalaMit RC813A remote control, please consult the troubleshooting section of this manual or contact your product retailer.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F87PNLB8

More documents and user manuals: **https://manuals.plus/**