EONIX SLRY003061-FP1CWT

EONIX Dual Motor Power Lift Recliner Chair Instruction Manual

Model: SLRY003061-FP1CWT

Introduction

Thank you for choosing the EONIX Dual Motor Power Lift Recliner Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your new recliner. Please read it thoroughly before use and retain it for future reference.

Important Safety Information

- Always ensure the power cord is securely connected and not damaged.
- Keep children and pets away from the chair's moving parts during operation.
- Do not allow anyone to sit on the footrest when it is extended.
- Avoid placing hands or feet near the chair's mechanism to prevent injury.
- Do not operate the chair if any part is damaged or malfunctioning. Contact customer support immediately.
- Ensure there is adequate clearance around the chair for reclining and lifting functions.
- Maximum weight recommendation for this chair is 400 pounds. Do not exceed this limit.

Package Contents

Your EONIX Power Lift Recliner Chair is shipped in two packages. Please ensure you have received both before beginning assembly.

- Recliner Base
- Backrest
- Side Wings (if applicable)
- Power Adapter
- Remote Control
- Instruction Manual (this document)

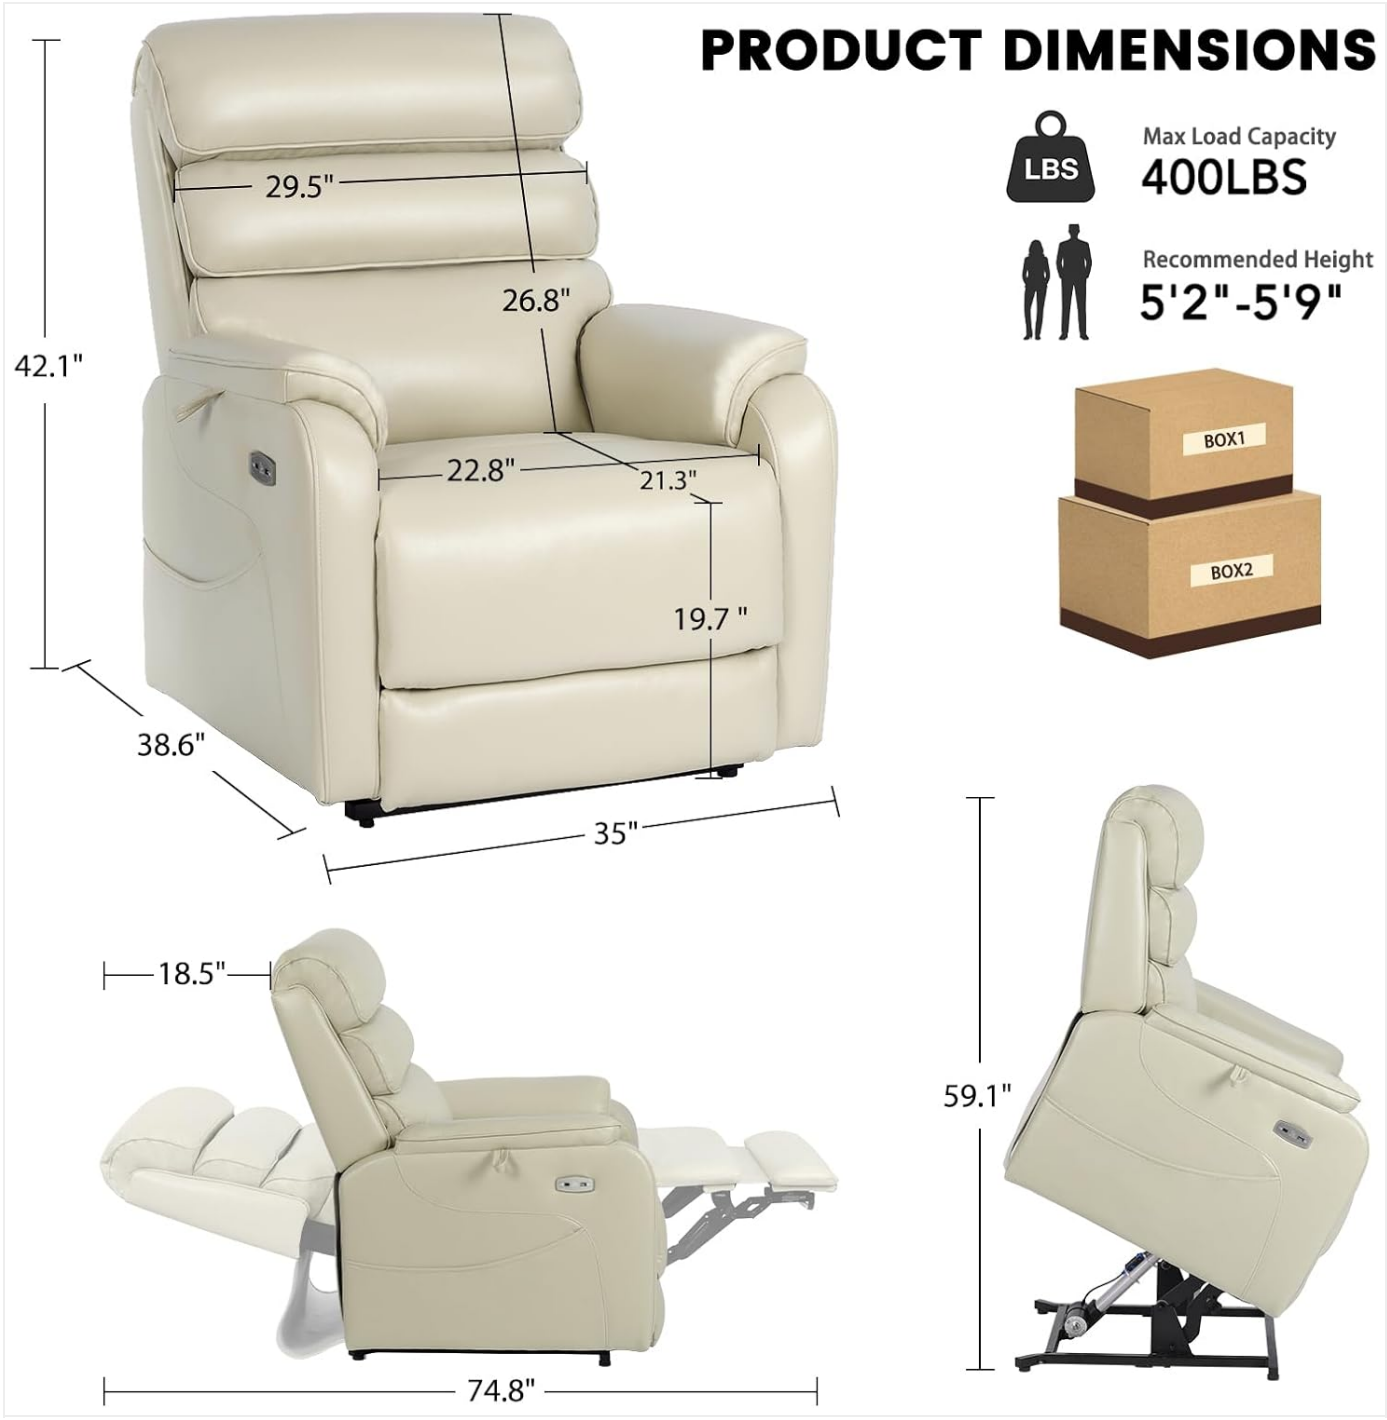


Image: The recliner chair is delivered in two separate boxes.

Assembly Instructions

Assembly of the EONIX Power Lift Recliner Chair is designed to be quick and easy, typically taking about 15 minutes with two people. Detailed instructions are included in the packaging. For a visual guide, please refer to the assembly video below.

1. Unpack all components from both boxes.
2. Connect the backrest to the base by sliding it into the designated slots until it locks securely.
3. Attach any side wings or armrests if they are separate components.
4. Connect all electrical cables, ensuring they are properly seated.
5. Plug the power adapter into a wall outlet.
6. Test all functions using the remote control.

Your browser does not support the video tag.

Video: Assembly Guide for EONIX Lift Recliner LRY003. This video demonstrates the step-by-step process of assembling the recliner chair, including connecting the backrest and electrical components.



Image: Detail of the remote control and integrated USB and Type-C charging ports on the side of the chair.

Operating Instructions

Remote Control Functions

The recliner is operated using the wired remote control. This dual motor system allows for independent adjustment of the backrest and footrest.



Image: Remote control illustrating various preset positions: Standing Up, Reading, Watching TV, and Napping. The chair can recline from 45° to 175°.

- **Lift/Recline:** Use the up and down arrows to adjust the chair's position. The dual motors allow for independent control of the backrest and footrest.
- **Preset Modes:** The remote includes buttons for Memory Mode, Sleep Mode, and TV Mode for quick adjustments.
- **One-Touch Home Reset:** Press and hold the "Home" button for 15 seconds to return the chair to its upright sitting position.

Your browser does not support the video tag.

Video: Lay Flat Power Lift Recliner Chair for Elderly LRY003. This video demonstrates the reclining and lifting functions of the chair, showcasing its ability to lay flat and assist users in standing up.

Your browser does not support the video tag.

Video: EONIX Dual Motor Lay Flat Recliner. This video highlights the independent control of the backrest and footrest, allowing for various comfortable positions, including a full lay-flat option.

Heat and Massage Functions

The recliner features a lumbar heat zone and 8 targeted vibration massage nodes for enhanced comfort.

- **Heat:** Activate the lumbar heat function using the remote control.
- **Massage:** Select from 8 vibration massage nodes and adjust intensity and duration via the remote.



Image: Illustration of the massage and heating functions, showing soothing lumbar heat and 8-node vibrating massage zones.



Image: Remote control layout for massage and heating, detailing controls for heat, 8-point massage, intensity, and time settings.

USB Charging Ports

The recliner is equipped with USB and Type-C ports for convenient charging of your electronic devices.



Image: Detail of the integrated USB and Type-C charging ports located on the side of the chair for easy access.

Maintenance

To maintain the appearance and longevity of your EONIX recliner, follow these simple care instructions:

- **Cleaning:** Wipe clean with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Spills:** Blot spills immediately with a clean, dry cloth.
- **Inspection:** Periodically check all connections and moving parts for wear or damage.
- **Power Cord:** Ensure the power cord is not pinched or placed under heavy objects.

Troubleshooting

If you encounter any issues with your recliner, please refer to the following common troubleshooting steps:

- **Chair Not Responding:**

- Check if the power cord is securely plugged into both the chair and the wall outlet.
- Ensure the power adapter is functioning correctly.
- Verify that the remote control cable is firmly connected to the chair.

- **Unusual Noises:**
  - Inspect the chair's mechanism for any obstructions.
  - Ensure all assembly bolts are tightened.
- **Heat/Massage Not Working:**
  - Confirm the chair is powered on.
  - Check the remote control for proper function and battery (if applicable, though this model uses a wired remote).

If the problem persists after attempting these steps, please contact EONIX customer support.

Product Specifications

Feature	Detail
Brand	EONIX
Model Name	SLRY003061-FP1CWT
Color	Cream White
Material	Faux Leather (Upholstery), Wood (Frame), Cotton, Sponge (Fill)
Product Dimensions (D x W x H)	38.6"D x 35"W x 42.1"H
Item Weight	128 pounds
Maximum Weight Recommendation	400 pounds
Reclining Position Count	Infinite (45° to 175°)
Additional Features	Adjustable Backrest, Heated, Heavy Duty, Power Lift, Power Recliner, USB/Type-C Ports
Care Instructions	Wipe Clean
Recommended User Height	5'2"~5'9"

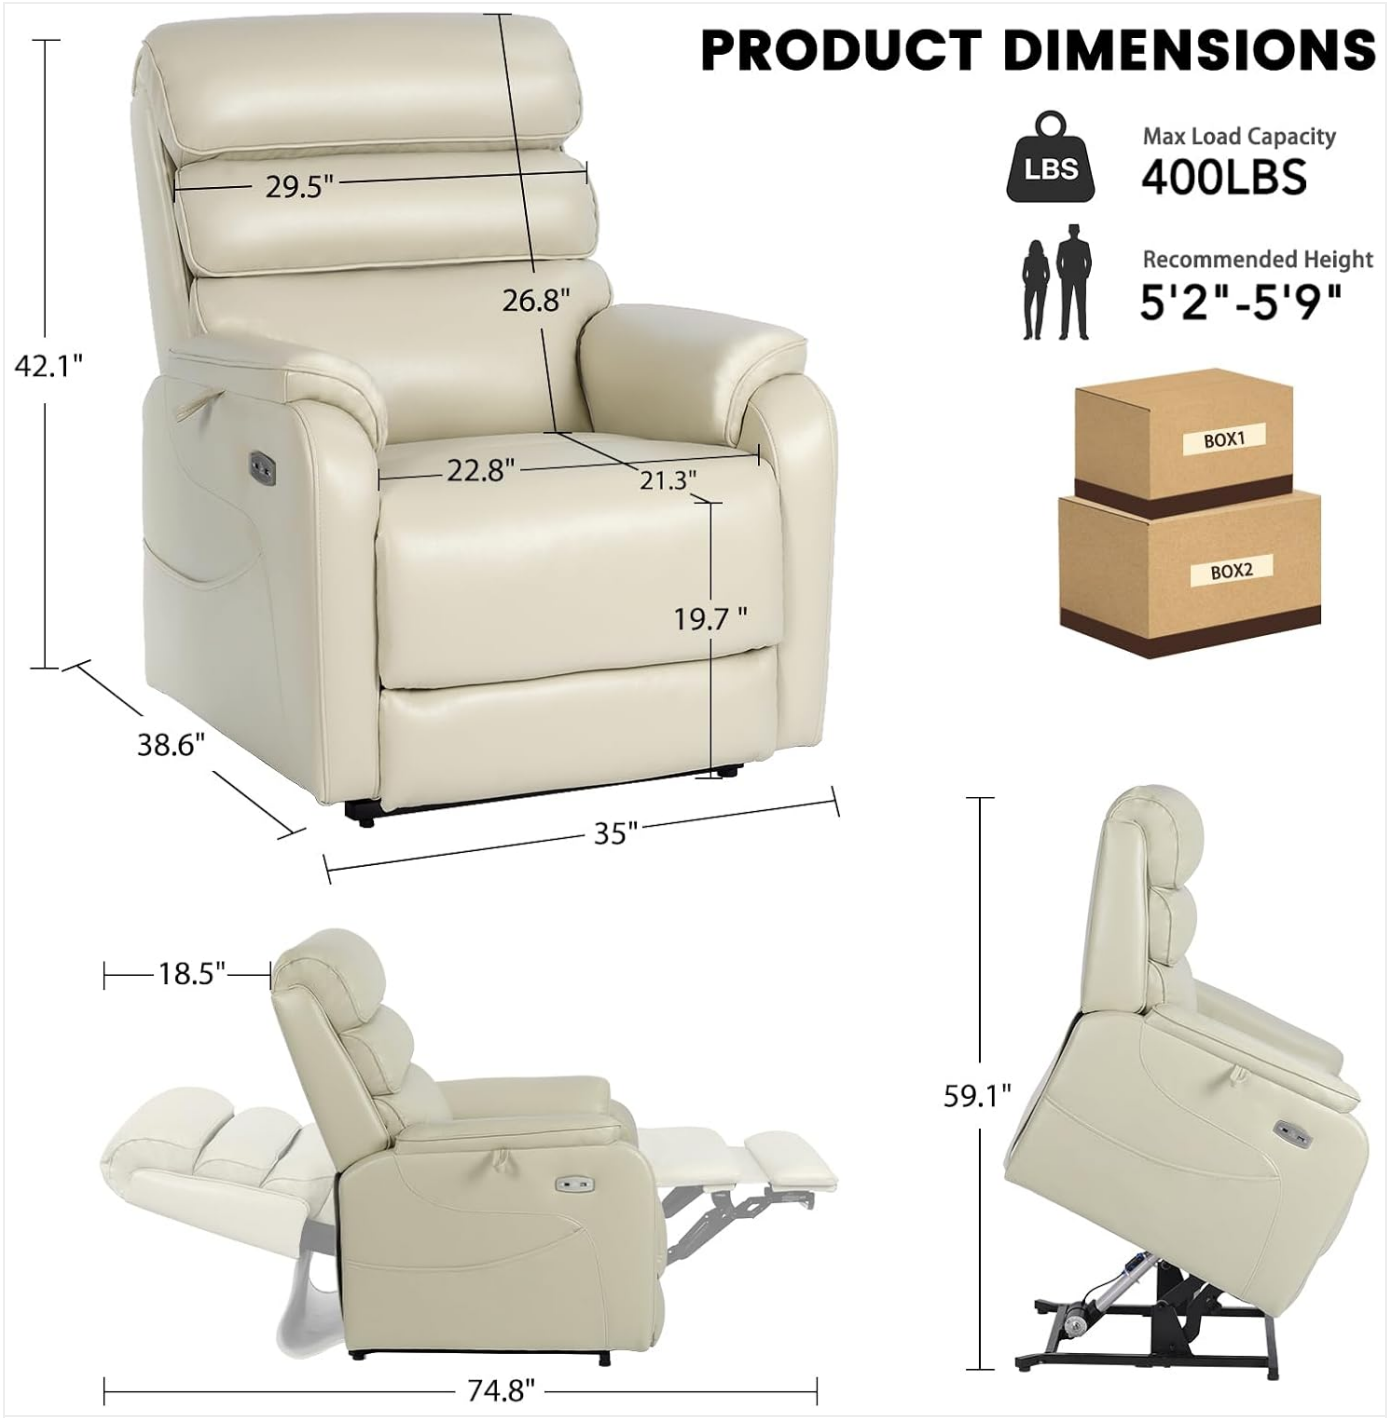


Image: Detailed product dimensions and maximum load capacity (400 lbs) for the recliner chair.

Warranty and Support

EONIX is committed to providing quality products and excellent customer service.

- **2-Year Replacement Promise:** For non-human-caused defects, EONIX offers a brand-new replacement free of charge. Affordable spare parts are available for other issues.
- **30-Day Return Policy:** A 30-day return/exchange is available for brand-new, unopened products. The buyer pays shipping for non-quality returns.
- **Customer Support:** For any questions or assistance, please message EONIX on Amazon. Replies are typically provided within 12-24 hours.

For further information or to contact support, please visit theEONIX Store on Amazon.

© 2026 EONIX. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question