Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ONIKUMA GAMING T27 Black 2

ONIKUMA GAMING T27 Wireless Gaming Earbuds User Manual

Model: T27 Black 2
Brand: ONIKUMA GAMING

1. Introduction

Thank you for choosing the ONIKUMA GAMING T27 Wireless Gaming Earbuds. These earbuds are designed to provide a superior audio experience for gaming and communication across multiple platforms, including PC, PlayStation, Meta Quest, Nintendo Switch, and mobile devices. Featuring ultra-low latency 2.4G wireless technology and Bluetooth 5.3, the T27 offers versatile connectivity and high-fidelity sound.

Please read this manual thoroughly before using the product to ensure proper operation and to maximize your gaming and audio experience.

2. What's in the Box

- ONIKUMA GAMING T27 Earbuds (Left and Right)
- Charging Case
- USB-C Dongle (2.4G Wireless Transmitter)
- USB Charging Cable
- User Manual



Image: Included components of the ONIKUMA GAMING T27 Wireless Gaming Earbuds.

3. Product Overview



Image: ONIKUMA GAMING T27 Earbuds, Charging Case, and USB-C Dongle.

Earbud Features:

- **Touch Control Area:** For managing playback, calls, and modes.
- **LED Indicator:** Displays connection status and battery level.
- **ENC Microphones:** Two built-in AI advanced mics for clear calls and noise reduction.
- **Charging Contacts:** For charging within the case.

Charging Case Features:

- **Earbud Charging Slots:** Securely holds and charges the earbuds.
- **USB-C Charging Port:** For charging the case.
- **Battery Indicator:** Shows the charging case's battery status.

USB-C Dongle:

- **USB-C Connector:** For direct connection to compatible devices.

- **USB-A Adapter:** For wider compatibility with USB-A ports.
- **Indicator Light:** Shows dongle connection status.

4. Setup and Connectivity

4.1 Initial Charging

Before first use, fully charge the earbuds and the charging case. Place the earbuds into the charging case and connect the case to a power source using the provided USB charging cable. The LED indicators will show charging status.

Charging Time: Approximately 1.5 hours for a full charge.



Image: Battery life and charging information for the T27 Earbuds.

4.2 Connecting to Devices

The T27 earbuds support dual-mode connectivity: 2.4G wireless via USB-C dongle and Bluetooth 5.3.



Image: T27 Earbuds connectivity options for various devices.

4.2.1 2.4G Wireless Connection (Recommended for Gaming)

1. Insert the USB-C dongle into a compatible port on your device (PC, PS5/PS4, Meta Quest, Nintendo Switch, Steam Deck). Use the USB-A adapter if needed.
2. The earbuds will automatically connect to the dongle when removed from the charging case. The dongle's indicator light will confirm connection.
3. Ensure the audio output setting on your device is set to the ONIKUMA GAMING T27 or the connected USB audio device.

Attention for PS4/PS5 Users:

Do not plug the dongle into the controller.

Do not plug the dongle into the back of the PS4/PS5.

Do not connect to PS4/PS5 via Bluetooth. Use the 2.4G dongle for optimal performance.



Image: Correct dongle connection for PS4/PS5 consoles.

4.2.2 Bluetooth Connection (Recommended for Mobile Devices)

1. Remove the earbuds from the charging case. They will enter pairing mode (LEDs will flash).
2. On your device (phone, tablet, laptop), enable Bluetooth and search for "ONIKUMA GAMING T27".
3. Select the earbuds to pair. Once connected, the earbud LEDs will stop flashing.

4.3 Dual-Device Smart Connectivity

The T27 earbuds can connect to two devices simultaneously: one via 2.4G dongle and one via Bluetooth. This allows for seamless switching, for example, between gaming on a console and answering a call on your smartphone.



Image: Dual-device smart switch functionality.

5. Operating Instructions

5.1 Power On/Off

- **Power On:** Remove earbuds from the charging case. They will automatically power on.
- **Power Off:** Place earbuds back into the charging case. They will automatically power off and begin charging. Alternatively, long press the Multi-Function Button (MFB) on either earbud for 5 seconds to manually power off.

5.2 Touch Controls

The T27 earbuds feature intuitive touch controls on the outer surface of each earbud.



Image: T27 Earbuds touch control functions.

Function	Action
Power On/Off	Long press MFB for 5 seconds

Function	Action
Play/Pause	Double click MFB
Volume Increase	Long press MFB (Right earbud)
Volume Decrease	Long press MFB (Left earbud)
Answer/Hang Up Call	Double click MFB
Reject Call	Long press MFB
Activate Voice Mode	Triple click MFB (Left/Right earbud)
Dongle Game Mode	Single click MFB (when connected via dongle)

5.3 Game and Music Dual Mode

The T27 earbuds feature a sensitive switch to optimize audio performance for either gaming or music listening.

- **Game Mode:** Optimizes audio for spatial awareness, enhancing footsteps and gunshots for a competitive edge.
- **Music Mode:** Provides high-fidelity sound quality for an immersive listening experience.

Switching between modes is typically done via the touch controls or automatically detected by the earbuds.

5.4 Single and Dual Ear Use

The earbuds can be used individually (mono mode) or as a pair (stereo mode).

- **Single Ear:** Simply remove one earbud from the case. It will connect independently.
- **Dual Ear:** Remove both earbuds from the case. They will automatically pair with each other and then connect to your device.



Image: Illustration of single and dual earbud usage.

6. Maintenance and Care

6.1 Cleaning

- Regularly clean the earbuds, especially the ear tips and charging contacts, with a soft, dry, lint-free cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Ensure the earbuds and charging case are dry before placing them back in the case or charging.

6.2 Storage

- Store the earbuds in their charging case when not in use to protect them and keep them charged.
- Avoid storing in extreme temperatures (hot or cold) or in highly humid environments.

6.3 Battery Care

- To prolong battery life, avoid fully discharging the earbuds and charging case frequently.
- Charge the device regularly, even if not in frequent use, to prevent deep discharge.

6.4 Water Resistance

The T27 earbuds feature a waterproof design (Water Resistance Level: Waterproof). While they are resistant to sweat and light splashes, they are not designed for submersion in water. Avoid exposing them to excessive moisture or liquids.

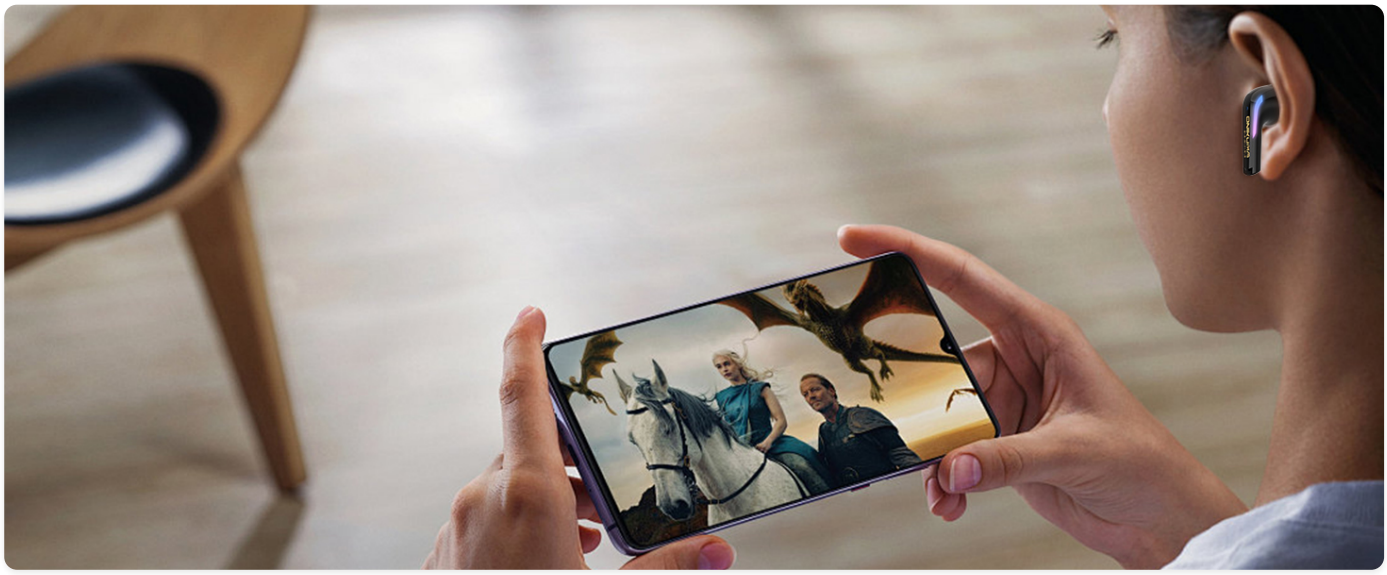


Image: T27 Earbuds demonstrating water resistance.

7. Troubleshooting

If you encounter issues with your ONIKUMA GAMING T27 earbuds, please refer to the following common solutions:

Problem	Possible Cause	Solution
No sound from earbuds	Earbuds not powered on; Not connected; Low battery; Incorrect audio output setting on device.	Ensure earbuds are charged and removed from case. Verify connection (Bluetooth or dongle). Check device's audio output settings.

Problem	Possible Cause	Solution
Earbuds not pairing/connecting	Out of range; Interference; Pairing mode not active; Previously paired device interfering.	Ensure earbuds are close to the device. Turn off Bluetooth on other nearby devices. Place earbuds back in case, then remove to re-enter pairing mode. Forget device in Bluetooth settings and re-pair.
Microphone not working	Microphone muted; Incorrect input device selected; Earbuds not fully connected.	Check if microphone is muted on your device or application. Ensure the T27 is selected as the input device in your system settings. Reconnect earbuds.
Sound quality is poor or distorted	Weak signal; Interference; Earbuds dirty; Incorrect mode.	Move closer to the connected device. Avoid strong electromagnetic interference. Clean earbud grilles. Ensure correct mode (Game/Music) is selected.
Dongle not recognized by console (PS4/PS5)	Incorrect USB port used.	Ensure dongle is plugged into a front USB port on the console, not the controller or rear ports.

If the issue persists, please contact ONIKUMA GAMING customer support for further assistance.

8. Specifications

Feature	Detail
Model Name	T27 Black 2
Connectivity Technology	Bluetooth 5.3, 2.4G Wireless
Headphones Jack	USB C (for dongle)
Ear Placement	In Ear
Form Factor	In Ear
Control Type	Touch Control
Charging Time	1.5 Hours
Earbuds Battery Life	4-6 Hours
Total Playtime (with case)	Up to 28 Hours
Noise Control	Passive Noise Cancellation (ENC Mic for calls)
Water Resistance Level	Waterproof
Material	Acrylonitrile Butadiene Styrene (ABS)
Item Weight	5 ounces

Feature	Detail
Compatible Devices	PC, Cellphones, Tablets, Laptops, PS4, PS5, Meta Quest, Steam Deck, Switch, VR

9. Warranty and Support

ONIKUMA GAMING products are manufactured to high quality standards. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your purchase or visit the official ONIKUMA GAMING website.

For technical support, troubleshooting assistance, or any product-related inquiries, please contact ONIKUMA GAMING customer service through the contact information provided in your product packaging or on the official brand website.

Manufacturer: ONIKUMA GAMING

Date First Available: May 15, 2025

© 2025 ONIKUMA GAMING. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F8QGHNH8

More documents and user manuals: **https://manuals.plus/**