Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Anbull BX-29

Anbull 2-in-1 Electric Pole Pruner and Mini Chainsaw User Manual

Model: BX-29

Contents Introduction Safety Information Package Setup Operation Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

This manual provides essential instructions for the safe and effective use of your Anbull 2-in-1 Electric Pole Pruner and Mini Chainsaw, Model BX-29. This versatile tool is designed for both handheld pruning and extended reach tree trimming, offering a 6-inch cutting capacity and a powerful brushless motor. Please read this manual thoroughly before initial use and retain it for future reference.

The Anbull 2-in-1 tool allows for quick conversion between a compact 6-inch mini chainsaw and a telescopic pole pruner, extending up to 4.8 meters (approximately 16 feet total reach with user). It is powered by 2x 4000mAh lithium-ion batteries and is compatible with Makita 18V batteries.



Image: The Anbull 2-in-1 Electric Pole Pruner and Mini Chainsaw, highlighting its dual functionality.



Image: Technical diagram highlighting the pure copper brushless motor with 800W output power and 10 m/s chain speed.

2. Safety Information

Always prioritize safety when operating power tools. Failure to follow these instructions may result in serious injury or property damage.

General Safety Warnings:

- **Read all instructions:** Familiarize yourself with the controls and proper use of the tool.
- **Wear appropriate personal protective equipment (PPE):** Always wear safety glasses, hearing protection, gloves, and sturdy footwear. A hard hat is recommended when using the pole pruner.
- **Keep work area clear:** Ensure no bystanders, children, or pets are in the work area.
- **Avoid dangerous environments:** Do not use the tool in wet conditions or in the presence of flammable liquids or gases.
- **Inspect the tool before use:** Check for damaged parts, loose components, or any other condition that may affect its safe operation.
- **Secure grip:** Always maintain a firm grip on the tool with both hands when operating.
- **Double Safety Lock:** The tool features a double locking system to prevent accidental starts. Ensure both the safety button and trigger are engaged for operation.
- **Avoid contact with electrical lines:** Never use the pole pruner near power lines. Maintain a safe distance.
- **Battery Safety:** Use only the specified battery packs. Do not expose batteries to heat or fire. Do not short-circuit battery terminals.



Image: Overview of safety features including strap design, anti-shock foam handle, safety button, debris guard, and tool-free chain adjustment.



Image: Comparison highlighting the benefits of the Anbull tool, such as cordless freedom, telescopic reach, lightweight design, and dual safety lock, compared to traditional methods with wired restrictions, ladder risks, heavy fatigue, and minimal protection.

3. Package Contents

Verify that all items are present and undamaged upon unpacking:

- Anbull 6-inch Mini Chainsaw Head
- Telescopic Pole Attachment
- 2 x 4000mAh Lithium-ion Batteries
- Battery Charger
- Saw Chain (pre-installed)
- Spare Saw Chain
- Guide Bar
- Chain Oil Bottle (empty)
- Shoulder Strap
- User Manual
- Basic Tools (e.g., screwdriver, wrench for chain adjustment if not tool-free)

Note: The product description mentions "Kabelloser Akku Hochentaster" (Cordless Battery Pole Pruner) as included components, which aligns with the 2-in-1 nature.

4. Setup

4.1 Charging the Battery

1. Connect the charger to a power outlet.
2. Insert the battery into the charger. The indicator light will show charging status.
3. Charge time is approximately 3-4 hours for a full charge.
4. Remove the battery once fully charged.



Image: Two 21V 4000mAh lithium-ion batteries, indicating 40-60 minutes endurance and 3-4 hours charging time.

4.2 Assembling the Mini Chainsaw

The chainsaw head usually comes pre-assembled with the chain and guide bar. If not, refer to the detailed instructions for chain installation in the maintenance section.

4.3 Attaching the Telescopic Pole (for Pole Pruner mode)

1. Ensure the battery is removed from the chainsaw head.
2. Align the chainsaw head with the telescopic pole attachment.
3. Push the chainsaw head onto the pole until it clicks securely into place.
4. Engage any locking mechanisms on the pole to secure the connection.
5. Insert a charged battery into the designated slot on the pole handle.
6. Adjust the pole length by releasing the locking collar, extending to the desired length (up to 280cm / 9.2 ft), and re-securing the collar.



Image: Step-by-step guide showing how to insert the mini saw, lock the safety, install the battery, and use the tool.



Image: Illustration of the pole pruner extending up to 9.2 ft (280cm) for a total reach of up to 16 ft.

5. Operating Instructions

5.1 Filling the Oil Tank

Before each use, ensure the chain oil tank is filled with appropriate chain lubricant. This system helps keep the chain smooth and extends its service life.

1. Locate the oil tank cap on the chainsaw head.
2. Unscrew the cap and carefully pour chain lubricant into the tank.
3. Do not overfill. Securely replace the cap.



Image: Close-up of the chainsaw head showing the oiling system and the tool-free chain tensioning knob.



Image: Demonstrates the easy and practical oil tank filling system.

5.2 Starting and Stopping the Tool

1. Ensure a charged battery is securely inserted.
2. To start, press and hold the safety lock button (usually located on the side of the handle).
3. While holding the safety button, squeeze the trigger switch to activate the chain.
4. To stop, release the trigger switch. The chain will stop immediately.

5.3 Cutting Techniques

Always maintain a stable stance and firm grip. Let the tool do the work; do not force it.

- **Mini Chainsaw Mode:** Ideal for cutting firewood, small logs, and low hedges. Hold the tool firmly with both hands.
- **Pole Pruner Mode:** Use the shoulder strap for better balance and reduced fatigue. Make sure the area below the branch is clear. Make relief cuts to prevent bark stripping.
- **Adjustable Head:** The cutting head can pivot 180 degrees, allowing for flexible cutting angles (0-180°). Adjust the head to the optimal angle for the branch you are cutting.



Image: Demonstrates the two modes: handheld mini chainsaw for low cuts and pole pruner for high branches.

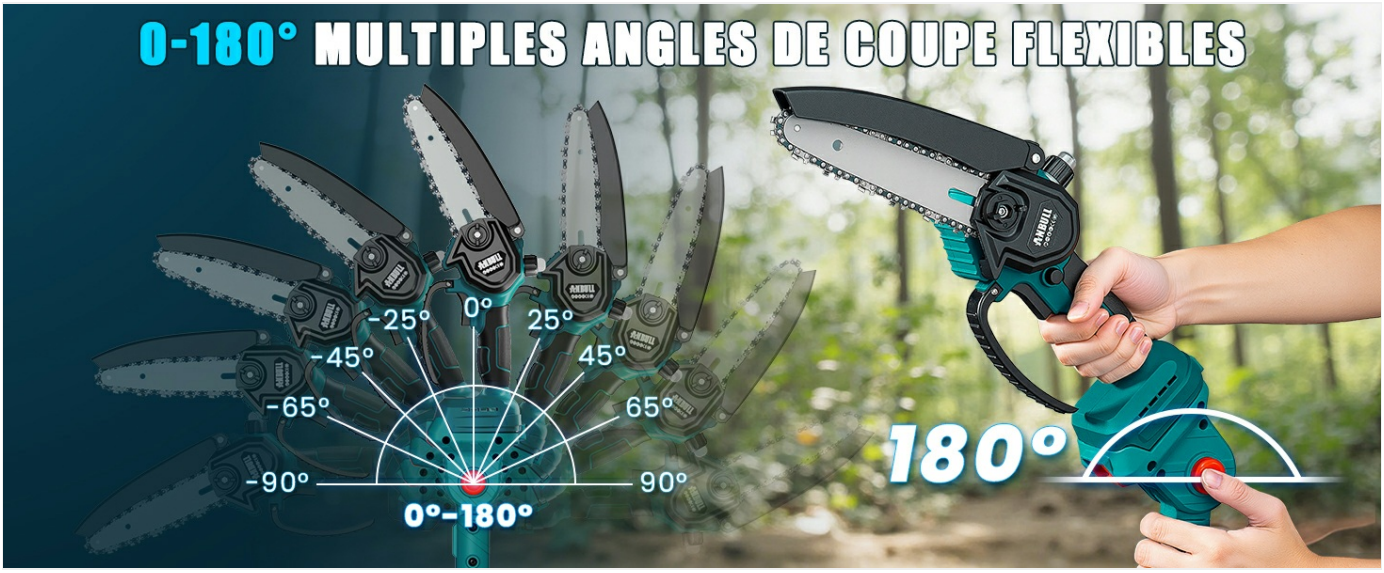


Image: Illustrates the 0-180 degree flexible cutting head for various angles.



Image: Examples of applications: tree pruning, orchard trimming, and wood cutting.

6. Maintenance

Regular maintenance ensures optimal performance and extends the life of your tool. Always remove the battery before performing any maintenance.

6.1 Chain Tensioning

The Anbull BX-29 features tool-free chain tensioning. Check chain tension frequently, especially during initial use.

1. Ensure the tool is off and the battery is removed.
2. Locate the tensioning knob on the side of the chainsaw head.
3. Turn the knob to adjust the chain tension. The chain should be snug against the guide bar but still able to be pulled freely by hand.
4. Do not overtighten the chain, as this can cause premature wear.



Image: Close-up showing the tool-free chain tensioning knob with arrows indicating adjustment direction.

6.2 Chain Lubrication

The tool has an automatic oiling system. Regularly check the oil level and refill as needed. Use only recommended chain lubricant.

6.3 Cleaning

- After each use, clean the tool of sawdust, debris, and sap.
- Use a brush or compressed air. Do not use water or solvents.
- Ensure the ventilation slots are clear to prevent overheating.

6.4 Chain Sharpening/Replacement

A dull chain reduces cutting efficiency and increases strain on the motor. Sharpen the chain regularly or replace it with a new one when necessary. Refer to the spare chain provided.

7. Troubleshooting

Problem	Possible Cause	Solution
Tool does not start	Battery not charged or improperly inserted; Safety lock not engaged; Faulty battery or tool.	Ensure battery is fully charged and correctly inserted. Press safety lock button before trigger. Test with another charged battery if available. Contact support if issue persists.
Chain does not move or moves slowly	Chain too tight; Chain dull or damaged; Low battery charge; Obstruction.	Adjust chain tension. Sharpen or replace chain. Recharge battery. Clear any debris from the guide bar and chain.
Excessive vibration or noise	Loose components; Damaged chain or guide bar; Improper assembly.	Check all connections and tighten if necessary. Inspect chain and guide bar for damage and replace if needed. Reassemble the tool carefully.
Chain not oiling	Oil tank empty; Oil port clogged; Faulty oil pump.	Refill oil tank. Clean oil port. If issue persists, contact customer support.

8. Specifications

Feature	Value
Brand	Anbull
Model Number	BX-29
Power Source	Battery Powered
Motor Type	Brushless Motor
Output Power	800 Watt
Guide Bar Length	6 inches (15 cm)
Chain Speed	10 m/s
Battery Type	21V Li-ion (2x 4000mAh included)
Battery Compatibility	Makita 18V batteries
Battery Endurance	40-60 minutes (per charge)
Battery Charge Time	3-4 hours
Minimum Length (Handheld)	42 cm
Maximum Length (Pole Pruner)	280 cm (9.2 ft)
Total Reach (with user)	Up to 4.8 m (16 ft)
Item Weight	2 Kilograms
Product Dimensions (L x W x H)	128L x 19W x 12.5H cm (assembled pole pruner)



Image: A table summarizing the technical specifications of the Anbull pole pruner.

9. Warranty and Support

Information regarding warranty coverage and customer support is typically provided with your purchase documentation. Please refer to the warranty card or contact the retailer for specific details.
For technical assistance, spare parts, or warranty claims, please contact Anbull customer service through the contact information provided on your product packaging or the official Anbull website.

© 2026 Anbull. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0F9F9XXPZ

More documents and user manuals: **https://manuals.plus/**