Devoko 3*4

Devoko 3x4 Waterproof Garden Gazebo Instruction Manual

Model: 3*4

1. Introduction

Thank you for choosing the Devoko 3x4 Waterproof Garden Gazebo. This manual provides essential information for the safe assembly, proper operation, and effective maintenance of your new gazebo. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

The Devoko gazebo is designed to provide a comfortable and protected outdoor space. It features a robust aluminum alloy frame, 16 hollow polycarbonate roof panels for soft light and UV protection, and four PA polyester fabric curtains for privacy and weather resistance. Its dimensions are approximately 400 cm (length) x 300 cm (width) x 268 cm (height).



Image 1.1: Fully assembled Devoko 3x4 Garden Gazebo, showcasing its design and functionality in an outdoor environment.

2. Safety Information

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- Ensure to anchor the gazebo correctly to prevent it from being carried away by strong winds.
- Avoid prolonged exposure to direct UV rays, as this may affect the longevity of certain materials.
- Always assemble the gazebo on a flat, stable surface.
- Do not use open flames or heating appliances inside or near the gazebo.
- Regularly inspect all components for wear or damage. Replace damaged parts immediately.
- In case of heavy snow accumulation, clear the roof to prevent structural collapse.

3. Package Contents

The package contains all necessary components for assembling the Devoko 3x4 Garden Gazebo. Please verify all parts are present and undamaged before beginning assembly. A detailed parts list is typically included in a separate document or diagram within the packaging.



Image 3.1: Overview of gazebo components, including the aluminum frame, polycarbonate roof panels, and fabric curtains.

4. Setup and Assembly Instructions

Assembly typically requires 3-4 adults. Follow these general steps for assembly. Refer to the specific diagrams and instructions provided in your product packaging for detailed part identification and step-by-step guidance.

4.1. Frame Assembly

1. Unpack all components and lay them out on a clean, flat surface.
2. Begin by assembling the main support pillars and crossbeams according to the provided diagrams. Ensure all connections are secure.
3. Attach the triangular structural pillars for enhanced stability and wind resistance.



Image 4.1: Step-by-step illustration of connecting the main frame components.

4.2. Roof Panel Installation

1. Carefully place the polycarbonate roof panels onto the assembled roof frame.
2. Ensure panels are correctly aligned and secured using the designated fasteners. The 16 hollow panels are designed to provide soft light and UV protection.



Image 4.2: Illustration of securing the roof panels to the gazebo structure.

4.3. Curtain Installation

1. Attach the four PA polyester fabric curtains to the designated tracks or hooks on the gazebo frame.
2. The curtains are designed to be waterproof and can be tied back when not in use or closed for privacy and protection from wind and rain.

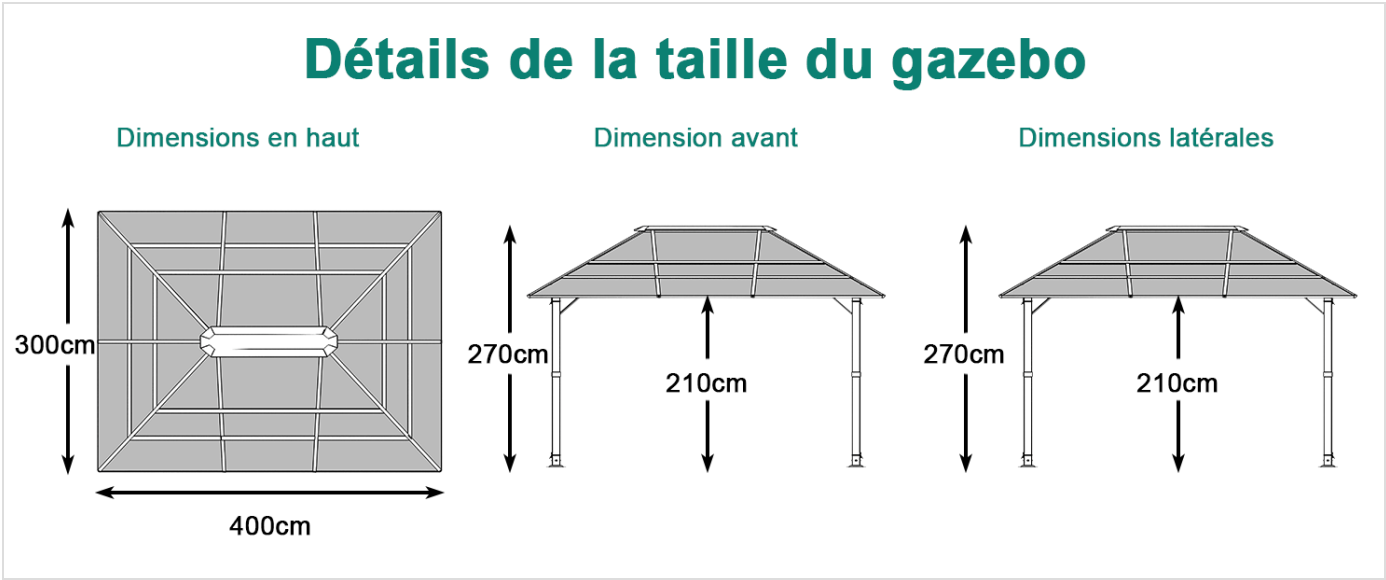


Image 4.3: Illustration of installing the side curtains.

4.4. Anchoring the Gazebo

1. Once fully assembled, secure the gazebo to the ground using the provided 16 expansion screws and 16 ground nails.
2. Proper anchoring is crucial for stability, especially in windy conditions.



Image 4.4: Illustration of anchoring the gazebo for stability.

5. Operating Instructions

5.1. Curtain Usage

The four PA polyester fabric curtains can be adjusted as needed. They can be tied back to allow for an open view and ventilation, or closed to provide privacy and protection from sun, wind, and light rain. The fabric is waterproof.

5.2. Weather Considerations

The gazebo is designed to be waterproof and offers UV protection. However, in conditions of extreme weather, such as very strong winds, heavy snowfall, or severe storms, it is recommended to take precautions. Clear heavy snow from the roof to prevent damage. While the structure is robust, extreme conditions may necessitate temporary disassembly or additional reinforcement.



Image 5.1: The gazebo roof panels are designed to withstand various weather conditions, including snow and rain.

6. Maintenance

- **Cleaning the Frame:** Wipe the aluminum frame with a damp cloth and mild soap. Rinse thoroughly and dry. Avoid abrasive cleaners.
- **Cleaning the Roof Panels:** Clean polycarbonate panels with a soft cloth, warm water, and a non-abrasive cleaner. Do not use harsh chemicals or brushes that could scratch the surface.
- **Cleaning the Curtains:** The polyester fabric curtains can be spot cleaned with mild soap and water. For deeper cleaning, follow care instructions on the fabric label, if available. Ensure they are completely dry before storing or tying back for extended periods to prevent mildew.
- **Seasonal Inspection:** Periodically check all screws, bolts, and anchoring points to ensure they remain tight and secure.
- **Winter Storage:** While durable, consider disassembling and storing the fabric curtains and potentially the roof panels during harsh winter months to extend their lifespan.

7. Troubleshooting

- **Gazebo feels unstable:** Ensure all frame connections are tightened. Verify that the gazebo is properly anchored to the ground using all provided expansion screws and ground nails. Check for uneven ground.
- **Water pooling on roof:** Ensure roof panels are correctly installed and aligned, allowing for proper water runoff. Clear any debris that might obstruct drainage.
- **Curtains not sliding smoothly:** Check the curtain tracks for obstructions or damage. Clean the tracks if necessary.
- **Parts missing or damaged:** Contact Devoko customer support with your purchase details for assistance.

8. Specifications

Feature	Specification
Product Dimensions (L x W x H)	400 x 300 x 268 cm
Model Number	3*4
Brand	Devoko
Material	Aluminum Frame, Polycarbonate Roof Panels, PA Polyester Curtains
Color	Grey
Recommended Use	Shade, Rain Protection, Insect Protection, Privacy for Outdoor Events, Picnics, Camping
UV Protection	Yes
Water Resistance Level	Waterproof
Frame Material	Aluminum
Pole Material Type	Aluminum

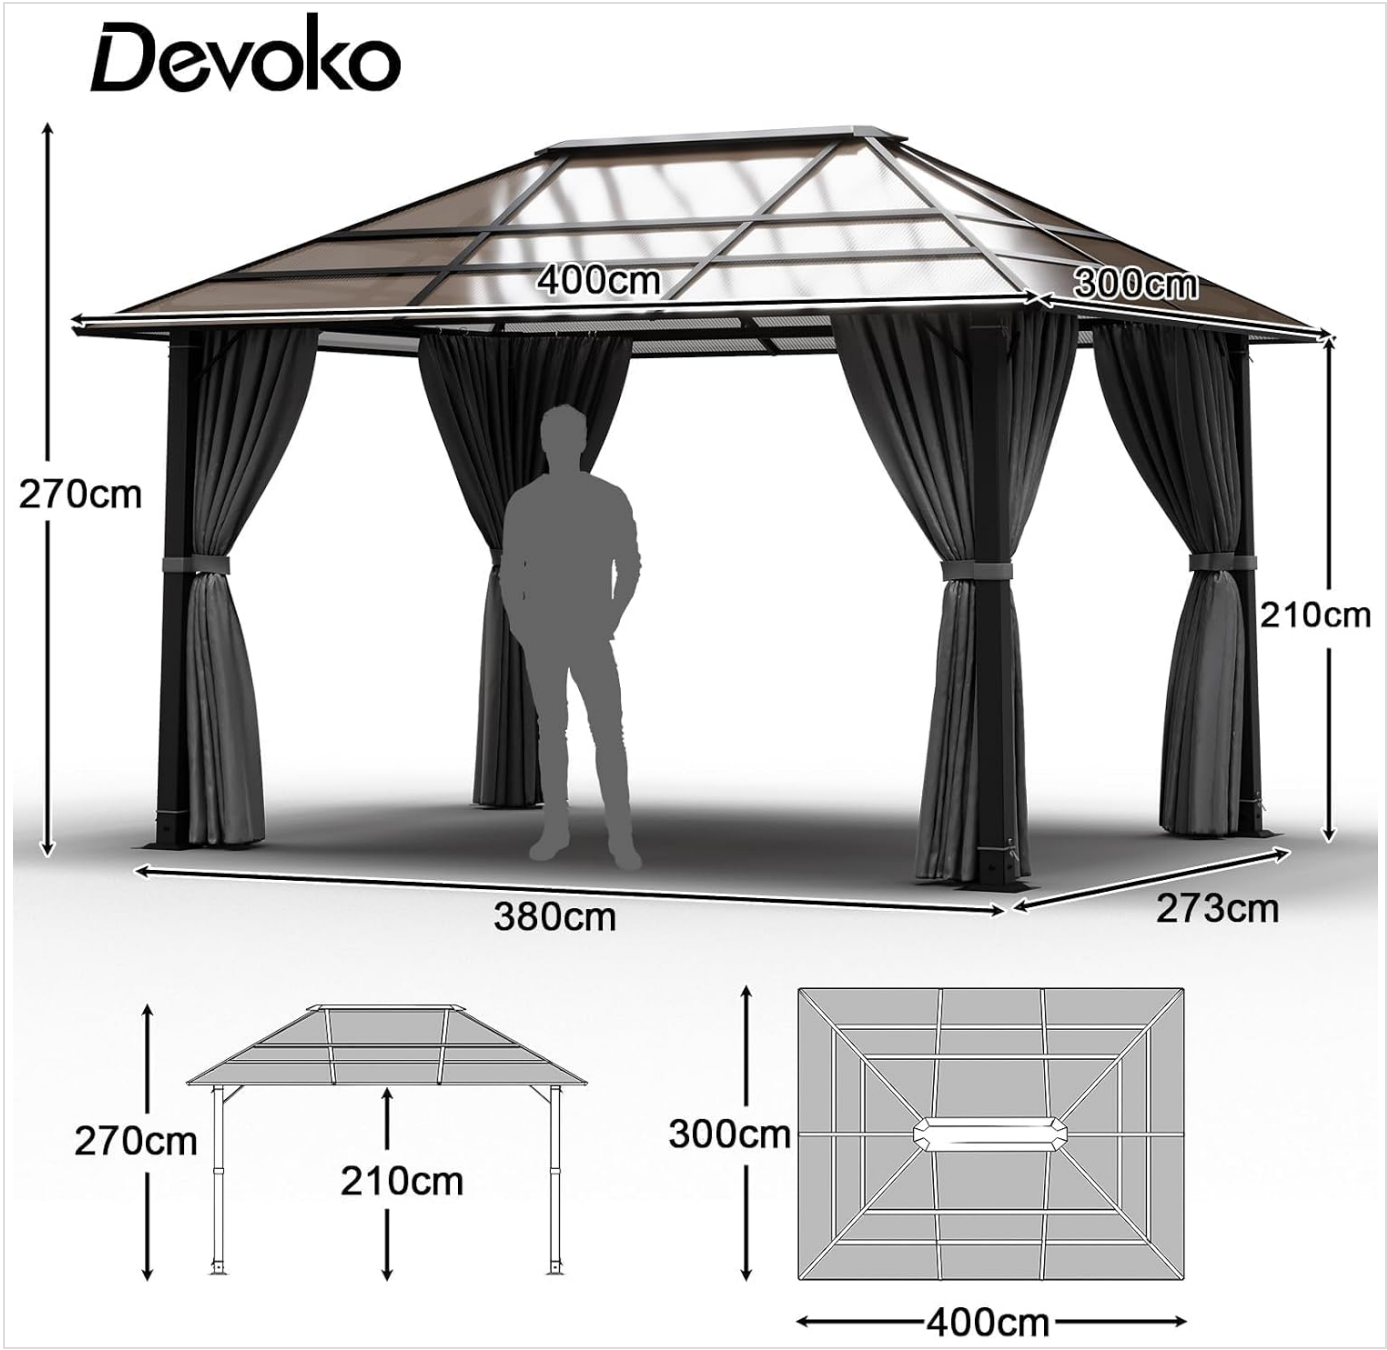


Image 8.1: Detailed dimensions of the gazebo.

9. Warranty and Support

For warranty information, please refer to the documentation included with your purchase or contact Devoko customer service directly. Devoko is committed to customer satisfaction and offers support for product-related inquiries. Please have your model number (3*4) and purchase details ready when contacting support.
Contact information can typically be found on the product packaging or the official Devoko website.

© 2025 Devoko. All rights reserved.