Meseto KF-JN-02-new

Meseto Portable Espresso Machine User Manual

Model: KF-JN-02-new

Product Overview

The Meseto Portable Espresso Machine is a versatile 3-in-1 coffee maker designed for convenience and high-quality espresso on the go. It supports ground coffee, NS capsules, and DG capsules, offering flexibility for various coffee preferences. Featuring fast self-heating capabilities and a powerful 20-bar pressure system, it ensures a smooth and rich espresso with crema. Its compact, wireless design, powered by a 7500mAh rechargeable battery, makes it ideal for travel, camping, hiking, and daily commutes.



Figure 1: Meseto Portable Espresso Machine and its versatile coffee preparation options.

What's Included

- Espresso machine x1
- Nespresso Capsule holder x1
- DolceGust Capsule holder x1
- Coffee Powder holder x1
- Coffee Powder Cap x1
- Type-C USB Cable x1
- Scoop x1
- Portable Bags x1



Figure 2: All components included in the Meseto Portable Espresso Machine package.

Setup

1. **Initial Charge:** Before first use, fully charge the espresso machine using the provided Type-C USB cable. The machine features a 7500mAh rechargeable battery.
2. **Component Assembly:** Identify the appropriate holder for your desired coffee type: Nespresso Capsule holder, DolceGust Capsule holder, or Coffee Powder holder.
3. **Water Tank:** Ensure the water tank is clean and ready for filling.



Figure 3: The compact design allows for easy portability and setup anywhere.

Operating Instructions

The Meseto Portable Espresso Machine offers three ways to prepare your coffee: using ground coffee, NS capsules, or DG capsules. Follow the steps below based on your chosen method.

General Operation Steps:

1. **Insert Coffee:** Choose the correct capsule or coffee powder holder and fill it. For ground coffee, use the provided scoop.
2. **Screw Portafilter:** Securely screw the mounted portafilter onto the coffee machine.

3. **Pour Water:** Add 40-60ml of hot or cold water to the tank.
4. **Brew:**
    - For **hot water extraction** (if water is already hot): Long press the power button to extract directly.
    - For **cold water heating and extraction:** Double click the power button to heat the water (takes approximately 5 minutes). Once heated, long press the power button for automatic extraction.

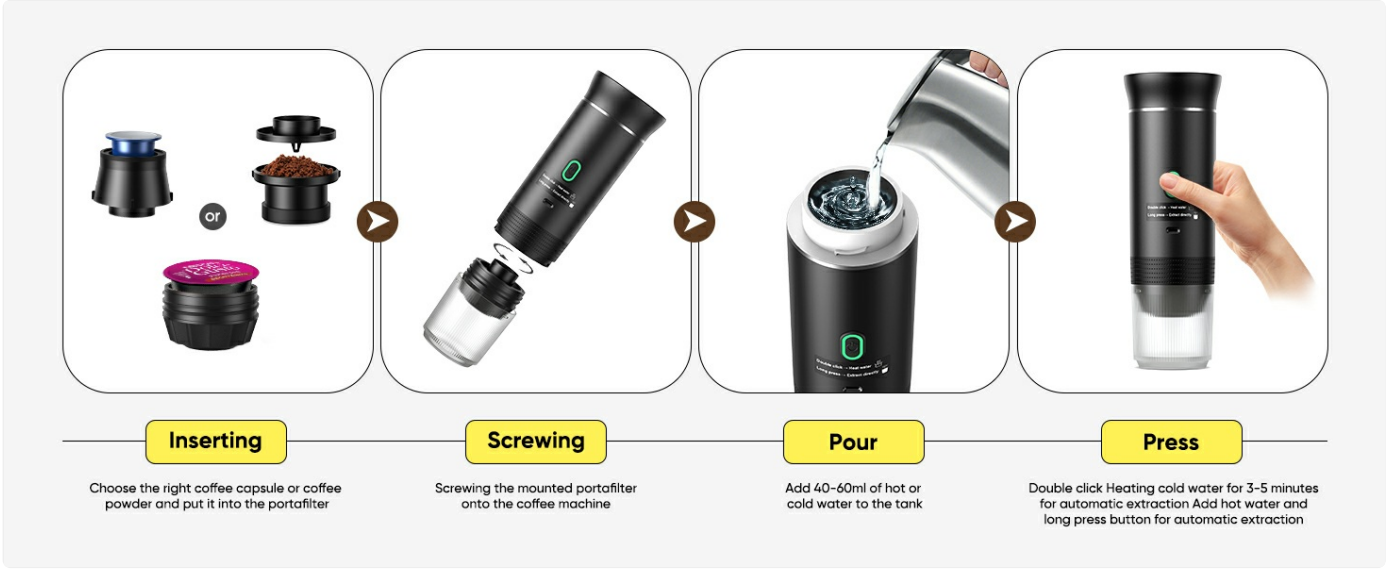


Figure 4: Visual guide for preparing espresso with the machine.

Compatibility:

The machine is compatible with ground coffee, NS capsules, and DG capsules. Ensure you use the correct holder for each type.



Figure 5: Overview of compatible coffee capsule types for the machine.

Key Features in Operation:

- **20-Bar Pressure:** Ensures optimal extraction for a rich, smooth espresso with crema.
- **Self-Heating:** Heats cold water to the perfect temperature in approximately 300 seconds (5 minutes).
- **Battery Life:** A fully charged 7500mAh battery can brew 4-5 cups using 30-40ml of cold water, 2-3 cups using 70ml of cold water, and over 150 cups with pre-heated hot water.



Figure 6: Battery performance based on water temperature and volume.

Maintenance

Regular cleaning ensures the longevity and optimal performance of your Meseto Portable Espresso Machine.

1. **Daily Cleaning:** After each use, rinse the coffee powder holder/capsule holder and the collection cup with warm water.
2. **Deep Cleaning:** Periodically, disassemble the removable parts and wash them thoroughly with mild soap and water. Ensure all coffee residues are removed.
3. **Drying:** Allow all components to air dry completely before reassembling or storing.
4. **Machine Exterior:** Wipe the exterior of the machine with a damp cloth. Do not immerse the main unit in water.

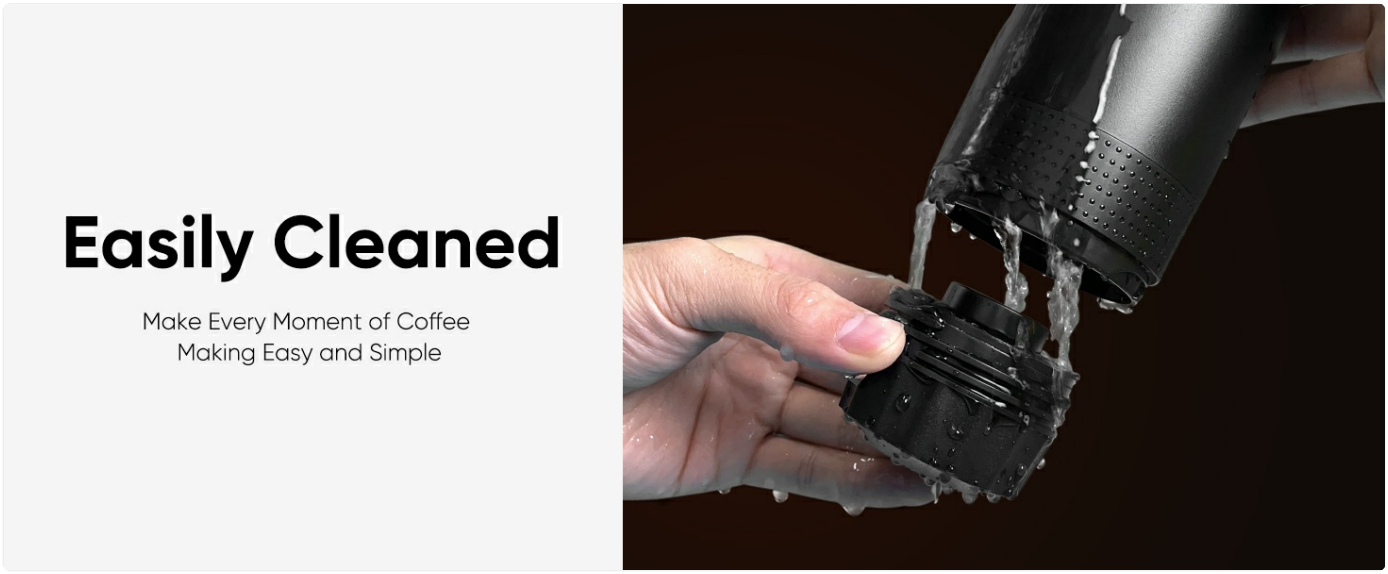


Figure 7: The machine's components are designed for easy cleaning.

Troubleshooting

Problem	Possible Cause	Solution
Machine does not turn on.	Low battery or not charged.	Charge the machine fully using the USB-C cable.
No water extraction.	Insufficient water in tank or blockage.	Ensure water tank is filled. Check for any blockages in the coffee holder or machine.
Coffee is weak or watery.	Incorrect coffee grind, insufficient coffee, or capsule issue.	Use finer ground coffee, ensure enough coffee is used, or check capsule is properly inserted.
Water not heating.	Not double-clicked for heating or low battery.	Double click the power button to activate heating. Ensure battery is sufficiently charged.

Specifications

- **Brand:** Meseto
- **Model Name:** KF-JN-02-new
- **Color:** Black
- **Product Dimensions:** 2.8"D x 2.8"W x 9.5"H
- **Item Weight:** 1.7 Pounds
- **Coffee Maker Type:** Espresso Machine
- **Coffee Input Type:** Capsule, Ground
- **Pressure:** 20 Bar
- **Battery:** 7500mAh rechargeable (3 12V batteries included)
- **Charging:** USB-C
- **Water Heating Time:** Approximately 300 seconds (5 minutes) for cold water
- **Filter Type:** Reusable

Warranty and Support

Meseto offers **12 months of technical support** for this product. If you encounter any questions or issues, please contact

our customer service team. You can typically reach us by navigating to your order details and selecting "Contact Seller." We are committed to resolving any product-related concerns you may have.

© 2025 Meseto. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question