Lubluelu Upgraded 45kPa Cordless Vacuum Cleaner

Lubluelu Upgraded 45kPa Cordless Vacuum Cleaner User Manual

Model: Upgraded 45kPa Cordless Vacuum Cleaner

Brand: Lubluelu

Introduction

Thank you for choosing the Lubluelu Upgraded 45kPa Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before first use and keep it for future reference.

Important Safety Instructions

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bin and/or filters in place.
- Turn off all controls before unplugging.

- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store the appliance indoors. Put away after use to prevent accidents.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance.

Package Contents

Please check the package contents upon unboxing. If any items are missing or damaged, please contact customer support.

- Main Engine (Vacuum Unit)
- Electric Floor Brush with LED Headlights
- Soft Dusting Brush
- Long Suction Nozzle (Crevice Tool)
- Wall Bracket
- Power Adapter
- HEPA Filter (2 included: 1 pre-installed, 1 spare)
- Hair Cleaning Tool
- Adjustable Metal Tube
- Rechargeable Lithium-ion Battery (7x2200mAh)
- User Manual



Image: Lubluelu Cordless Vacuum Cleaner with all included accessories, including the main unit, extension wand, floor brush, crevice tool, dusting brush, and spare filters.



Image: A detailed diagram showing all components included in the package, numbered for easy identification: Main Engine, Electric Floor Brush, Soft Dusting Brush, Long Suction Nozzle, Wall Bracket, Adapter, HEPA Filter, Hair Cleaning Tool, Adjustable Metal Tube, Battery, User Manual, and Gift Package.

Setup and Assembly

1. **Charge the Battery:** Before first use, fully charge the battery. Connect the power adapter to the battery and plug it into a wall outlet. The battery indicator lights will show charging status. A full charge takes approximately 4 hours.
2. **Attach the Battery:** Slide the fully charged battery into the main engine unit until it clicks securely into place.
3. **Assemble the Vacuum:**
    - For stick vacuum mode: Connect the adjustable metal tube to the main engine unit. Then, attach the electric floor brush to the other end of the metal tube. Ensure all connections click securely.
    - For handheld mode: Directly attach desired accessories (soft dusting brush, long suction nozzle) to the main engine unit.
4. **Wall Mount Installation (Optional):** Choose a suitable location near a power outlet. Secure the wall bracket to the wall using the provided screws and anchors. This allows for convenient storage and charging.



Image: A user assembling the vacuum cleaner by connecting the main engine to the extension wand and floor brush, demonstrating the modular design.



Image: An illustration showing the detachable 7x2200mAh Lithium-ion battery, highlighting its quick charge time of 4 hours and a running time of 15-50 minutes depending on the mode.

Operating Instructions

Power On/Off and Mode Selection

- To turn on the vacuum, press the power button on the main engine. The vacuum will start in the default mode.
- Press the mode selection button to cycle through the three power modes: Eco, Standard, and MAX.
- To turn off the vacuum, press the power button again.

Cleaning Modes and Runtime

Mode	Suction Power	Approximate Runtime	Recommended Use
Eco	Standard	Up to 50 minutes	Light debris, hard floors, quick touch-ups.
Standard	Strong	Up to 25 minutes	Daily house vacuuming, carpets.
MAX	Powerful (45KPa)	Up to 15 minutes	Deep cleaning, embedded dirt, sudden spills.

Using Attachments

- **Electric Floor Brush:** Ideal for both hard floors and carpets. The built-in LED headlights illuminate dust and debris, making it easier to spot dirt in dimly lit areas. The V-shape brushroll helps prevent hair tangles.
- **Long Suction Nozzle (Crevice Tool):** Perfect for reaching tight spaces, corners, edges, and between couch cushions.
- **Soft Dusting Brush:** Use for delicate surfaces, upholstery, curtains, and car interiors.
- **Adjustable Metal Tube:** Extends the reach for cleaning high areas like ceilings or under furniture without bending.



Image: Demonstrates the electric floor brush cleaning a hard floor with scattered debris, and the handheld unit with dusting tool and long crevice tool for detailed cleaning.



Image: Shows the vacuum being used in different situations: cleaning around a cat litter box, as a handheld for quick spills, and reaching under furniture.



Image: Close-up of the electric floor brush with its three LED headlights illuminating dirt on the floor, demonstrating its ability to reveal hidden debris.



Image: Illustrates the 160-degree rotating and 90-degree tilting capabilities of the floor brush, along with its LED headlights, for flexible cleaning.



Image: Shows the wider diameter and V-shape comb design of the brush roll, designed for quick cleaning and reducing hair tangling on carpets and hard floors.



Image: The Lubluelu vacuum cleaner standing upright on its own, demonstrating its self-standing feature for convenient pausing during cleaning or compact storage.



Image: Depicts the vacuum cleaner being used in different home environments, showcasing its versatility for cleaning floors, reaching high areas, and cleaning furniture.



Image: The Lubluelu vacuum cleaner standing upright on its own, demonstrating its self-standing feature for convenient pausing during cleaning or compact storage.

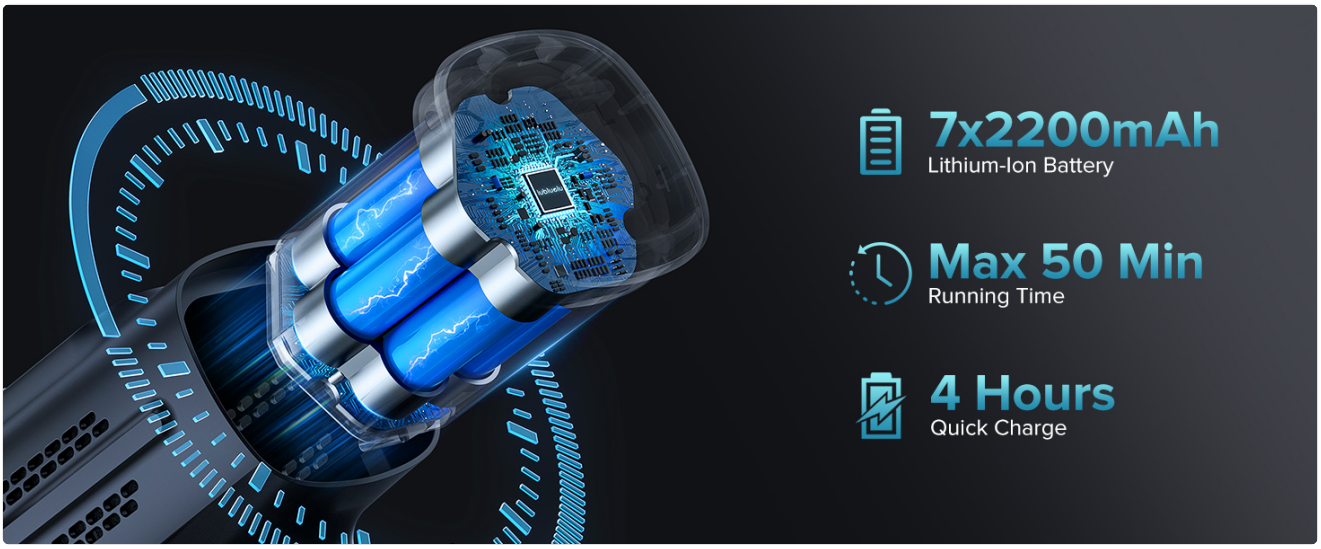


Image: A person effortlessly carrying the lightweight Lubluelu vacuum cleaner up stairs, and a child easily operating it on a hard floor, emphasizing its ease of use.



Image: A person vacuuming a hard floor with the Lubluelu vacuum cleaner while a child plays nearby, illustrating its quiet operation and suitability for family environments.

Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dustbin

- The dustbin has a capacity of 1.5 liters. Empty the dustbin regularly, ideally after each use or when the MAX fill line is reached.
- To empty, hold the main engine unit over a trash can. Press the dustbin release button to open the bottom flap and release debris.
- The one-touch hygienic dustbin ejects debris without direct contact.

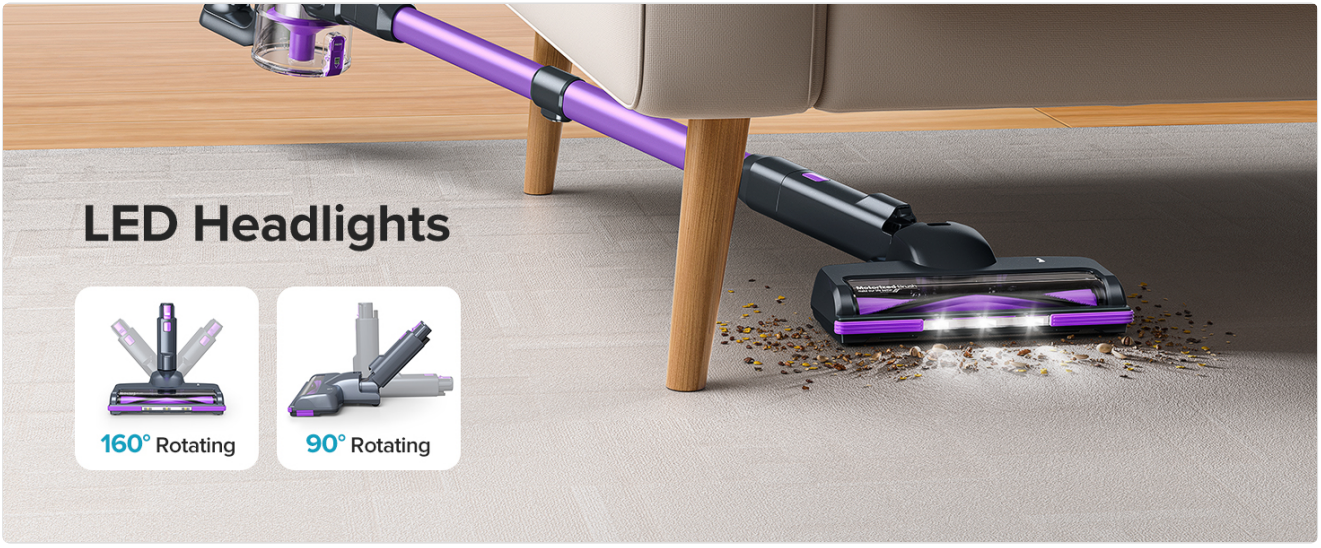


Image: A hand pressing a button to release the bottom of the dustbin, allowing collected debris to fall directly into a trash can, demonstrating the one-click emptying feature.

Cleaning the Filters

The vacuum features a 5-stage filtration system:

1. Cyclone Filter
2. Metal Mesh Filter
3. Top H11 HEPA Filter

4. 220W Brushless Motor Filter
5. Sponge Filter

- All filters are washable. To clean, twist and pull out the filter assembly from the dustbin. Separate the components.
- Rinse the filters under cold running water until the water runs clear. Do not use detergent.
- Allow all filter parts to air dry completely for at least 24 hours before reassembling and placing back into the vacuum. Ensure they are completely dry to prevent mold or damage to the motor.
- It is recommended to replace the HEPA filter quarterly for optimal performance and air purification.



Image: A cutaway diagram illustrating the 5-layer filtration system, including the Cyclone Filter, Metal Mesh Filter, Top H11 HEPA Filter, 220W Brushless Motor Filter, and Sponge Filter, designed for deep cleaning and air purification.

Cleaning the Brush Roll

- Periodically check the brush roll for tangled hair or debris.
- To remove the brush roll, locate the release tab on the side of the floor brush head and open the cover. Lift out the brush roll.
- Use the provided hair cleaning tool or scissors to cut and remove any tangled hair or fibers.
- Reinsert the brush roll and close the cover securely.

Troubleshooting

Problem	Possible Cause	Solution
Vacuum not turning on	Battery not charged or not properly installed.	Ensure battery is fully charged and clicked securely into place.
Low suction power	Dustbin full, filters clogged, or brush roll obstructed.	Empty dustbin. Clean or replace filters. Remove obstructions from brush roll. Check for blockages in the tube.
Brush roll not spinning	Hair or debris tangled in brush roll, or brush roll not properly installed.	Clean brush roll. Ensure it is correctly reinserted and the cover is closed.

Problem	Possible Cause	Solution
Short runtime	Battery not fully charged, or vacuum used primarily on MAX mode.	Fully charge battery. Use Eco or Standard mode for longer cleaning sessions.
Unusual noise	Obstruction in the air path or damaged component.	Check for blockages in the nozzle, tube, or dustbin. If noise persists, contact customer support.

Specifications

- **Brand:** Lubluelu
- **Model:** Upgraded 45kPa Cordless Vacuum Cleaner
- **Special Features:** BLDC Motor, Cordless, Low Noise (<70dB), Detachable Battery, Powerful Suction, Self-standing, Lightweight (4.6lb)
- **Filter Type:** Foam, HEPA Filter, Sealed centrifugal, Stainless Mesh (5-stage filtration)
- **Capacity:** 1.5 Liters (Dustbin)
- **Runtime:** Up to 50 minutes (Eco mode)
- **Charging Time:** 4 Hours
- **Recommended Uses:** Bed, Car, Pet Hair, Sofa, Carpet, Hard Floor
- **Color:** Purple
- **Product Dimensions:** 10"L x 8"W x 4.7"H
- **Item Weight:** 4.59 pounds
- **Battery:** 1 Lithium Polymer battery required (included)
- **Number of Speeds:** 3 (Eco, Standard, MAX)
- **Control Method:** Push Button
- **UPC:** 772060166216

Warranty and Support

Your Lubluelu vacuum cleaner comes with a comprehensive**24-month warranty** covering the motor, battery, and all components.
For any questions, concerns, or warranty claims, please contact our US support team:

- **Phone:** +1(256)384-8884 (Mon-Fri 9 AM - 5 PM PST)
- **Response Time:** 24-hour response

You can also visit the official Lubluelu store for more information and support:Lubluelu Store on Amazon



Image: Details on Lubluelu's professional services and guarantees, including a 90-Day Full Refund, 24-Month Warranty, and 7x24h Customer Service.

Product Videos

Your browser does not support the video tag.

Video: A review demonstrating the Lubluelu Cordless Vacuum Cleaner's features, including its quiet operation, lightweight design, and cleaning capabilities. This video highlights the balance between weight and run times, and its effectiveness on various surfaces.

Your browser does not support the video tag.

Video: An Italian review showcasing the unboxing and assembly of the Lubluelu Cordless Vacuum Cleaner, demonstrating its accessories and ease of use. It also highlights the vacuum's performance on different types of debris and its portability.

© 2025 Lubluelu. All rights reserved.