DEZLTID U310-EEA

DEZLTID 14-inch Android 14 Tablet User Manual

Model: U310-EEA | Brand: DEZLTID

1. Introduction and Overview

This manual provides comprehensive instructions for the DEZLTID 14-inch Android 14 Tablet, Model U310-EEA. It covers essential information regarding setup, operation, maintenance, and troubleshooting to ensure optimal performance and user experience.

The DEZLTID 14-inch tablet is designed for productivity and entertainment, featuring a 2000x1200 FHD display, 36GB RAM (12GB+24GB) and 256GB ROM (expandable up to 1TB), an 8-core 2.0GHz CPU, and a large 11580mAh battery. It operates on Android 14, offering enhanced performance, privacy controls, and multitasking capabilities like split-screen functionality.



Image: Front and back view of the DEZLTID 14-inch Android 14 Tablet, highlighting its sleek design and camera placement.



Image: Infographic detailing key features including MT6769 8-core processor, 11580mAh battery, 14.1-inch 2000x1200 FHD display, 4 speakers, 36GB+256GB+1TB storage, 13MP+5MP cameras, and Android 14.

2. Setup

2.1. What's in the Box

Upon unboxing your DEZLTID tablet, please ensure all the following items are present:

- Tablet x1
- Protective cover x1
- Stylus x1
- Type-C data cable x1
- 18W Rapid charger x1
- Card eject pin x1

2.2. Initial Charging

Before first use, fully charge your tablet using the provided Type-C data cable and 18W rapid charger. Connect the Type-C cable to the tablet's charging port and the charger to a power outlet. The battery indicator on the screen will show charging progress.

2.3. Powering On/Off

- **To Power On:** Press and hold the power button located on the side of the tablet until the DEZLTID logo appears on the screen.
- **To Power Off:** Press and hold the power button until a power menu appears. Select "Power off" from the options.
- **To Restart:** From the power menu, select "Restart".

2.4. Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup wizard. Follow the on-screen prompts to:

- Select your preferred language.
- Connect to a Wi-Fi network.
- Accept terms and conditions.
- Sign in to your Google account (optional, but recommended for app downloads).
- Set up screen lock (PIN, pattern, password, or face unlock).

2.5. Inserting a TF Card (MicroSD Card)

The tablet supports expandable storage up to 1TB via a TF (MicroSD) card. Locate the SIM/TF card tray on the side of the tablet. Use the provided card eject pin to open the tray. Carefully place the TF card into the designated slot and reinsert the tray until it clicks into place.

3. Operating Instructions

3.1. Basic Navigation (Android 14)

Your tablet runs on Android 14, offering an intuitive user interface. Key navigation gestures include:

- **Home Screen:** Swipe up from the bottom of the screen to go to the home screen.
- **App Drawer:** Swipe up from the home screen to access all installed applications.
- **Recent Apps:** Swipe up from the bottom and hold to view recently opened applications.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to access notifications and quick settings toggles.



Image: Visual representation of Android 14 features including Parallel View, Convenient Taskbar, Privacy and Security, Managing Permissions, Parental Control, and Face Unlock.



Image: A screenshot of the Android 14 interface on the tablet, showing various app icons and system settings, emphasizing smoother multitasking and improved privacy controls.

3.2. Connectivity (Wi-Fi & Bluetooth)

The tablet supports 5G/2.4G Dual WiFi and Bluetooth 6 for fast and reliable connections.

- **Wi-Fi:** Go to *Settings > Network & internet > Wi-Fi* Turn on Wi-Fi, select your desired network, and enter the password if prompted.
- **Bluetooth:** Go to *Settings > Connected devices > Connection preferences > Bluetooth* Turn on Bluetooth and pair with compatible devices like headphones or speakers.



Image: Graphic illustrating 5G connectivity with icons for 2.4+5G WiFi and Bluetooth 6, indicating faster browsing, streaming, and downloads.

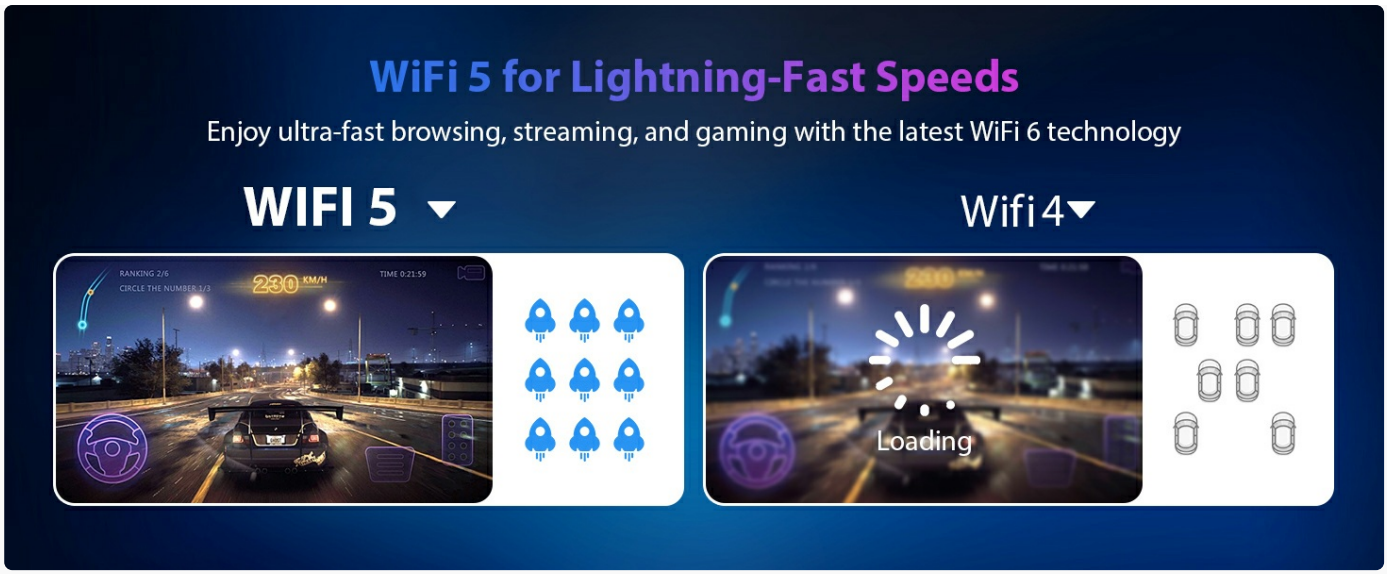


Image: Comparison graphic showing the speed difference between WiFi 5 and WiFi 4, highlighting the tablet's fast WiFi capabilities for gaming and streaming.

3.3. Camera Usage

The tablet is equipped with a 13MP rear camera and an 8MP front camera for capturing photos and videos.

- Open the Camera app from your home screen or app drawer.
- Tap the shutter button to take a photo.
- Switch between front and rear cameras using the camera toggle icon.
- Select video mode to record videos.



Image: Depiction of the tablet's dual cameras, showing a video call on the screen and emphasizing the 13MP rear and 8MP front camera capabilities.



Image: Examples of photos taken with the tablet's 13MP rear and 8MP front cameras, showcasing clarity and detail in various settings.

3.4. Audio and Display

Experience immersive audio with the tablet's 4 stereo Dolby chamber box speakers and vibrant visuals on the 14-inch 2000x1200 FHD IPS display.

- **Volume Control:** Use the volume buttons on the side of the tablet to adjust audio levels.
- **Display Settings:** Adjust brightness, font size, and display mode in *Settings > Display*.
- **Screen Mirroring:** Utilize the wireless display function to mirror your tablet's screen to a compatible external display. This can typically be found in *Settings > Connected devices > Connection preferences > Cast* or similar.



Image: A visual emphasizing the 14.1-inch Full HD display with 2000x1200 resolution and the presence of 4 speakers for an immersive viewing experience.



Image: A person wearing headphones and playing a guitar, with sound waves emanating from the tablet, illustrating the immersive sound provided by the 4 speakers.

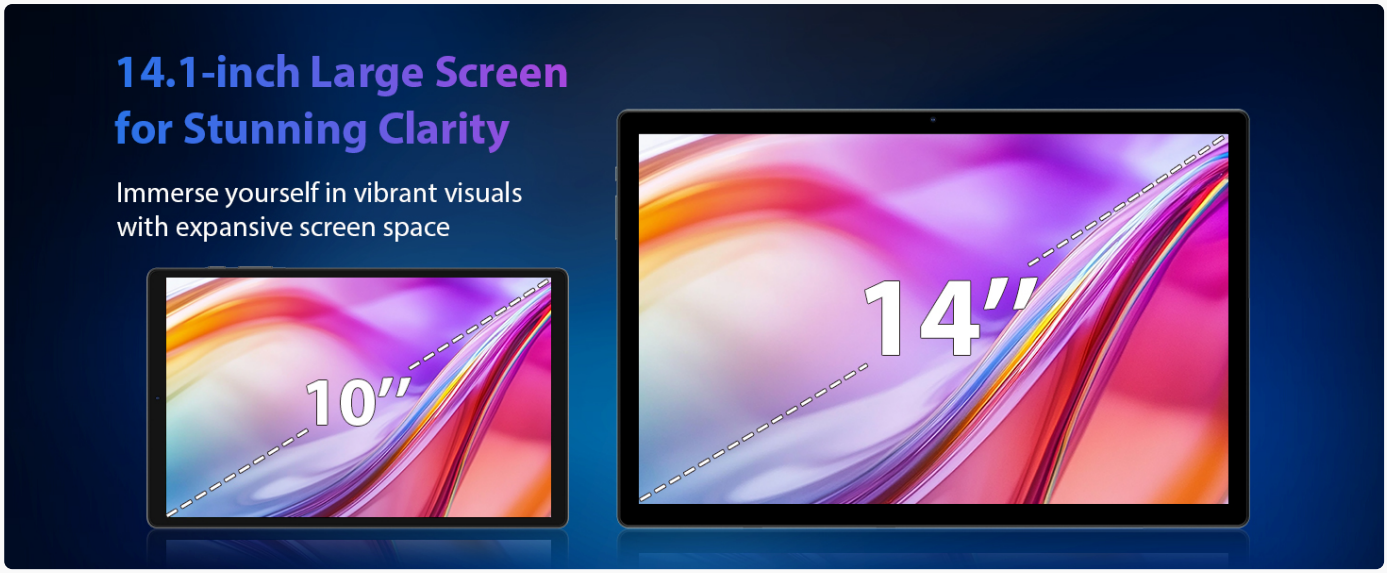


Image: A comparison showing a 10-inch tablet next to the 14-inch DEZLTID tablet, highlighting the larger screen size for an expansive visual experience.



Image: The tablet displaying a vibrant animated scene, emphasizing the 2000x1200 2K FHD resolution for crisp and vivid details.

3.5. Multitasking and Productivity

The Android 14 tablet supports 2-window split-screen functionality, allowing you to run two apps simultaneously for enhanced productivity.

- **Split Screen:** Open an app, then swipe up from the bottom and hold to access recent apps. Tap the app icon at the top of the app's preview and select "Split screen". Choose a second app to open alongside it.
- **Stylus Usage:** Use the included stylus for precise navigation, drawing, note-taking, or sketching ideas.
- **GPS:** The built-in GPS allows for accurate navigation and location-based services.

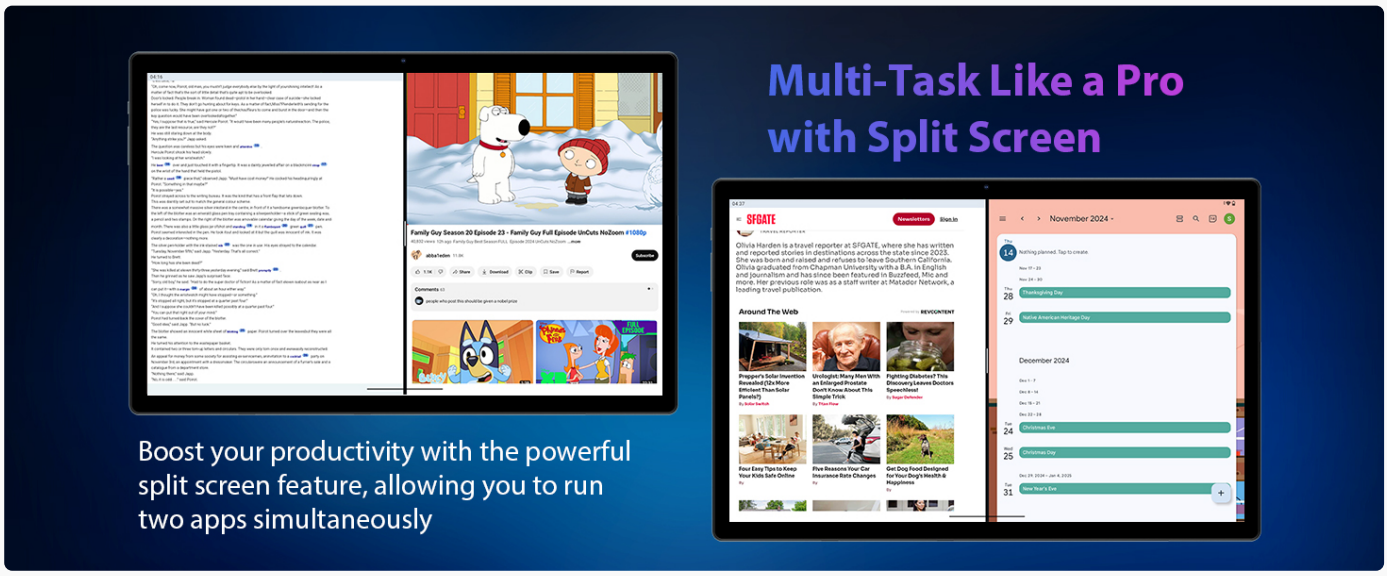


Image: The tablet screen showing two applications running side-by-side in split-screen mode, demonstrating the multitasking capability.

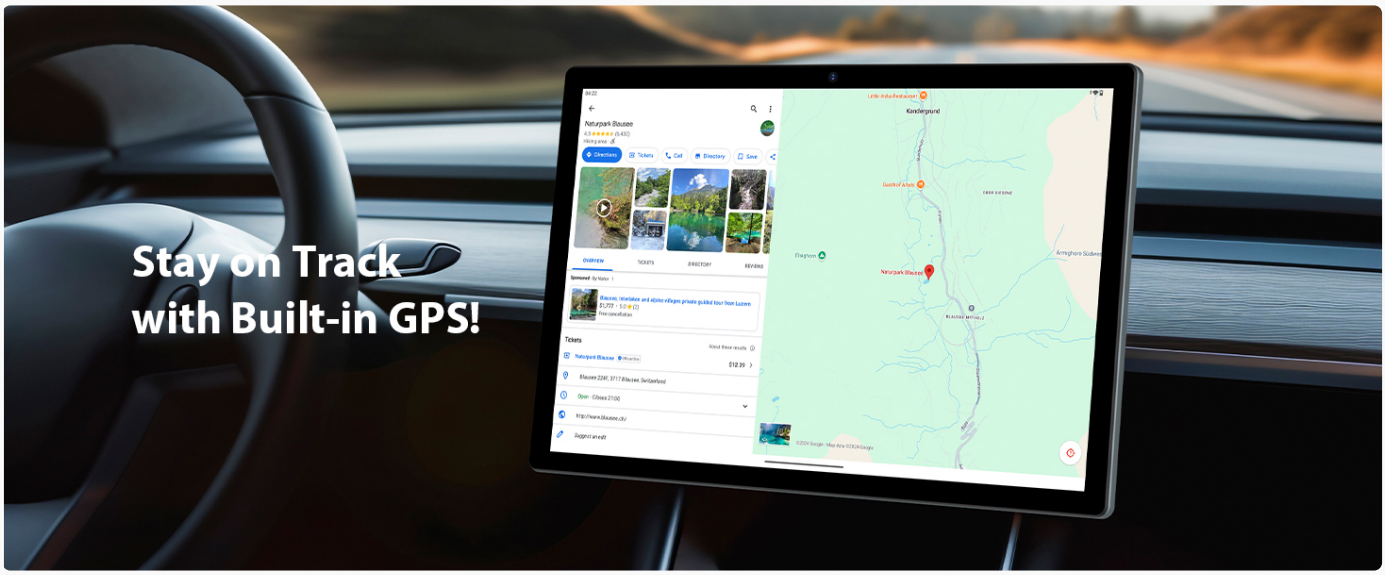


Image: The tablet mounted in a car, displaying a map application with GPS navigation, indicating the built-in GPS functionality.

4. Maintenance

4.1. Battery Care

The tablet features a large 11580mAh battery. To maximize battery lifespan:

- Avoid extreme temperatures.

- Do not let the battery drain completely before recharging regularly.
- Use the original charger and cable.
- Unplug the charger once the battery is full.

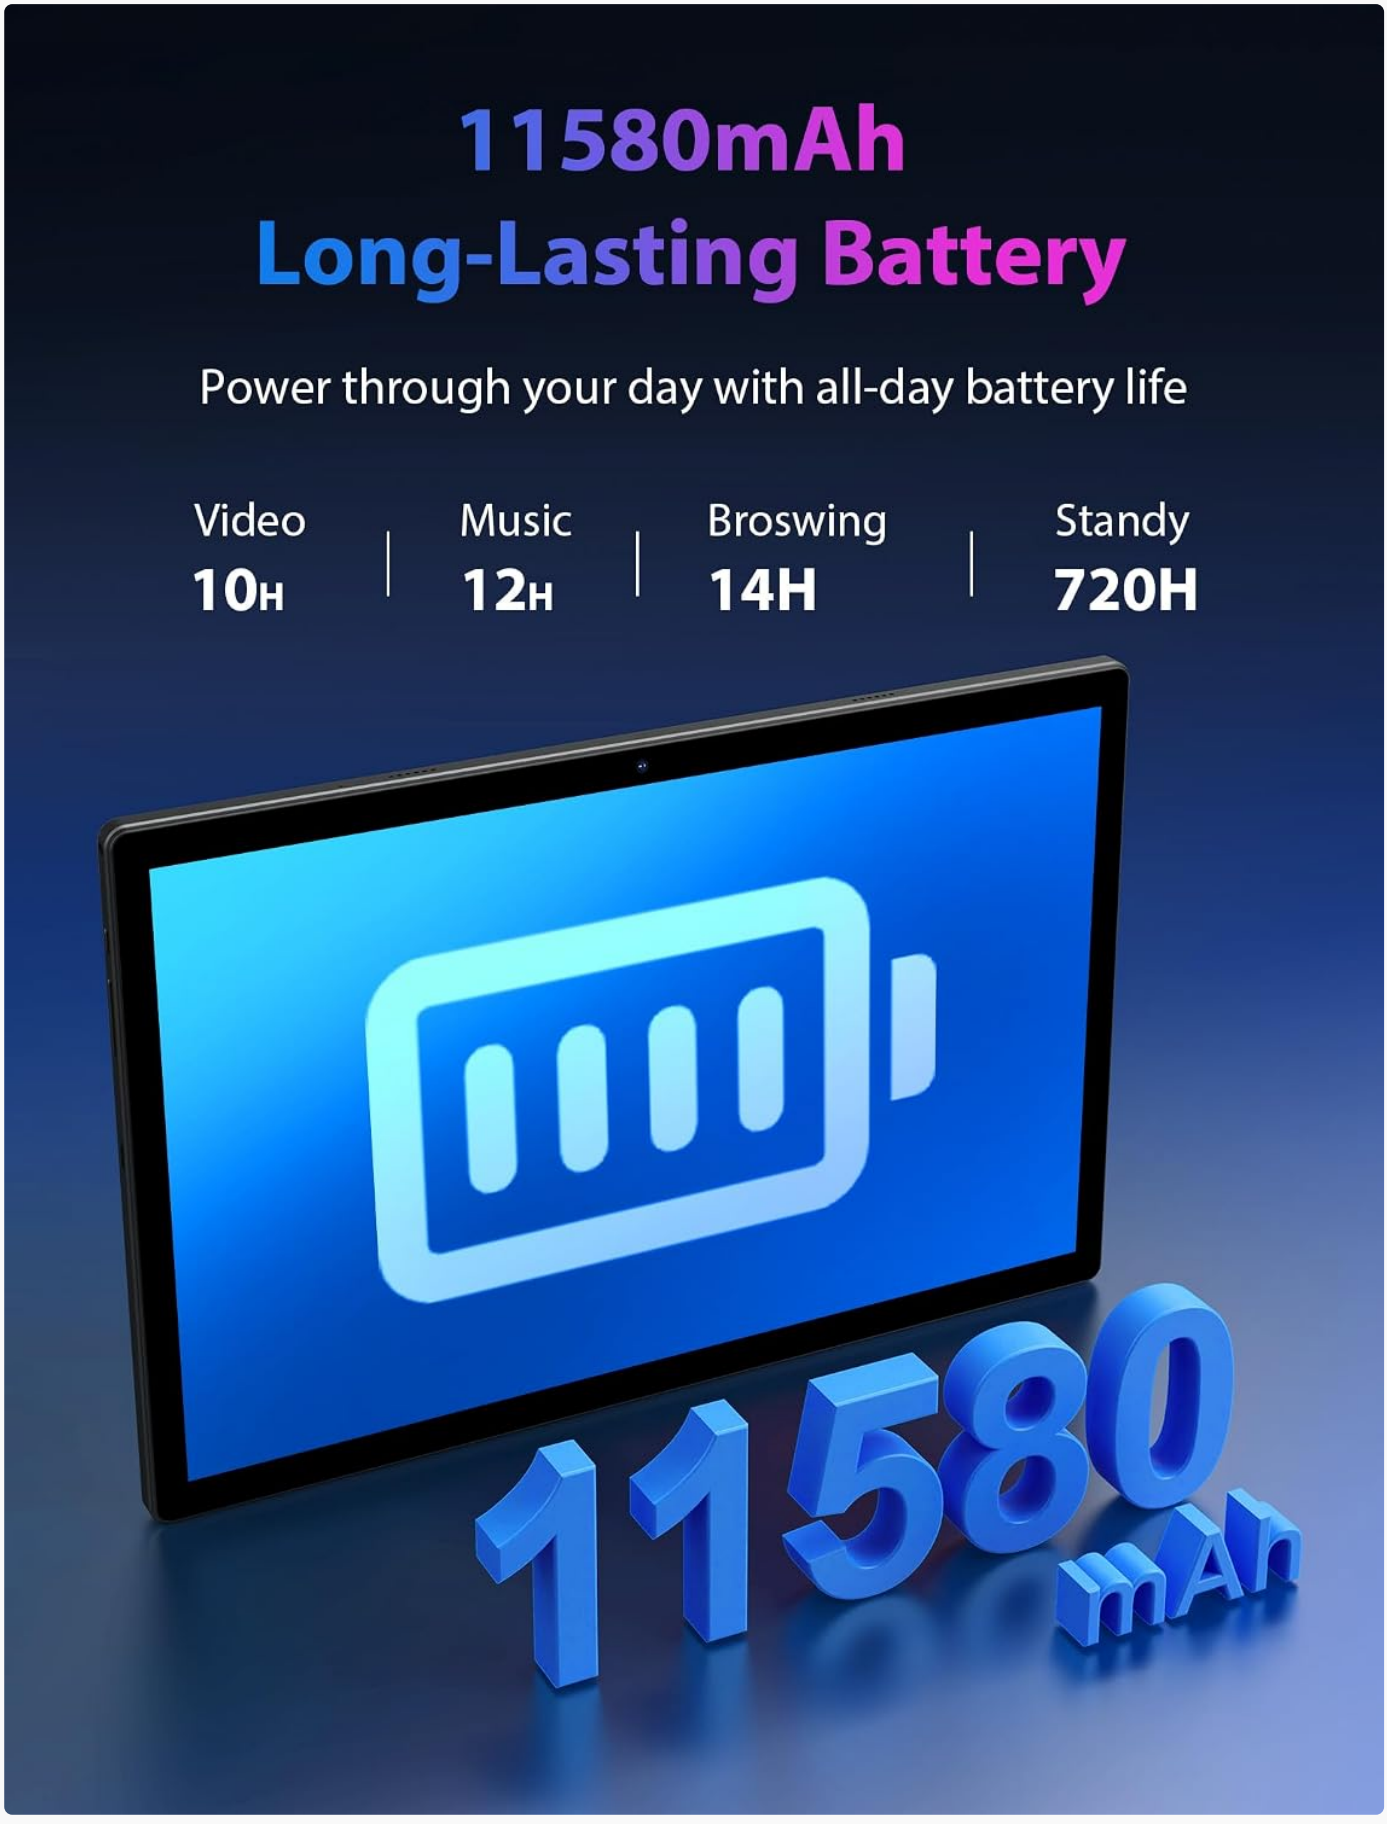


Image: A visual representation of the tablet's 11580mAh battery, with estimated usage times: 10H Video, 12H Music, 14H Browsing, 720H Standby.



Image: An internal view of the tablet highlighting the 11580mAh battery, with icons indicating 10H Video, 12H Music, 14H Browsing, and 720H Standby time.

4.2. Cleaning the Device

To clean your tablet:

- Power off the device before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a screen cleaner.
- Avoid harsh chemicals, abrasive materials, or excessive moisture.

4.3. Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to *Settings > System > System update*

4.4. Storage Management

The tablet comes with 256GB of internal storage, expandable up to 1TB with a TF card. To manage storage:

- Go to *Settings > Storage* to view storage usage and free up space.
- Regularly clear cached data from apps.
- Uninstall unused applications.
- Move large files (photos, videos) to the TF card or cloud storage.



Image: A graphic illustrating the tablet's storage capabilities: 36GB RAM, 256GB ROM, and 1TB expandable storage, emphasizing large capacity, high speed, and limitless space.



Image: The tablet screen showing various apps, with visual representations of 1TB and 256GB storage modules, indicating 36GB RAM, 256GB ROM, and 1TB expandability for multitasking and storage.

5. Troubleshooting

This section addresses common issues you might encounter with your DEZLTID tablet.

5.1. Tablet Not Turning On

- Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on.
- Press and hold the power button for at least 10-15 seconds to force a restart.

5.2. Wi-Fi Connectivity Issues

- Toggle Wi-Fi off and on in Quick Settings.
- Restart your Wi-Fi router.
- Forget the network and reconnect by re-entering the password.

5.3. Apps Crashing or Freezing

- Close the app and reopen it.
- Clear the app's cache: *Settings > Apps > [App Name] > Storage & cache > Clear cache*
- Ensure the app is updated to its latest version.
- Restart the tablet.

5.4. Slow Performance

- Close unused background applications.
- Free up storage space (refer to Section 4.4).
- Restart the tablet regularly.
- Check for system updates.



Image: A graphic showing CPU performance metrics (2.0 GHz Octa-Core, CPU Loss -25%, CPU performance +25%, Running Speed +30%) alongside a tablet displaying a high-action game, indicating smooth performance.

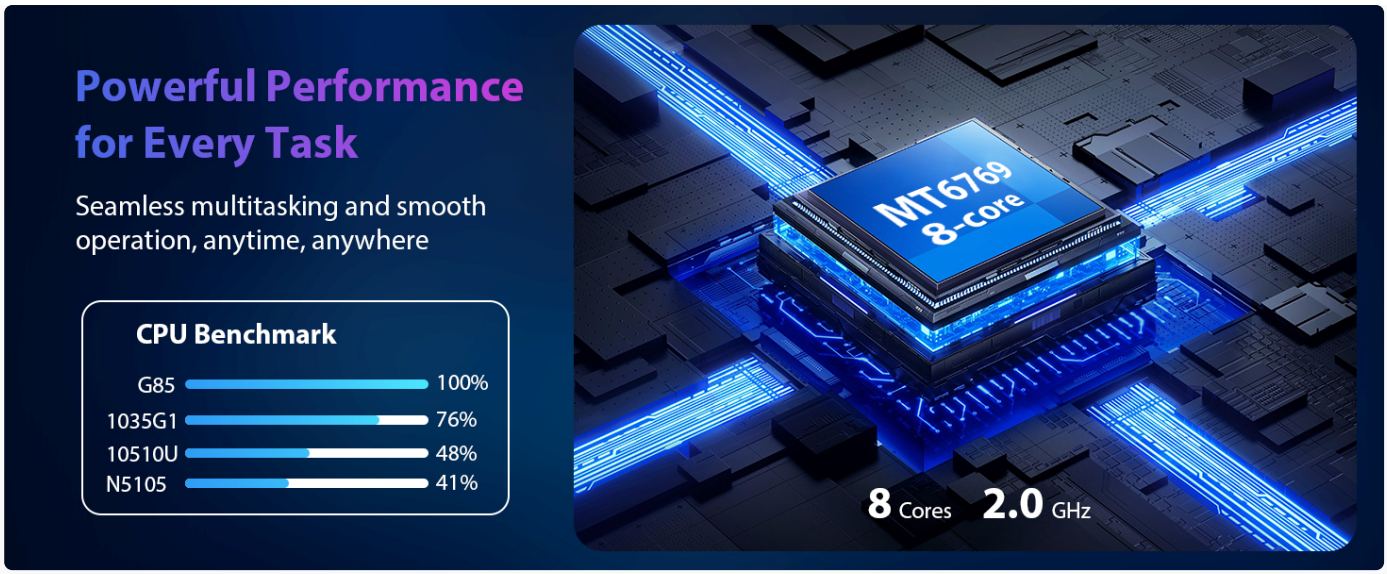


Image: A visual of the MT6769 8-core processor chip with CPU benchmark comparisons, emphasizing powerful performance for seamless multitasking.

5.5. Factory Reset

If issues persist, a factory reset can resolve many software-related problems. **Warning: This will erase all data on your tablet. Back up important data before proceeding.**

- Go to *Settings > System > Reset options > Erase all data (factory reset)*
- Follow the on-screen instructions to confirm the reset.

6. Specifications

Below are the detailed technical specifications for the DEZLTID 14-inch Android 14 Tablet (Model U310-EEA):

Feature	Specification
Brand	DEZLTID
Model Name	U310-EEA
Operating System	Android 14
Screen Size	14 Inches
Screen Resolution	2000x1200 FHD
Processor	8-Core 2.0GHz (ARM)
Graphics Coprocessor	Mali-G52
RAM	36GB (12GB+24GB)
Internal Storage (ROM)	256 GB
Expandable Storage	Up to 1TB (TF Card, not included)

Feature	Specification
Rear Camera	13MP
Front Camera	8MP
Battery Capacity	11580mAh (Lithium Polymer)
Average Battery Life	72 Hours
Wireless Type	802.11a/b/g/n/ac (5G/2.4G Dual WiFi)
Bluetooth	Bluetooth 6
Speakers	4 Stereo Dolby Chamber Box Speakers
Dimensions (LxWxH)	12.82 x 8.49 x 0.36 inches
Item Weight	2.14 pounds
Color	Black-14 inch-Android 14-M1401C

7. Warranty and Support

DEZLTID is committed to providing high-quality products and excellent customer service.

7.1. Warranty Information

Your DEZLTID tablet comes with a **2-year warranty**. Additionally, a **1-year worry-free refund** policy is available. Please retain your proof of purchase for warranty claims.

7.2. Technical Support

DEZLTID offers **lifetime technical support** for your tablet. A dedicated service team is available 24 hours a day to assist you with any problems or inquiries.



Image: A graphic detailing DEZLTID's high-quality service, including 24-hour service, 1-year worry-free refund, and lifetime warranty.

7.3. Contact Information

For technical support or warranty claims, please refer to the contact information provided in your product packaging or visit the official DEZLTID website.

© 2025 DEZLTID. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question